
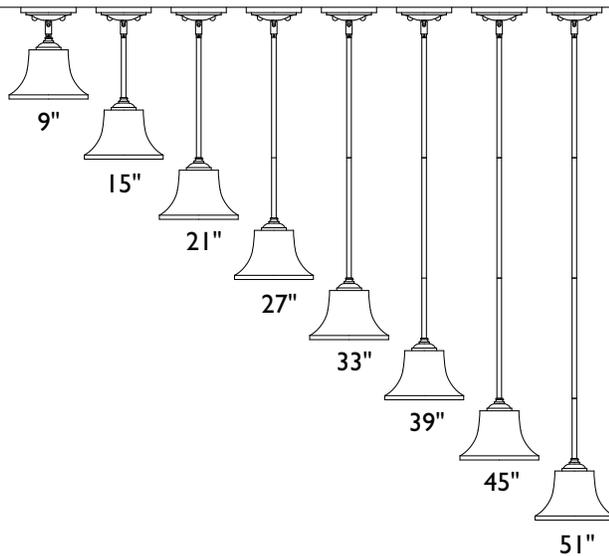


# Assembly Instructions For

# P1117 (E) 10/07

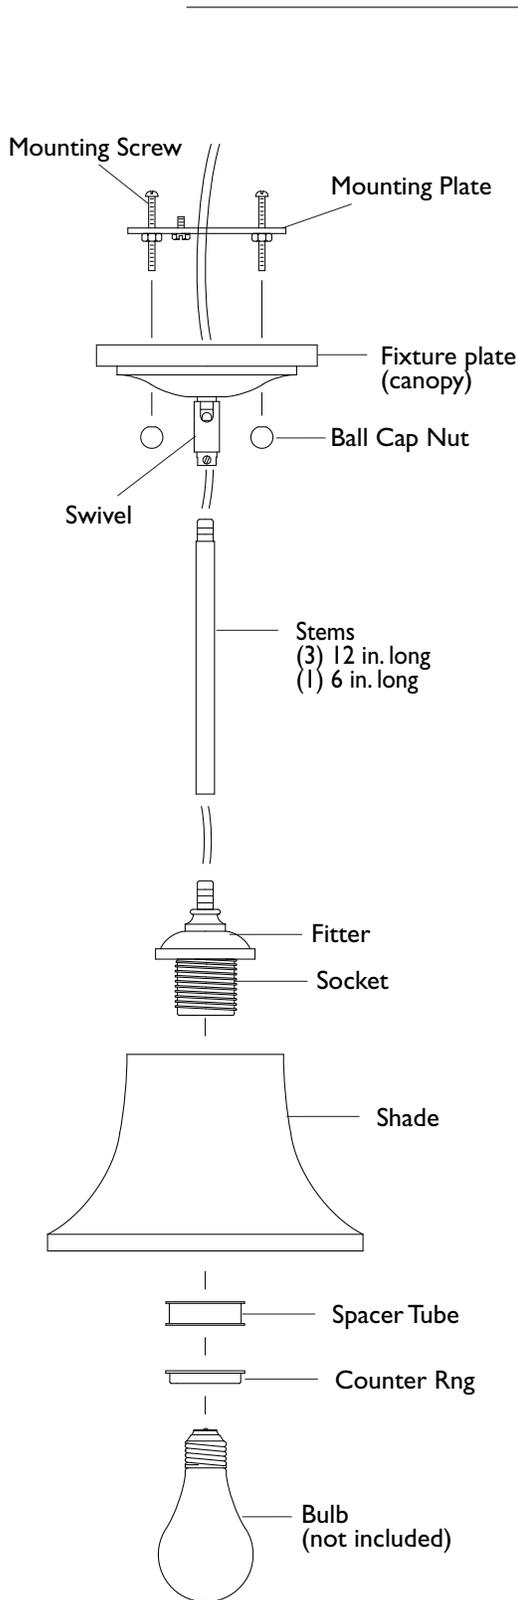

**IMPORTANT**  
**TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION**

Carefully unpack and identify all parts before assembly. Bulb not included.


**1. STEM HUNG INSTALLATION:**

A. Choose desired installation height from dimensions shown in above diagram. Thread fixture wire through each stem to be used. Please note correct position of stems from left diagram. Screw all stems together until secure. Then screw bottom end of stem assembly onto fitter.

**FLUSH MOUNT INSTALLATION:**

A. Remove stem attached above fitter. Make certain to keep threaded pipe protruding above fitter.  
 B. Thread fixture wires, which are located above fitter, through swivel.  
 C. Screw fitter into swivel.

2. Measure 6" of wire from end of canopy and cut off remaining wire. Split wires and strip off 3/4" of insulation from each end.
3. Follow enclosed "Multiple Standard Installation Instructions" for electrical and fixture installation onto ceiling outlet box.
4. Place shade over threaded socket then spacer tube and secure with counter ring.
5. Install light bulb (not included). See relamping label at socket area for type and maximum allowed wattage.

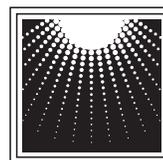

**MURRAY**  
**F E I S S**

Generation Brands™