


OXFORD *G* GARDEN®


WOVEN BAR STOOL  
ASSEMBLY  
INSTRUCTIONS

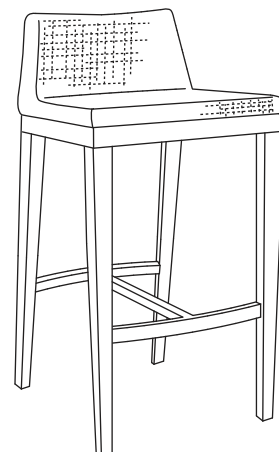


Thoughtful Design **MADE RIGHT**

**COMPONENTS**


① Seat Assembly  
Quantity: 1

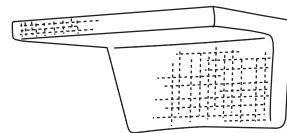

② Leg Assembly

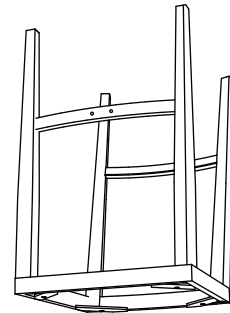

③ Stretcher



**HARDWARE**

Ⓐ Short Machine Bolt  
Quantity: 4




Ⓑ 18 mm Bolt  
Quantity: 4



Ⓒ Washer  
Quantity: 4



Ⓓ Allen Wrench  
Quantity: 1




15 Kingbrook Parkway, Suite 100  
Simpsonville, KY 40067  
p. 877.866.3331 f. 502.719.8888  
oxfordgarden.com

## INSTRUCTIONS

### STEP 1


Line up Bar Stool Seat Assembly ① onto Leg Assembly ② to the pre drilled holes on the seat assembly as shown.

Note: Curved part of leg assembly lines up with the back of the chair.

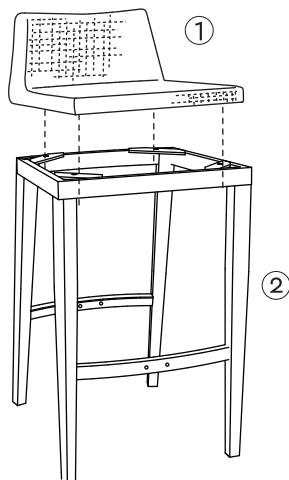


### STEP 2

Place washer C on bolt A. Next, hand tighten bolts into the pre drilled holes in the corner. Repeat for all corners.

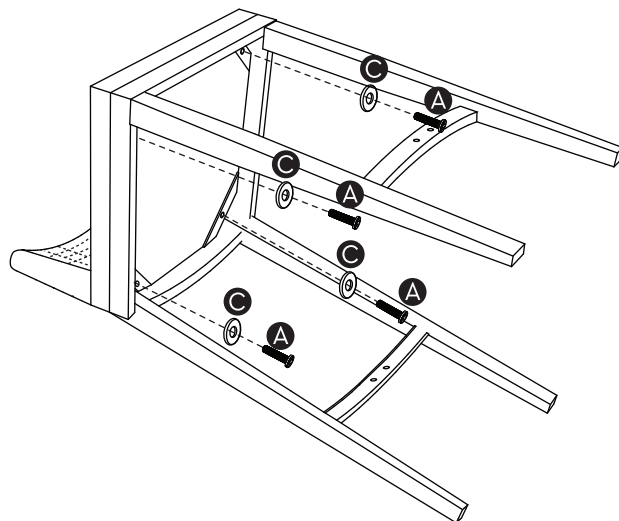


### STEP 3

Next, insert the Stretcher ③ as shown and secure using the 18 mm bolts B provided.

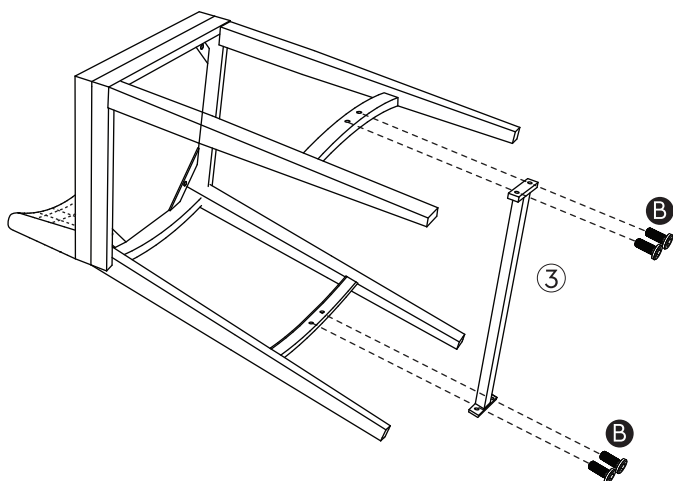


### Step 3 Detail

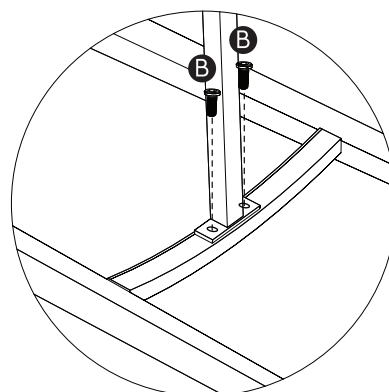

### STEP 4

Tighten all four bolts with the allen wrench provided

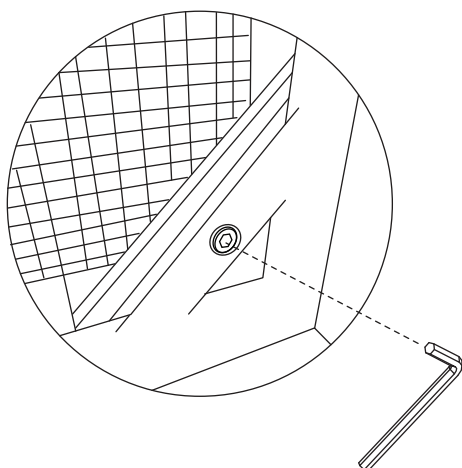

### STEP 5

Turn upright and enjoy

