

ELLIOT

INSTALLATION GUIDE FCB4130

CONTENTS:

Cabinet	FCB4130	PAGE 2
Тор	FCT2030	PAGE 4





TOOLS FOR ASSEMBLY

















CONTENTS

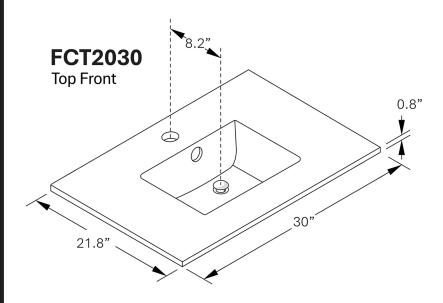

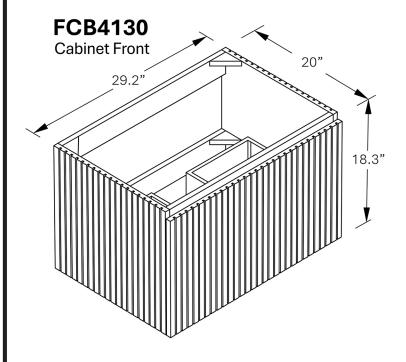

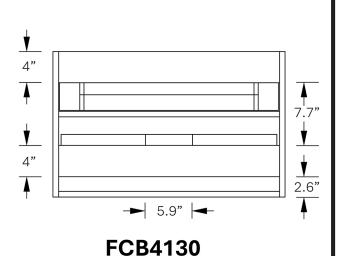

Cabinet Back

>All dimensions & specifications are approximate and subject to change without notice.



FCB4130

ELLIOT

INSTALLATION GUIDE


PAGE 2






CABINET INSTALLATION


Place cabinet **(D)** in designated location and mark the height position on the wall.

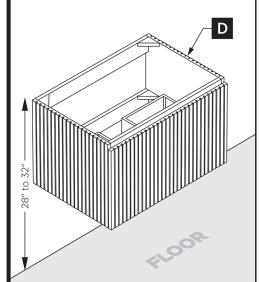

Verify that brackets will be secured to a stud or blocking board. Install blocking boards (2"x 6" recommended) between studs at marked location as required.

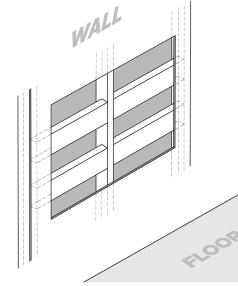



IMPORTANT: All brackets must be secured by screw to a stud or blocking boards. Consult an expert when adding backing boards and for proper screws/bolts to use when attaching to various constructions. Screws provided **do not** attach to a ll construction types. Anchors are not required if brackets are installed in stud or blocking board.

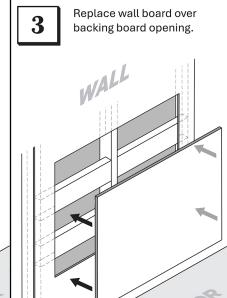

4 (E


Attach the wall brackets **(E)** to the wall with the screws **(F)**.



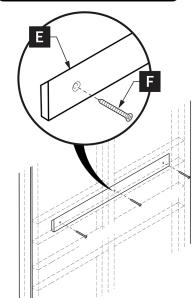

Apply a bead of silicone on the back of the cabinet and hang cabinet **(D)** on the brackets.

Add screws to lock into place. Slide up tight and add bottom support

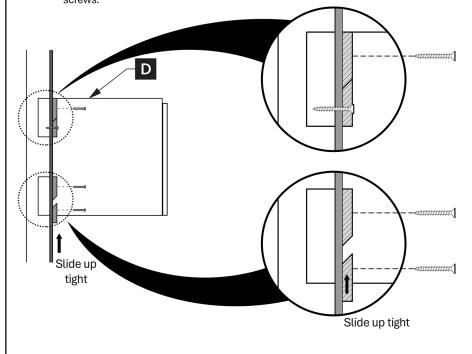

Ö

FCB4130

ELLIOT

INSTALLATION GUIDE

PAGE 3







CABINET INSTALLATION

Flip the counter top upside down and attach sink to it using provided brackets & screws.

Apply silicone sealant bead between sink top and bottom side of vanity top.

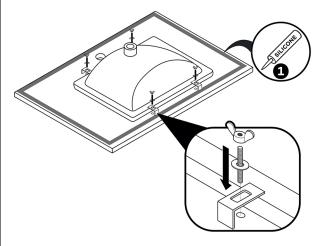


Put a bead of silicone on the top of the cabinet **(G)** then place a sink **(H)** on the top of it.
Apply silicone bead between vanity and vanity top.

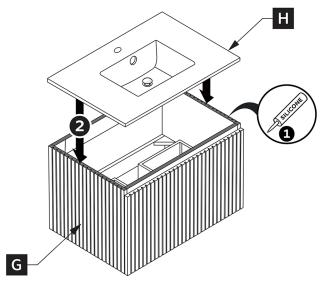


DRAWER REMOVAL & INSTALLATION



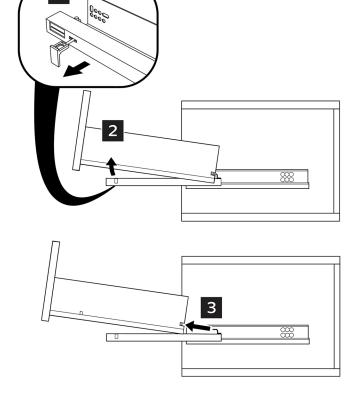

DRAWER INSTALLATION

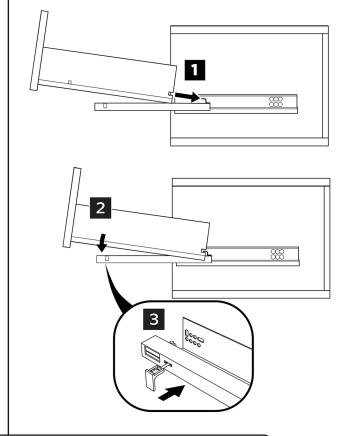



FCB4130

ELLIOT

INSTALLATION GUIDE

PAGE 4