
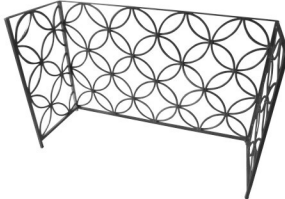





# ASSEMBLY INSTRUCTIONS

## ITEM# 67062

### PART LIST


			
GLASS FRAME	BODY PANEL	SCREW	WRENCH
1 PC.	1 PC.	5 PCS.	1 PC.

#### STEP 1

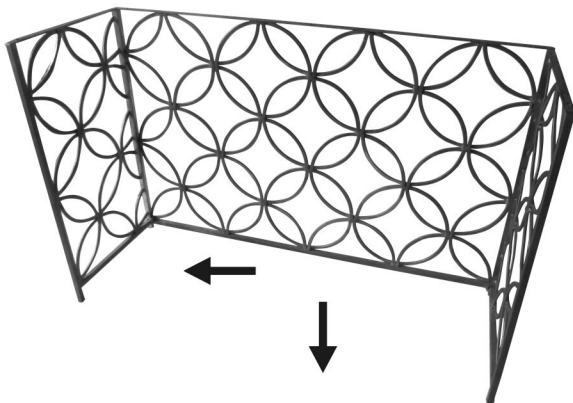


OPEN THE FOLDED BODY PANEL  
LIKE THIS

#### STEP 2

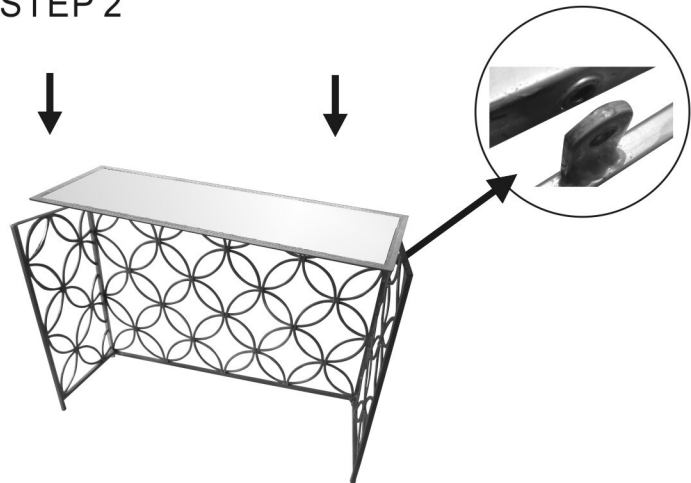

PUT THE GLASS FRAME ON TOP OF THE  
BODY PANEL CORRESPONDING  
THE HOLES TO THE HOLES

#### STEP 3

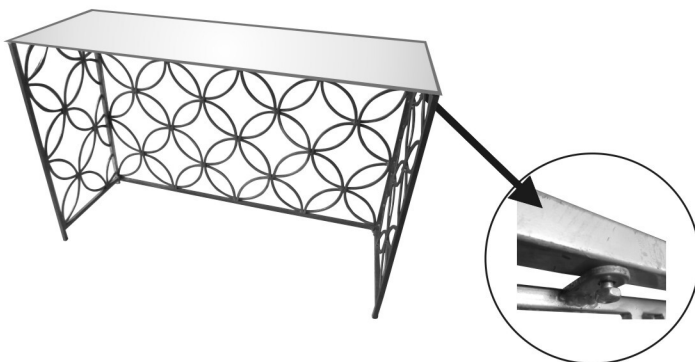

PUT THE SCREWS IN THE  
CORRESPONDING HOLES AND  
TIGHTEN IT WITH A WRENCH

#### STEP 4

