


70767 BRISTOL

ASSEMBLY INSTRUCTIONS

STEP 1

Install Backrest into the Seat by positioning the female metal receiver brackets over the male metal posts. Ensure that female metal receiver brackets on each side of the backrest are positioned over the seat metal posts. Push down the female brackets over male posts simultaneously until each side is locked into place an audible "click" is heard.

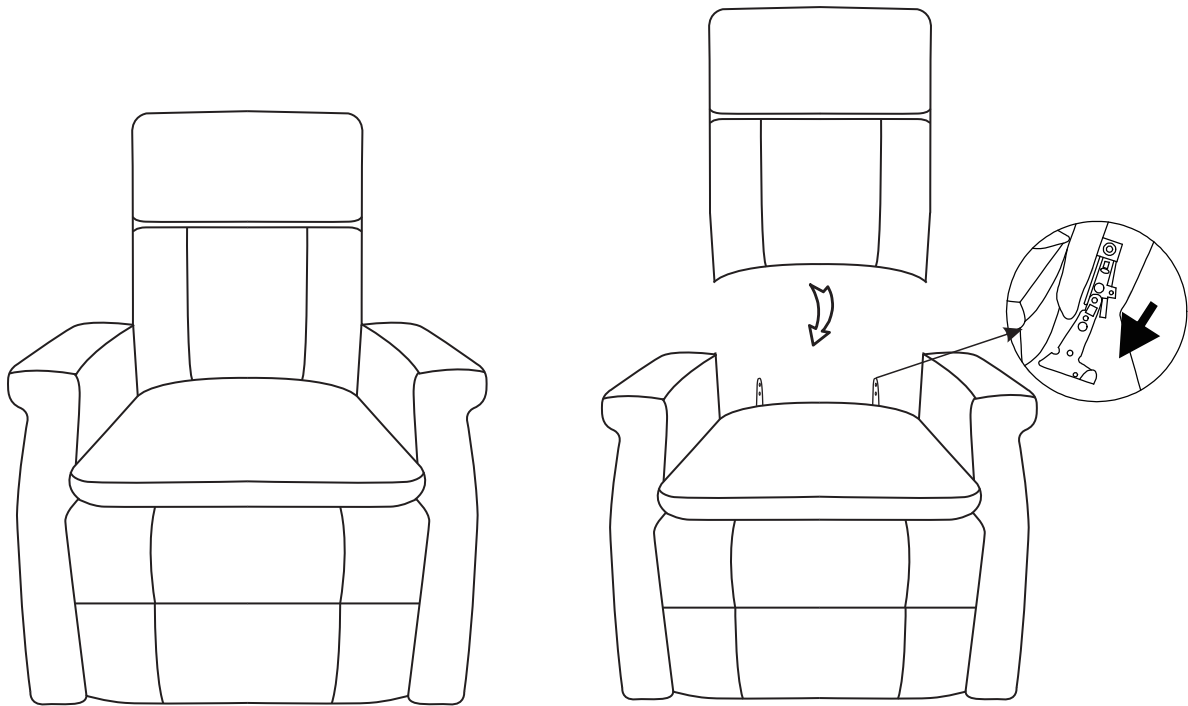

MANUAL CONTROLS

STEP 2

