



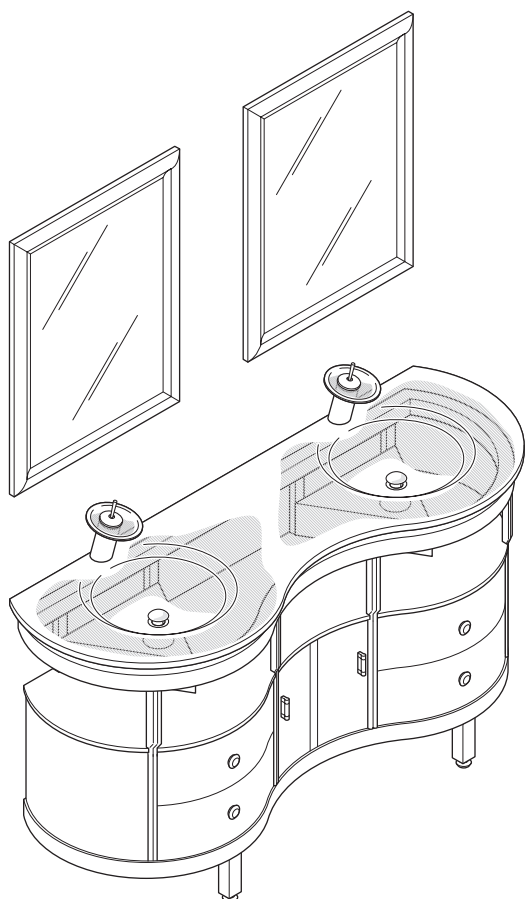



FVN3331
UNICO
INSTALLATION GUIDE

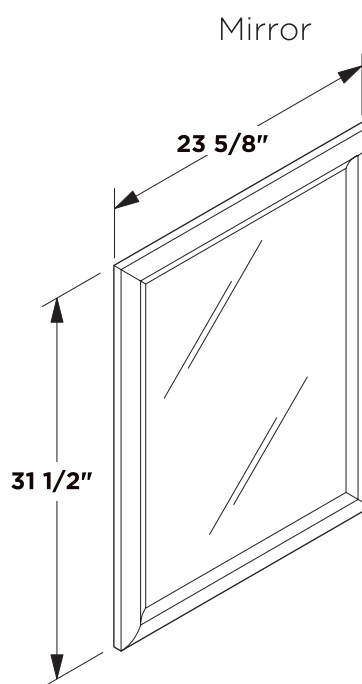

Vanity Front



Vanity Back

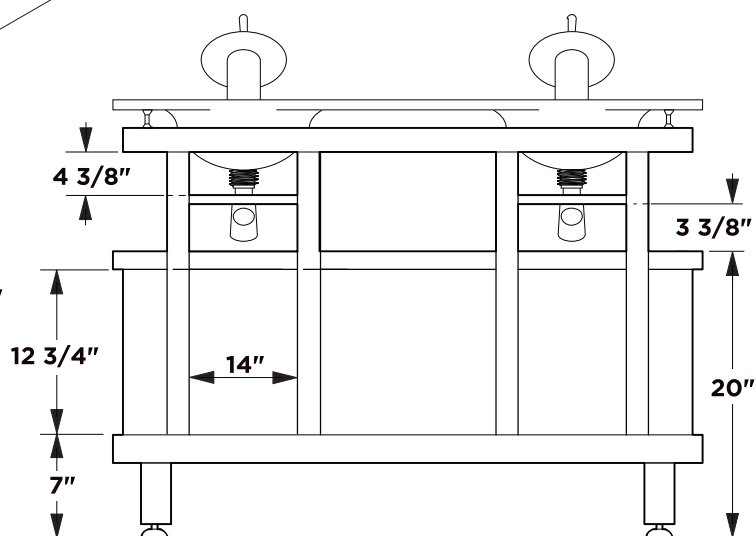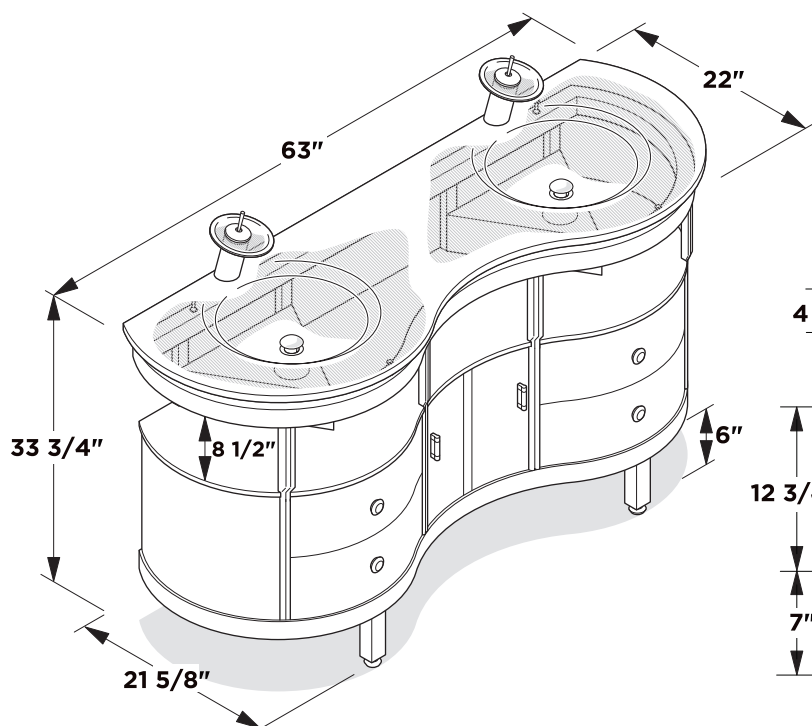


Note: All dimensions and specifications are approximate and subject to change without notice.

TOOLS FOR ASSEMBLY




PARTS

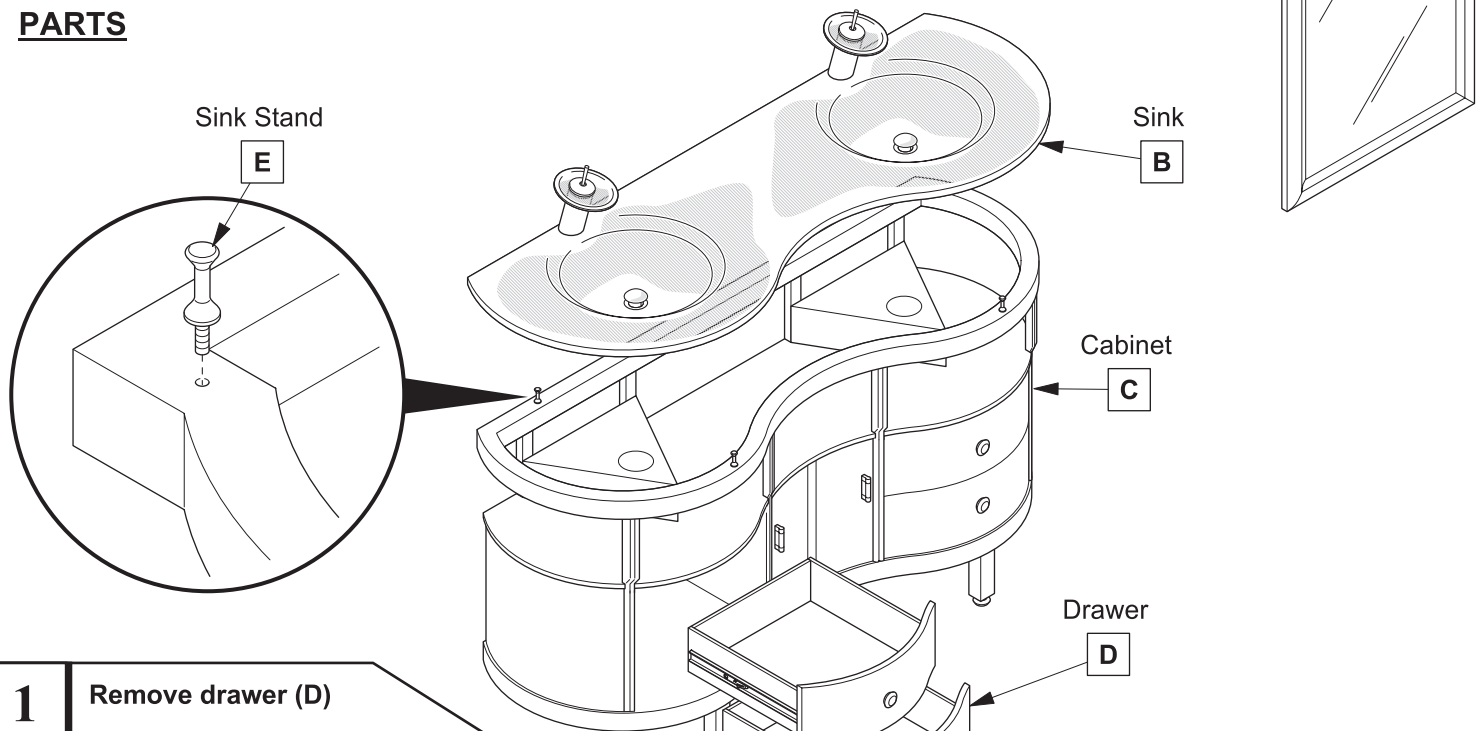


1

Remove drawer (D)

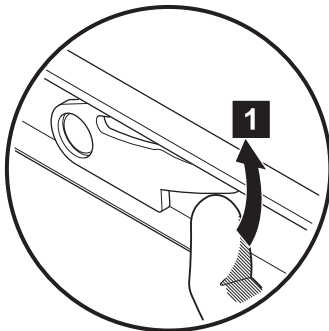

2

Position cabinet (C)

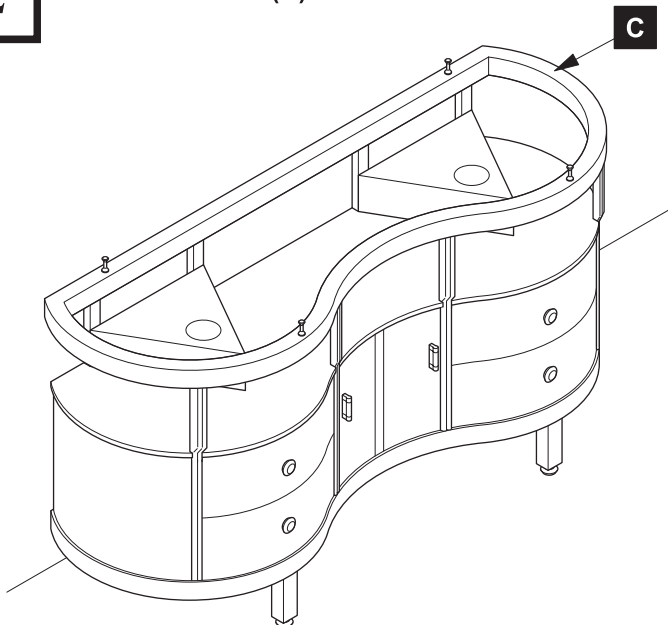


3

Apply silicone and install sink (B)


4

Install Mirror (A)

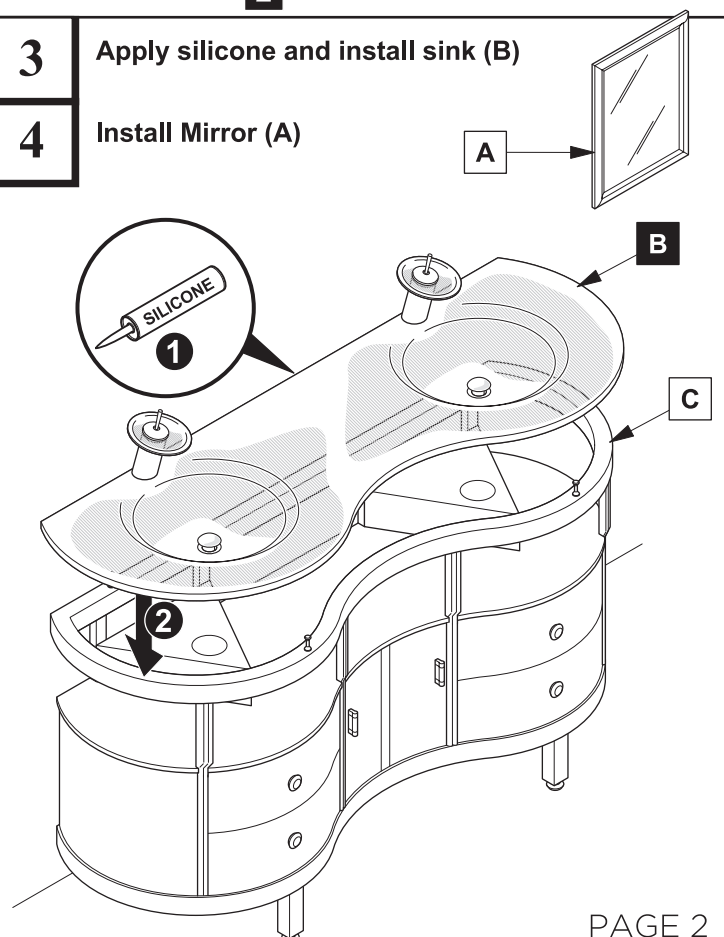


P-TRAP AND POP-UP INSTALLATION INSTRUCTIONS

Your item may appear slightly different from the illustration

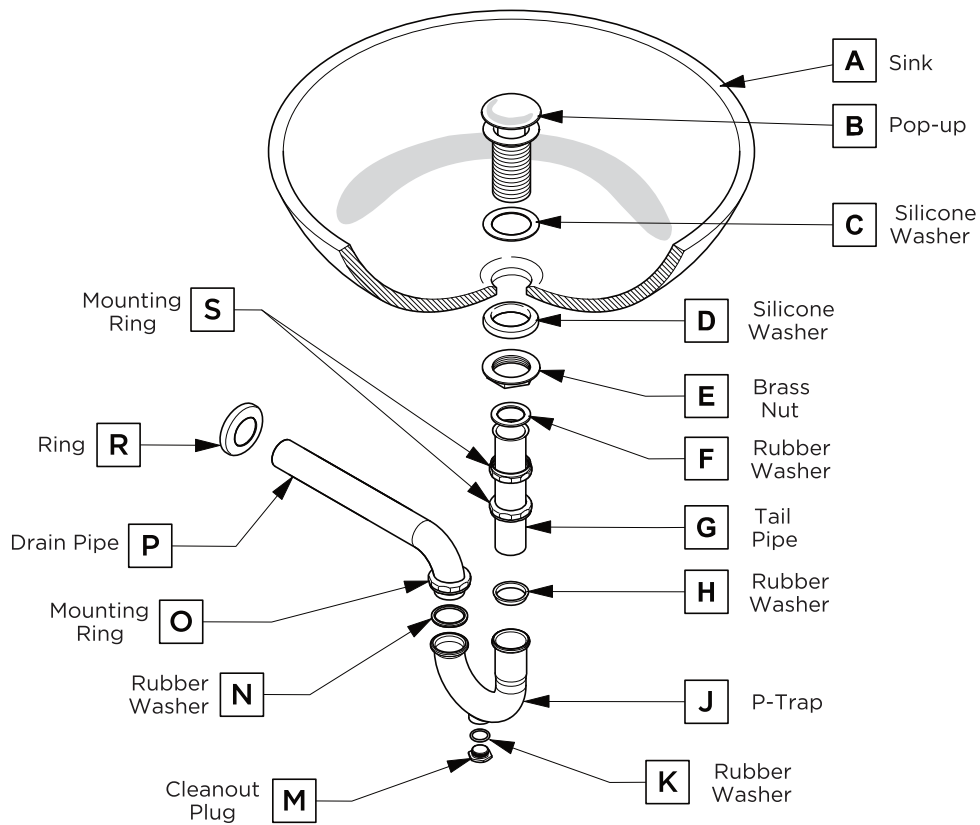


POP-UP INSTALLATION

FOR SINKS WITHOUT OVERFLOW

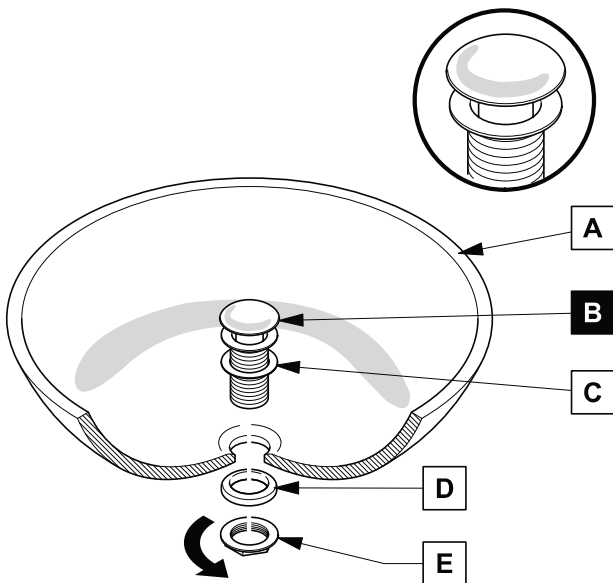

OR


FOR SINKS WITH OVERFLOW

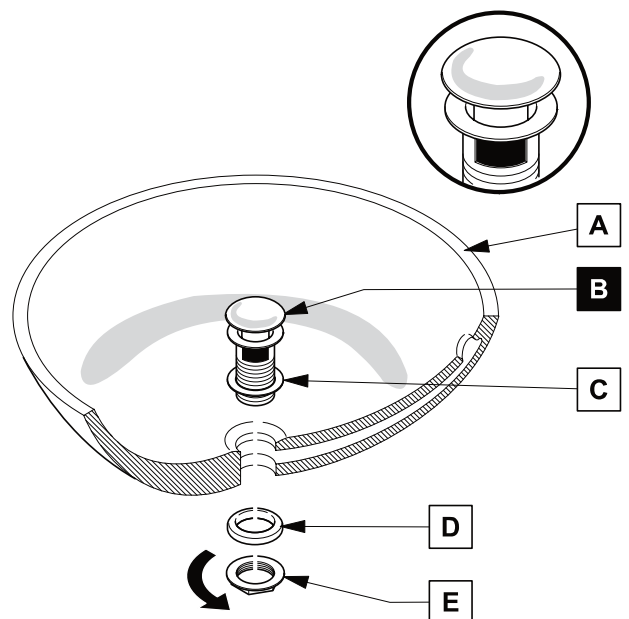

P-TRAP INSTALLATION

1

Install tail pipe (G)

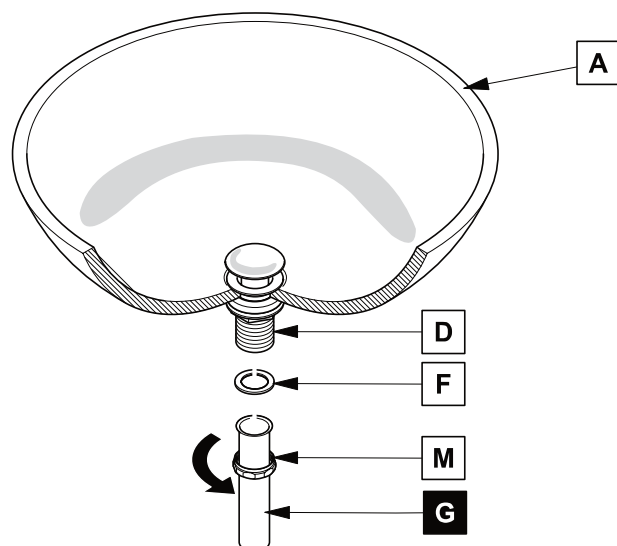

2

Install p-trap (J)

