

DESIGN TIPS

CEILING & WALL LIGHTING

Here is our downloadable guide to help you measure and proportion your light fixtures to your space. Feel free to contact our Customer Care Team (customer care@reginaandrew.com) for any additional questions that you may have (and don't forget to tag us at #reginaandrew to show us your hard work!).

Thank you for being a loyal customer of Regina Andrew!


REGINA ANDREW

DETROIT


All assets provided here are complimentary of the company to reference, not to copy.

©2018, Regina Andrew Design, Inc.


**REGINA ANDREW
CEILING FIXTURE TIPS**

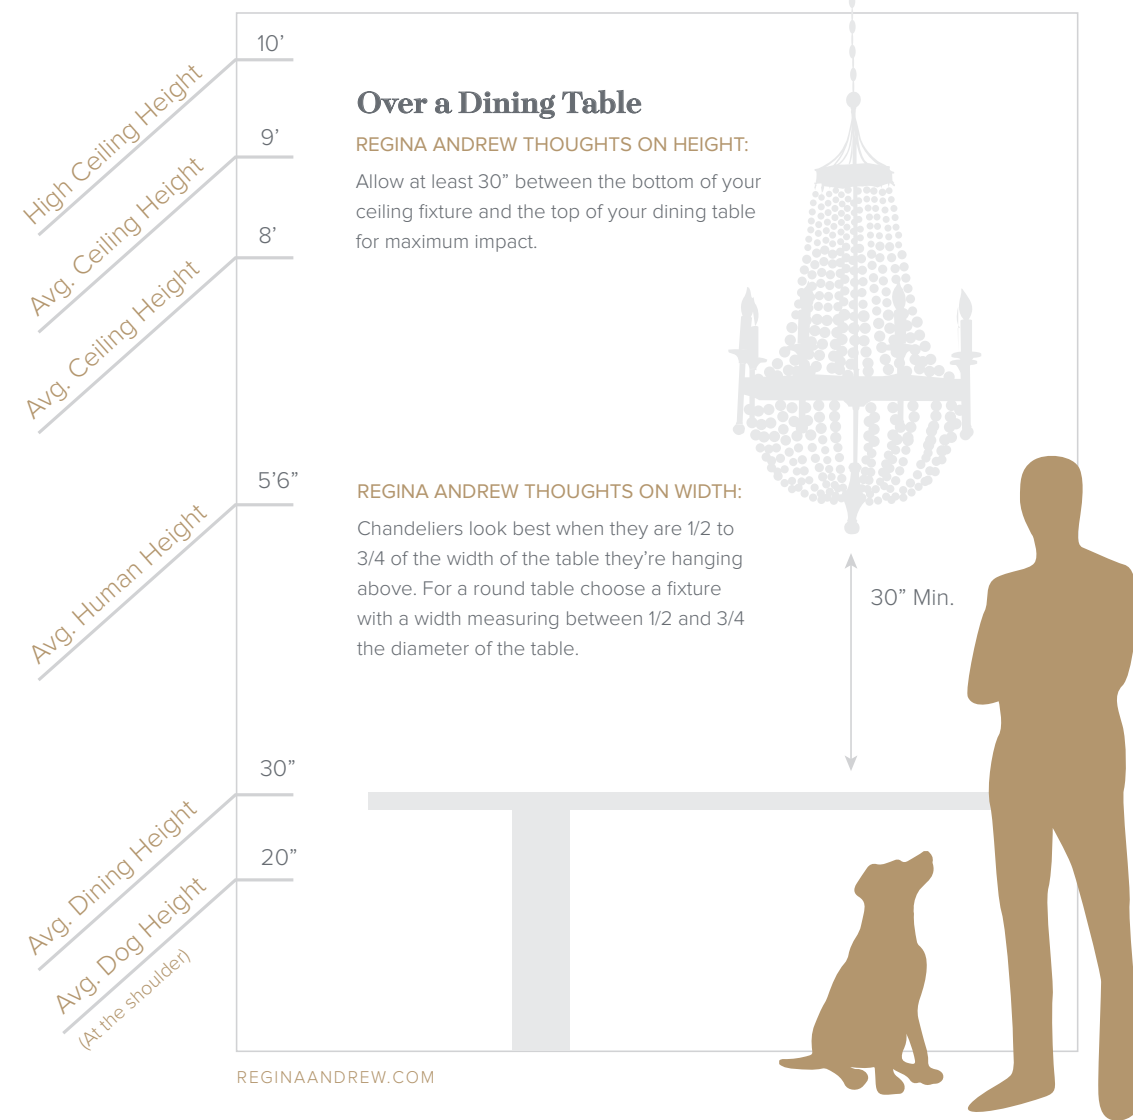


**REGINA ANDREW
CEILING FIXTURE TIPS**

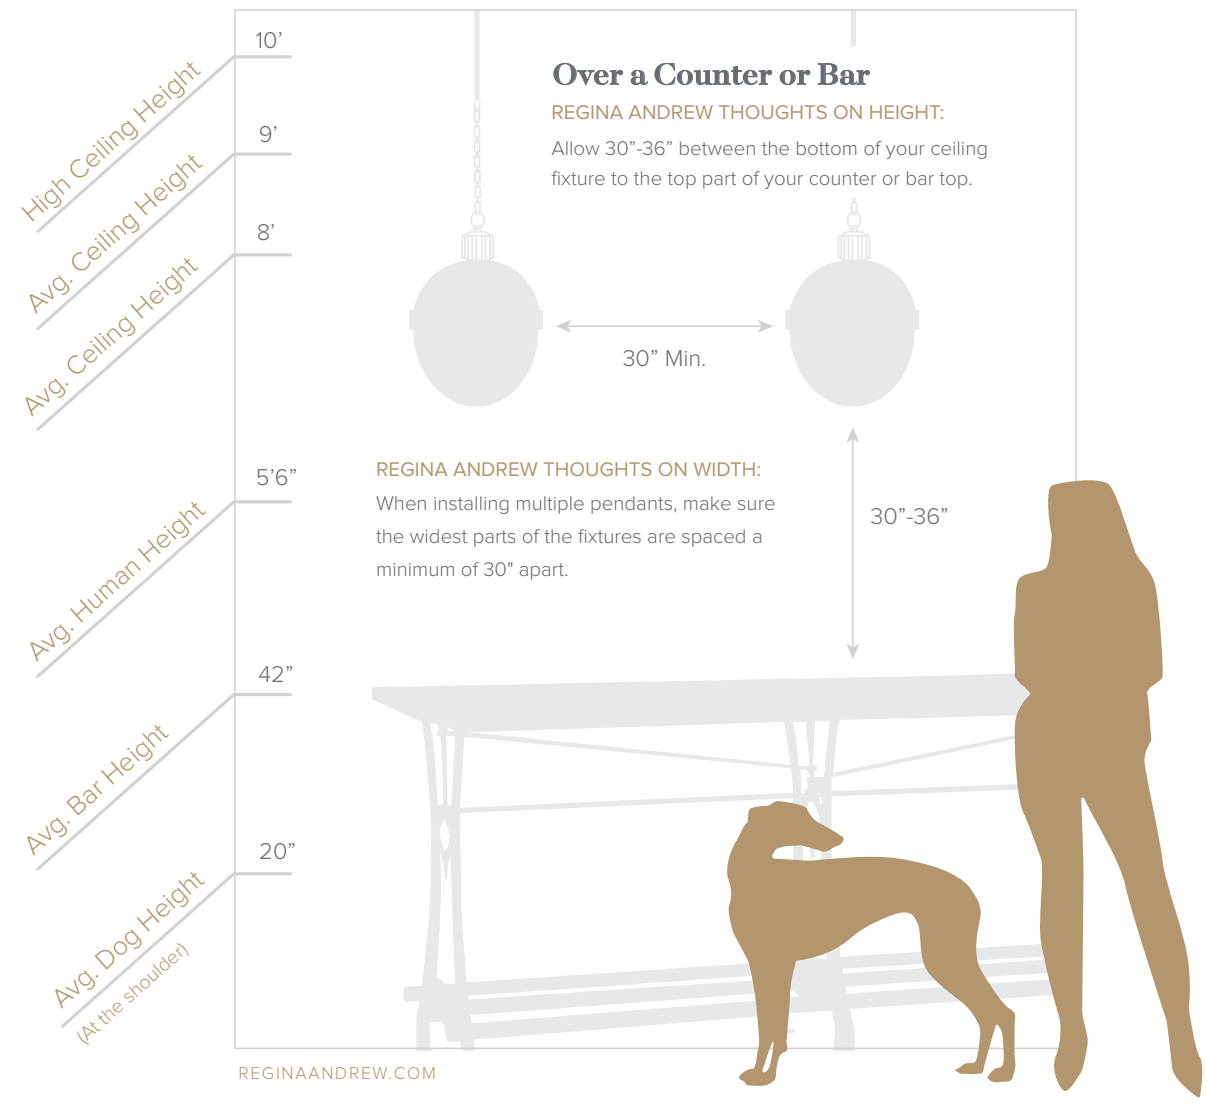

REGINA ANDREW
CEILING FIXTURE TIPS

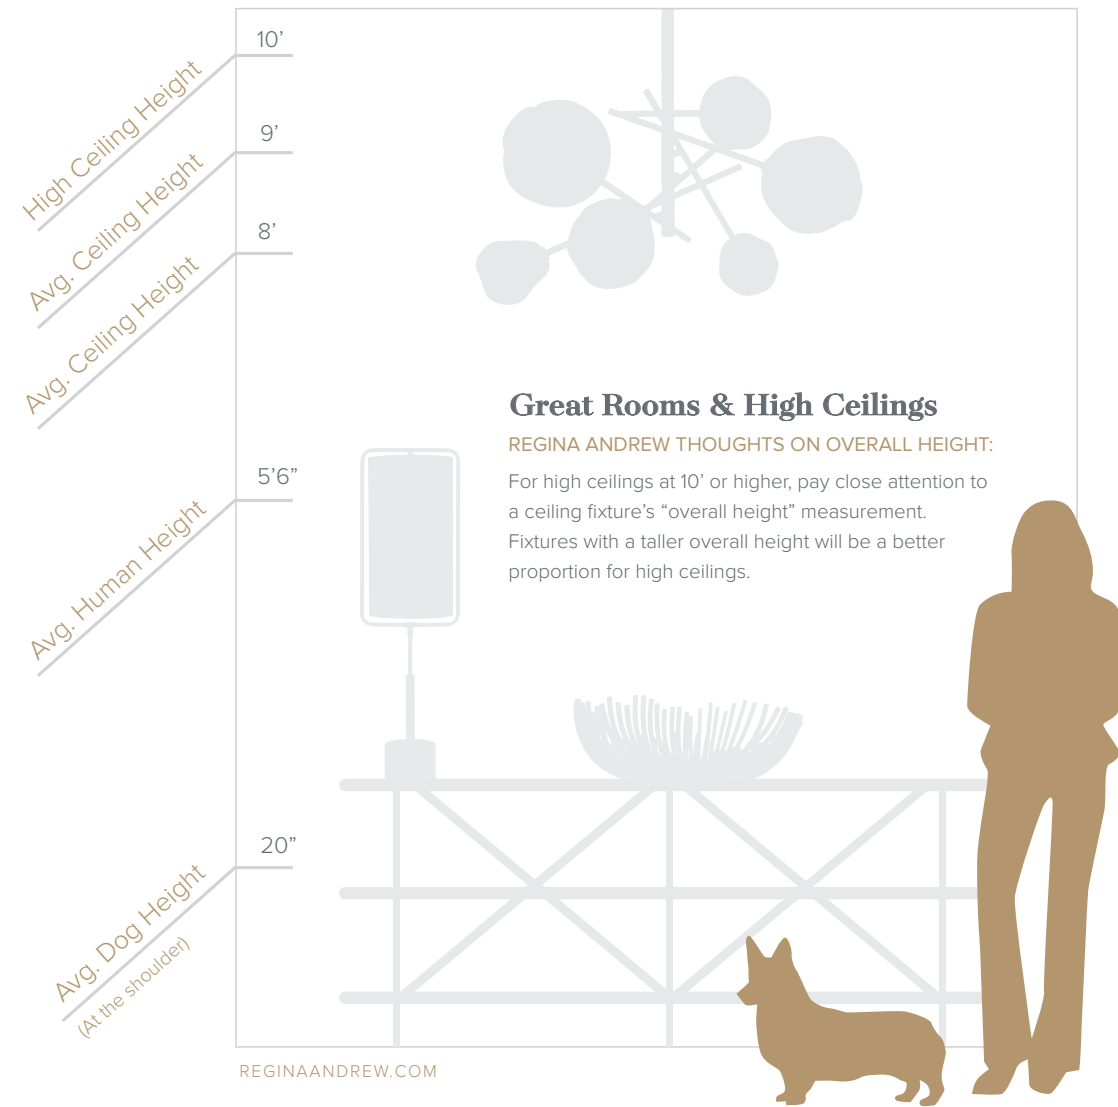


REGINA ANDREW
CEILING FIXTURE TIPS

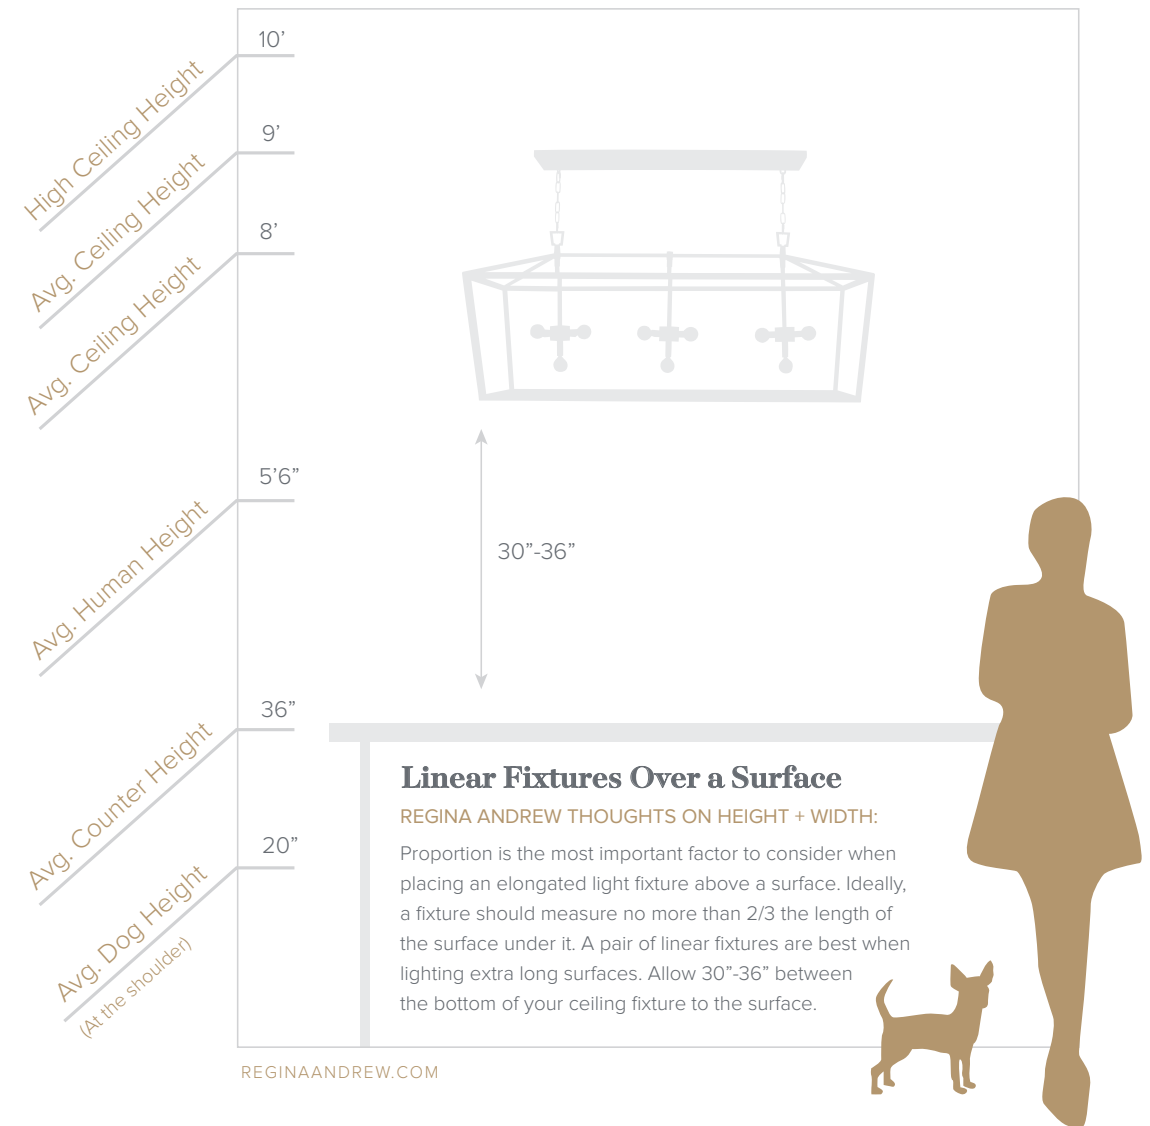

REGINA ANDREW
CEILING FIXTURE TIPS




REGINA ANDREW
WALL LIGHTING TIPS

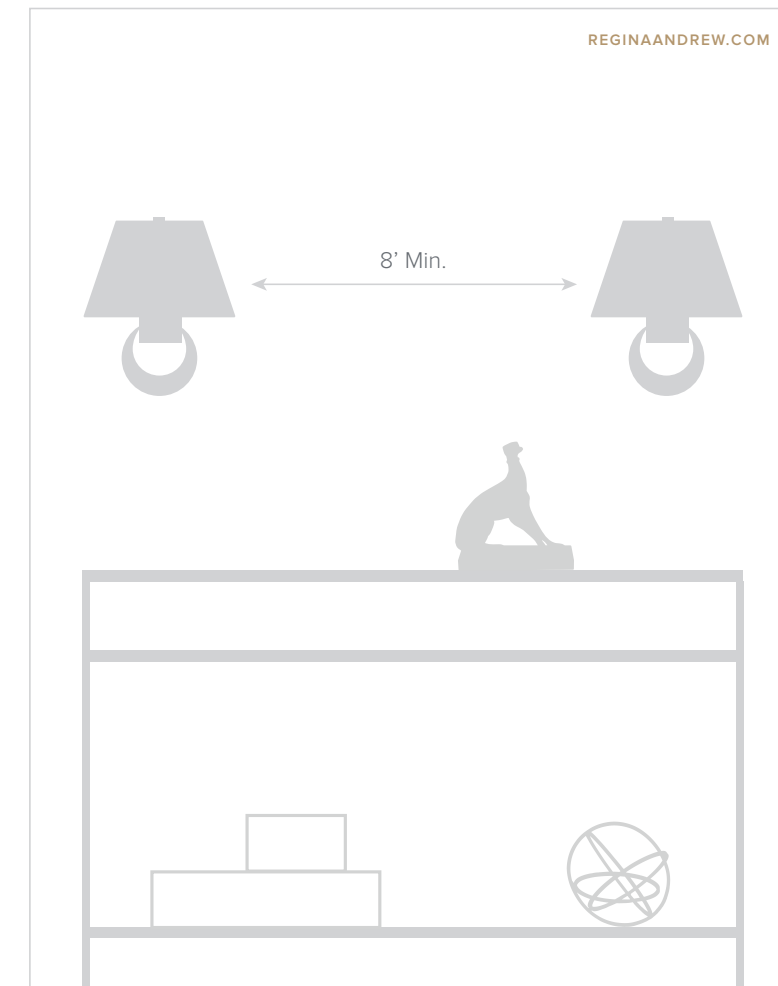

In Hallways or Living Spaces

REGINA ANDREW THOUGHTS ON WIDTH:
 Multiple hallway, living or dining room sconces should accent the space with an adequate amount of light based on a minimum of 8-10' between each fixture.

REGINA ANDREW
WALL LIGHTING TIPS

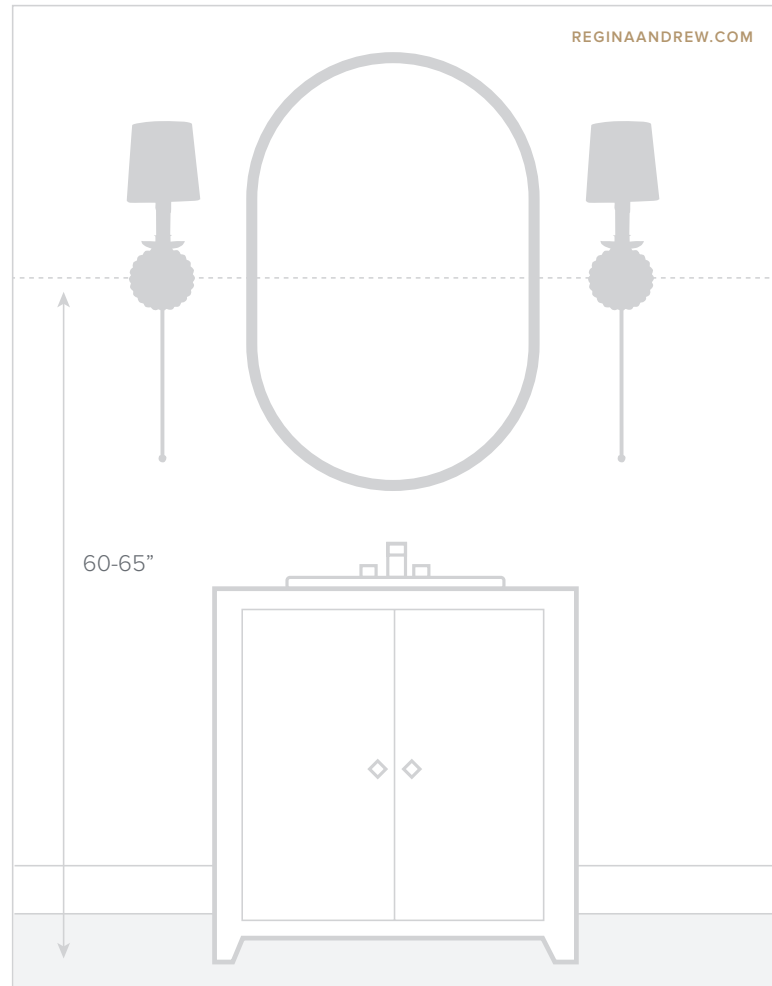


Beside A Bathroom Mirror

REGINA ANDREW THOUGHTS ON HEIGHT:

In order to have even illumination across a mirror from side placed sconces, space the fixtures 60-65" from the floor to the center of the backplates.

REGINA ANDREW
WALL LIGHTING TIPS

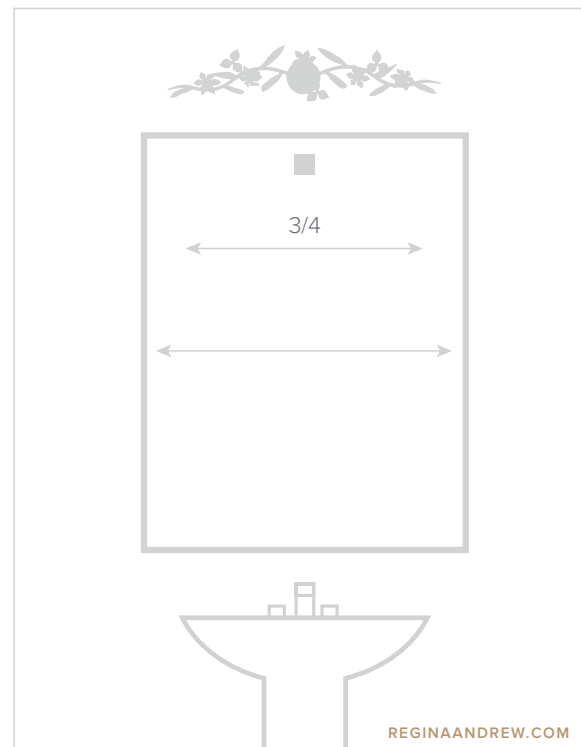


Above a Bathroom Mirror

REGINA ANDREW THOUGHTS ON WIDTH:

The ideal linear sconce for above a bathroom mirror should be 3/4 the width of the mirror without extending over each side.

REGINA ANDREW
WALL LIGHTING TIPS

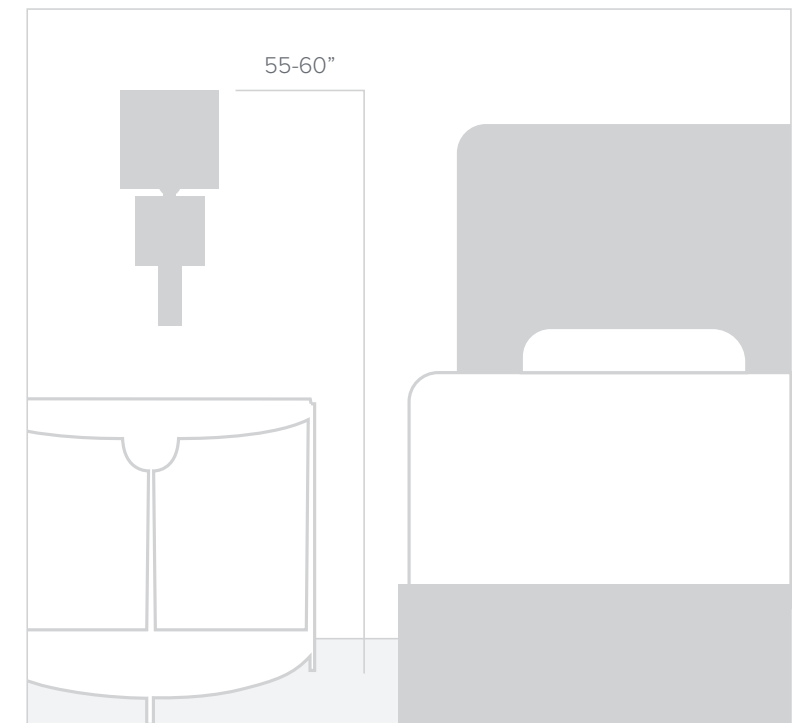

Bedside Fixtures

REGINA ANDREW THOUGHTS ON HEIGHT:

We suggest leaving about 55-60" of space between the floor and the top of the sconce. If your sconce has a switch, make sure that it is easily accessible from a sitting position on the bed.



REGINA ANDREW
DETROIT