



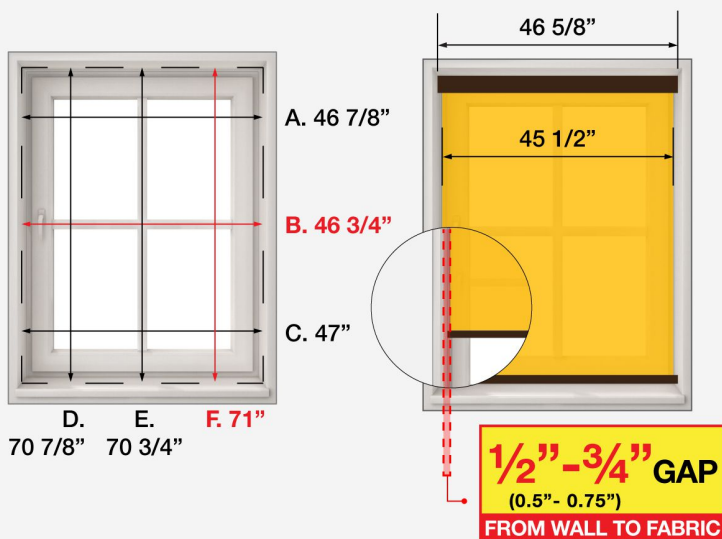

# WINDOW MEASUREMENT GUIDE - 1

## HOW TO MEASURE FOR WINDOW BLINDS AND SHADES

### INSIDE MOUNT

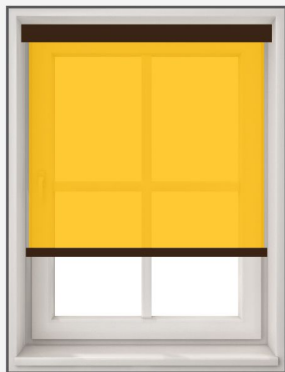

#### 1. WIDTH

MEASURE WINDOW WIDTH AT TOP(A), MIDDLE(B), AND BOTTOM(C).

**USE THE NARROWEST MEASUREMENT (B. 46 3/4").**

#### 2. HEIGHT

MEASURE WINDOW HEIGHT AT LEFT(D), MIDDLE(E), AND RIGHT SIDE(F).

**USE THE LONGEST MEASUREMENT (F. 71").**

#### 3. FABRIC COVERING

1" - 1 1/2" SHORTER THAN THE FRAME WIDTH.


#### FOR EXAMPLE,

IF YOU ORDER 46 3/4", THE BLIND WIDTH WILL BE 46 5/8" AND FABRIC COVERING WILL BE 45 1/4" - 45 3/4".

#### TIP!

1. WHEN YOU PLACE AN ORDER, MEASURE THE WINDOW ITSELF, NOT THE OLD BLINDS.
2. DO NOT ADJUST ANY BRACKETS OR ROLLER MECHANISM.

### OUTSIDE MOUNT

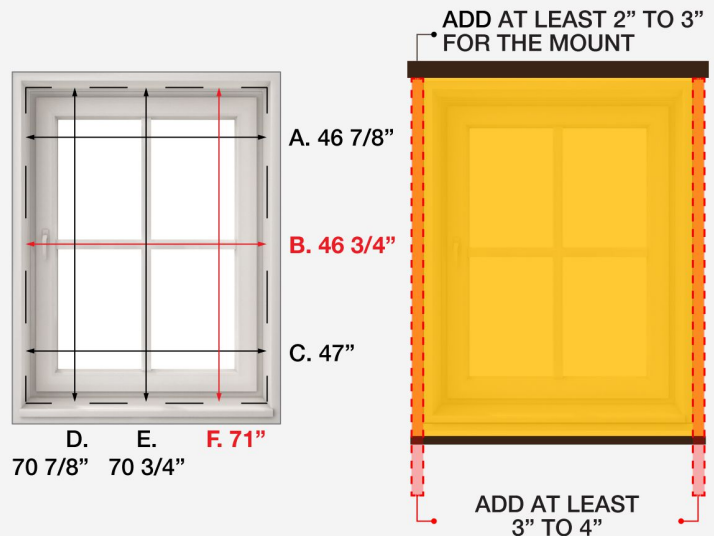

#### 1. WIDTH

MEASURE WINDOW WIDTH AT TOP(A), MIDDLE(B), AND BOTTOM(C).

**USE THE LONGEST MEASUREMENT (C. 47").**

ADD AT LEAST 3" TO 4" FOR OPTIMUM LIGHT CONTROL AND PRIVACY.

#### 2. HEIGHT

MEASURE WINDOW HEIGHT AT LEFT(D), MIDDLE(E), AND RIGHT SIDE(F).

**USE THE LONGEST MEASUREMENT (F. 71").**

ADD AT LEAST 2" TO 3" ABOVE THE TOP OF THE WINDOW FOR THE MOUNT.