








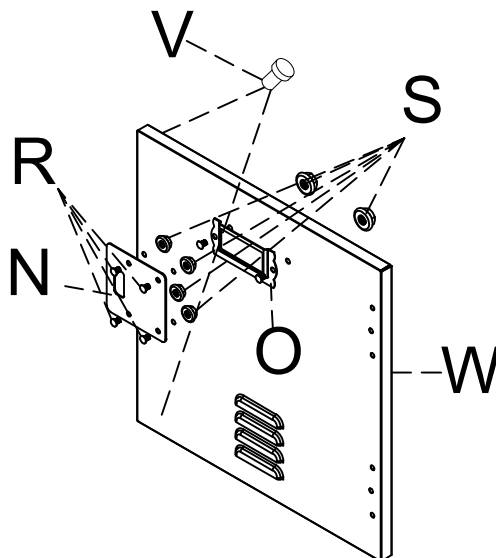
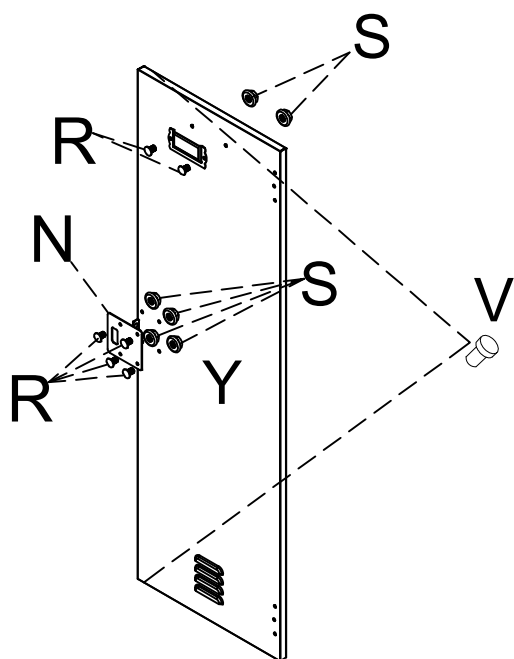



| | | | | | | | | |
|---|---|-----|---|---|-----|---|---|-----|
| L |  | x2 | M |  | x2 | N |  | x4 |
| O |  | x4 | P |  | x4 | Q |  | x14 |
| R |  | x78 | S |  | x78 | T |  | x8 |
| U |  | x4 | V |  | x8 | X |  | x1 |
| Z |  | x2 | a |  | x2 | | | |


step 1


Assemble the door panels and side panels before assembling the cabinet, But do not tighten the screw to install fittings T, need to be in step 9 after the installation, adjust the door plank and 1 W clearance to tighten, this will improve the effect after installation.




Don't install here.
(Install here after step 2) Please install step 2 first and then install here

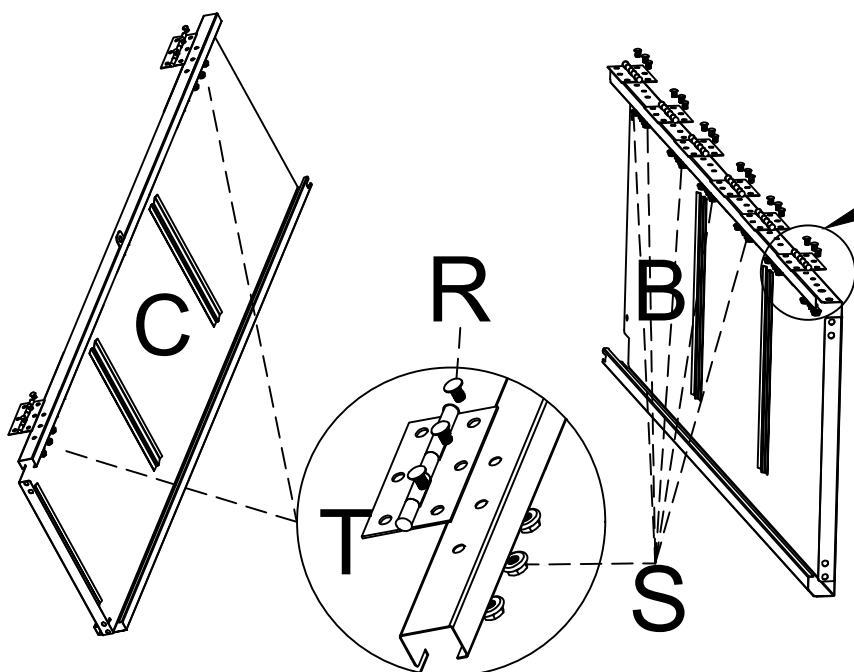


R  x45

T  x8


O  x4

S  x45


N  x4


V  x8


step 2

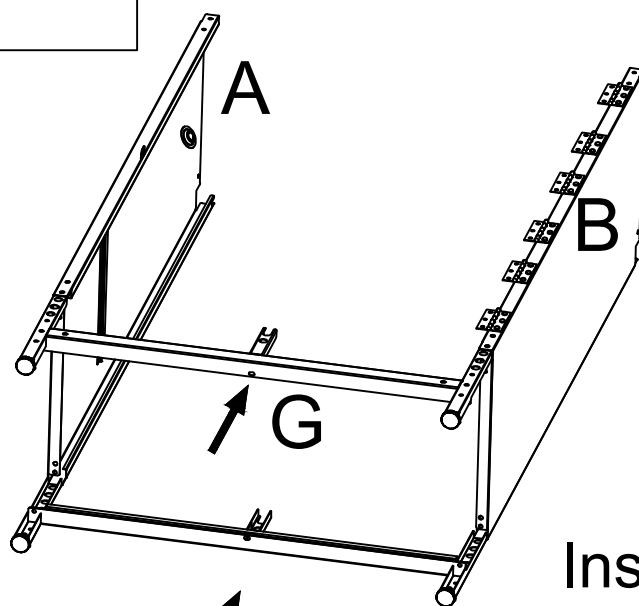

Install part G before installing part T

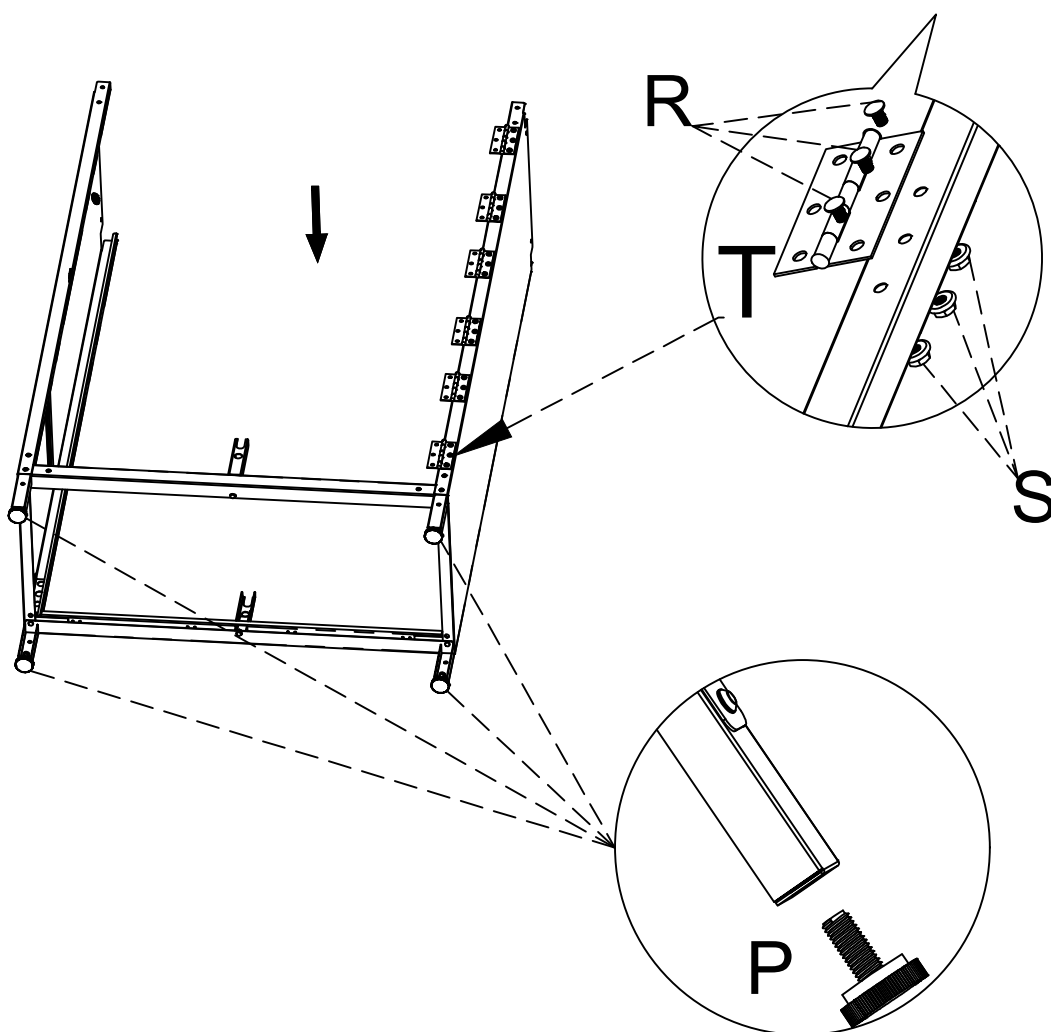


P  x4


R  x3

S  x3

step 3

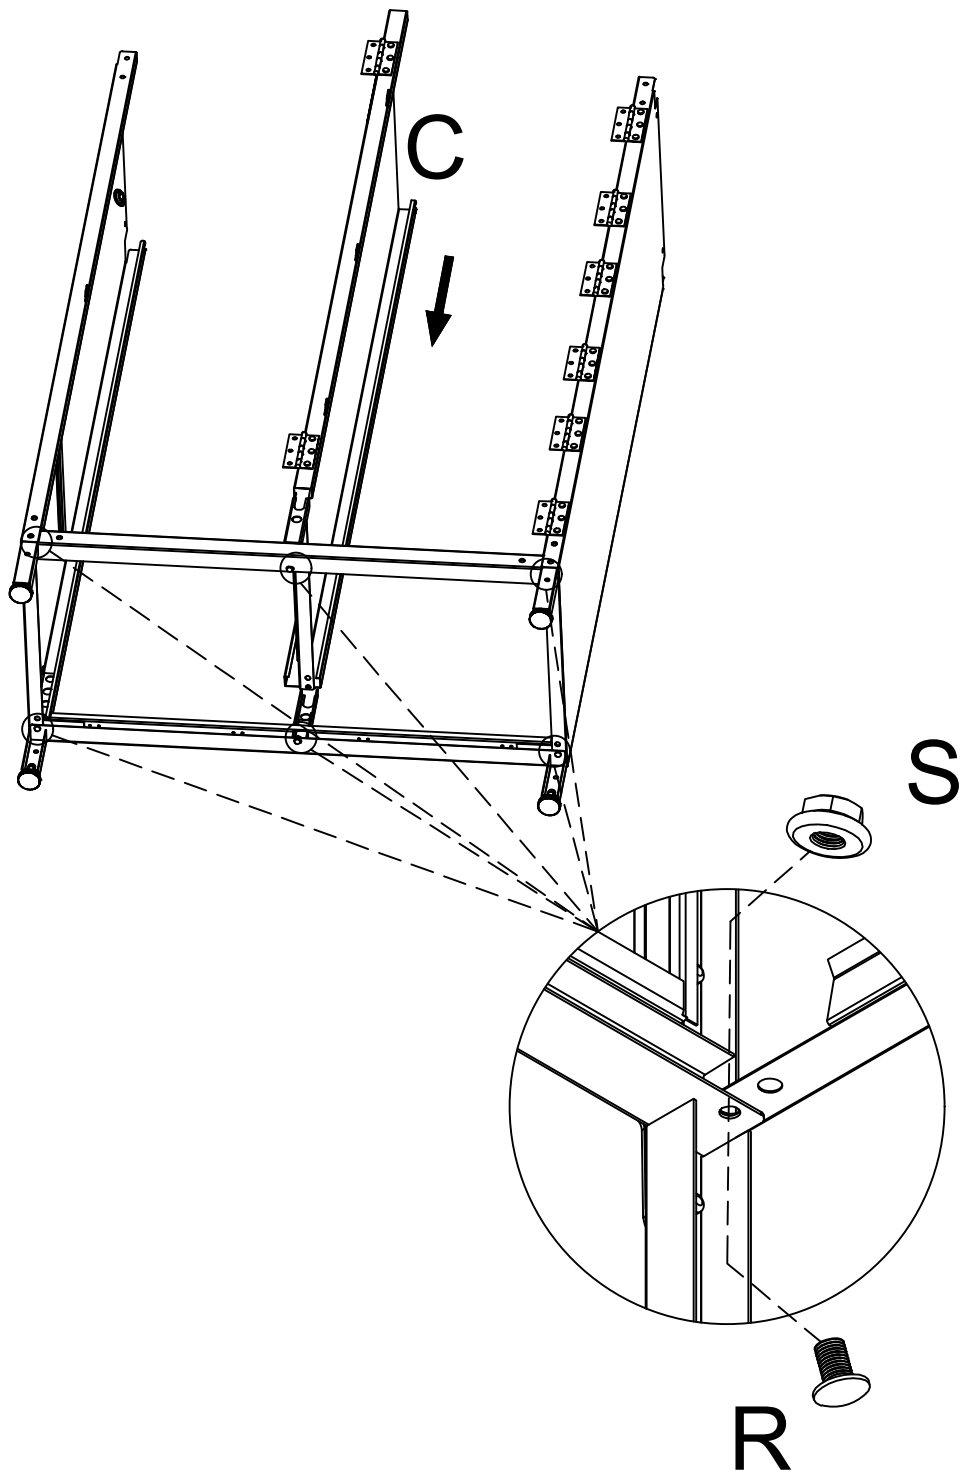

R







x6

S



x6


step 4

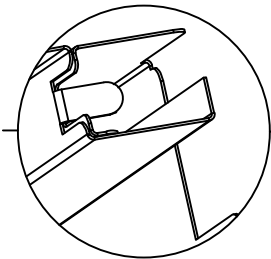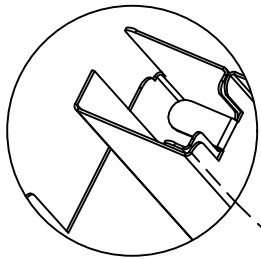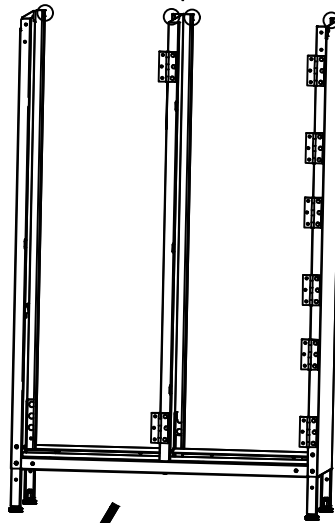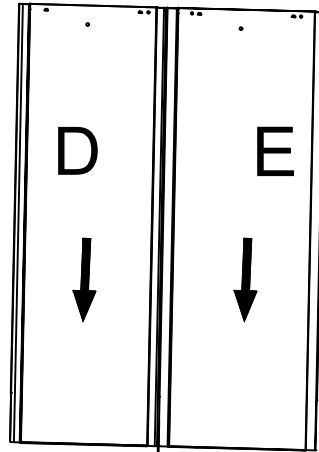

U-2



U-2

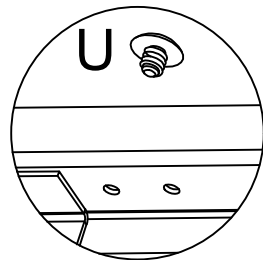


U





x4

step 5

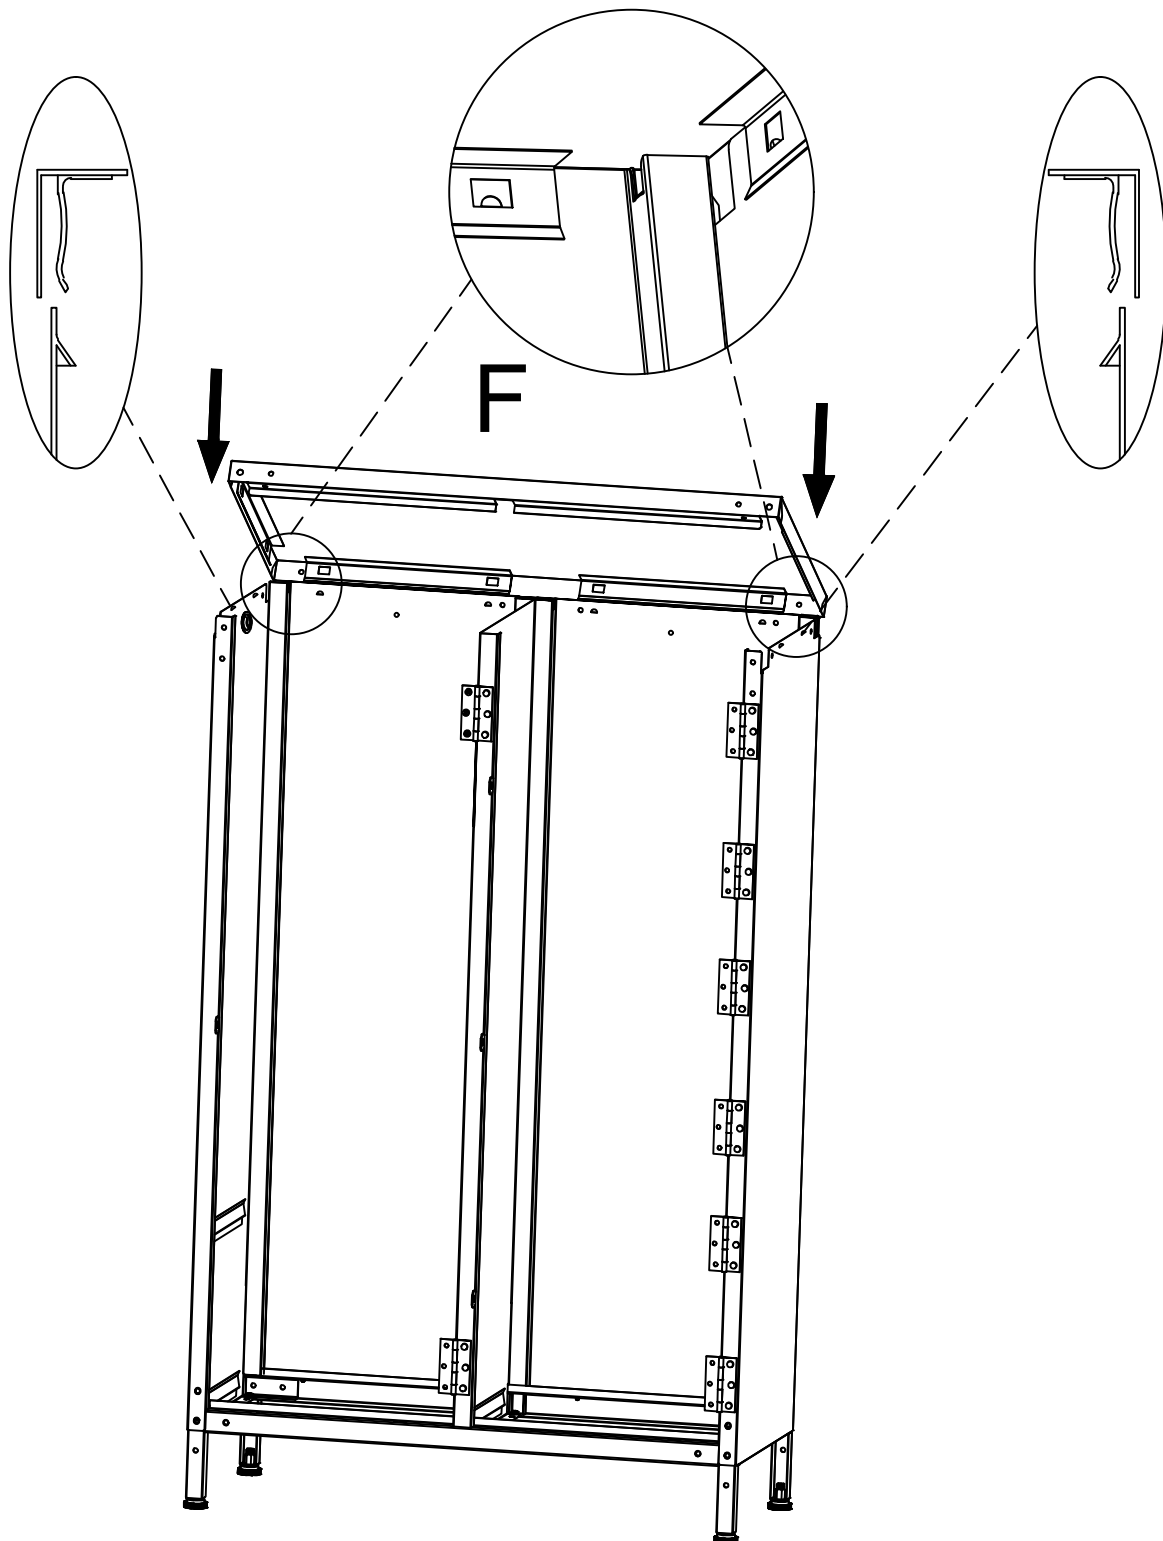

step 6

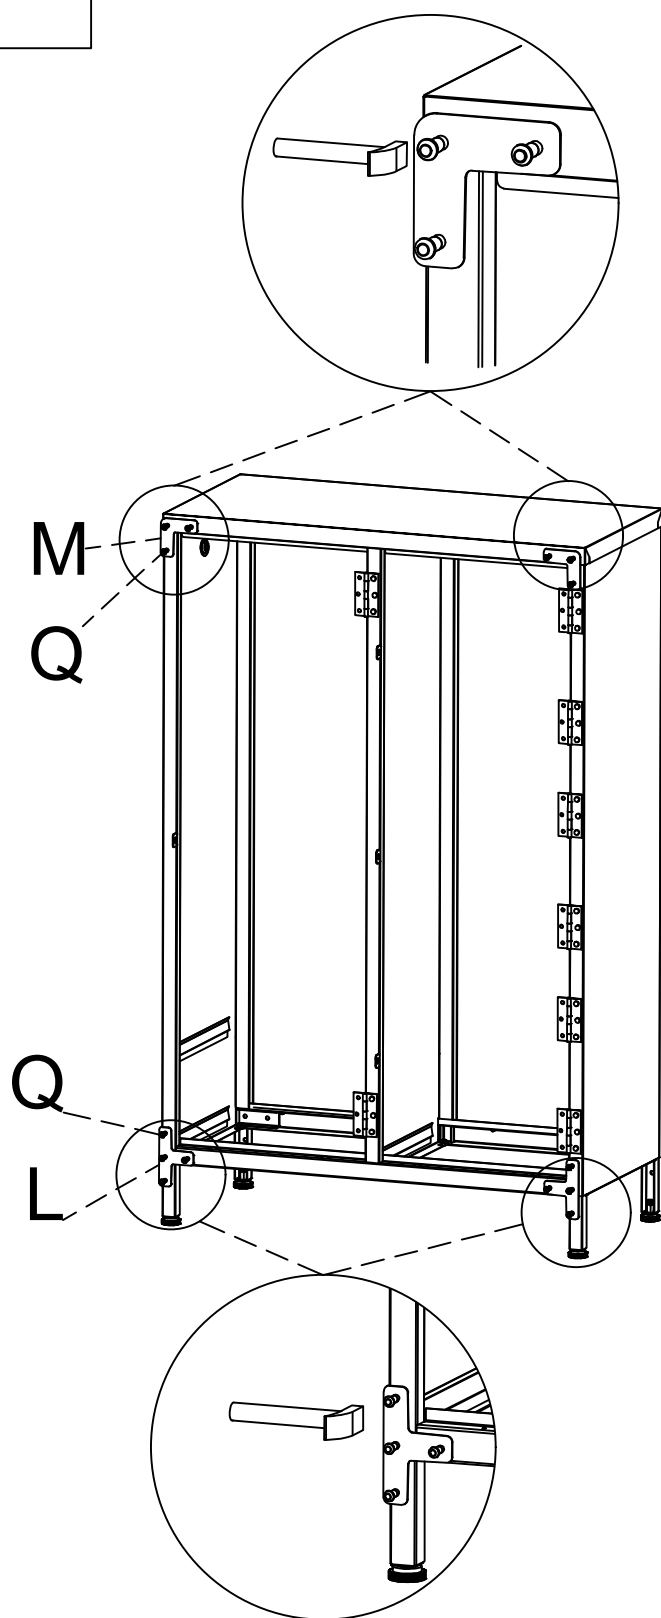


M  x2


L  x2

Q  x14

step 7

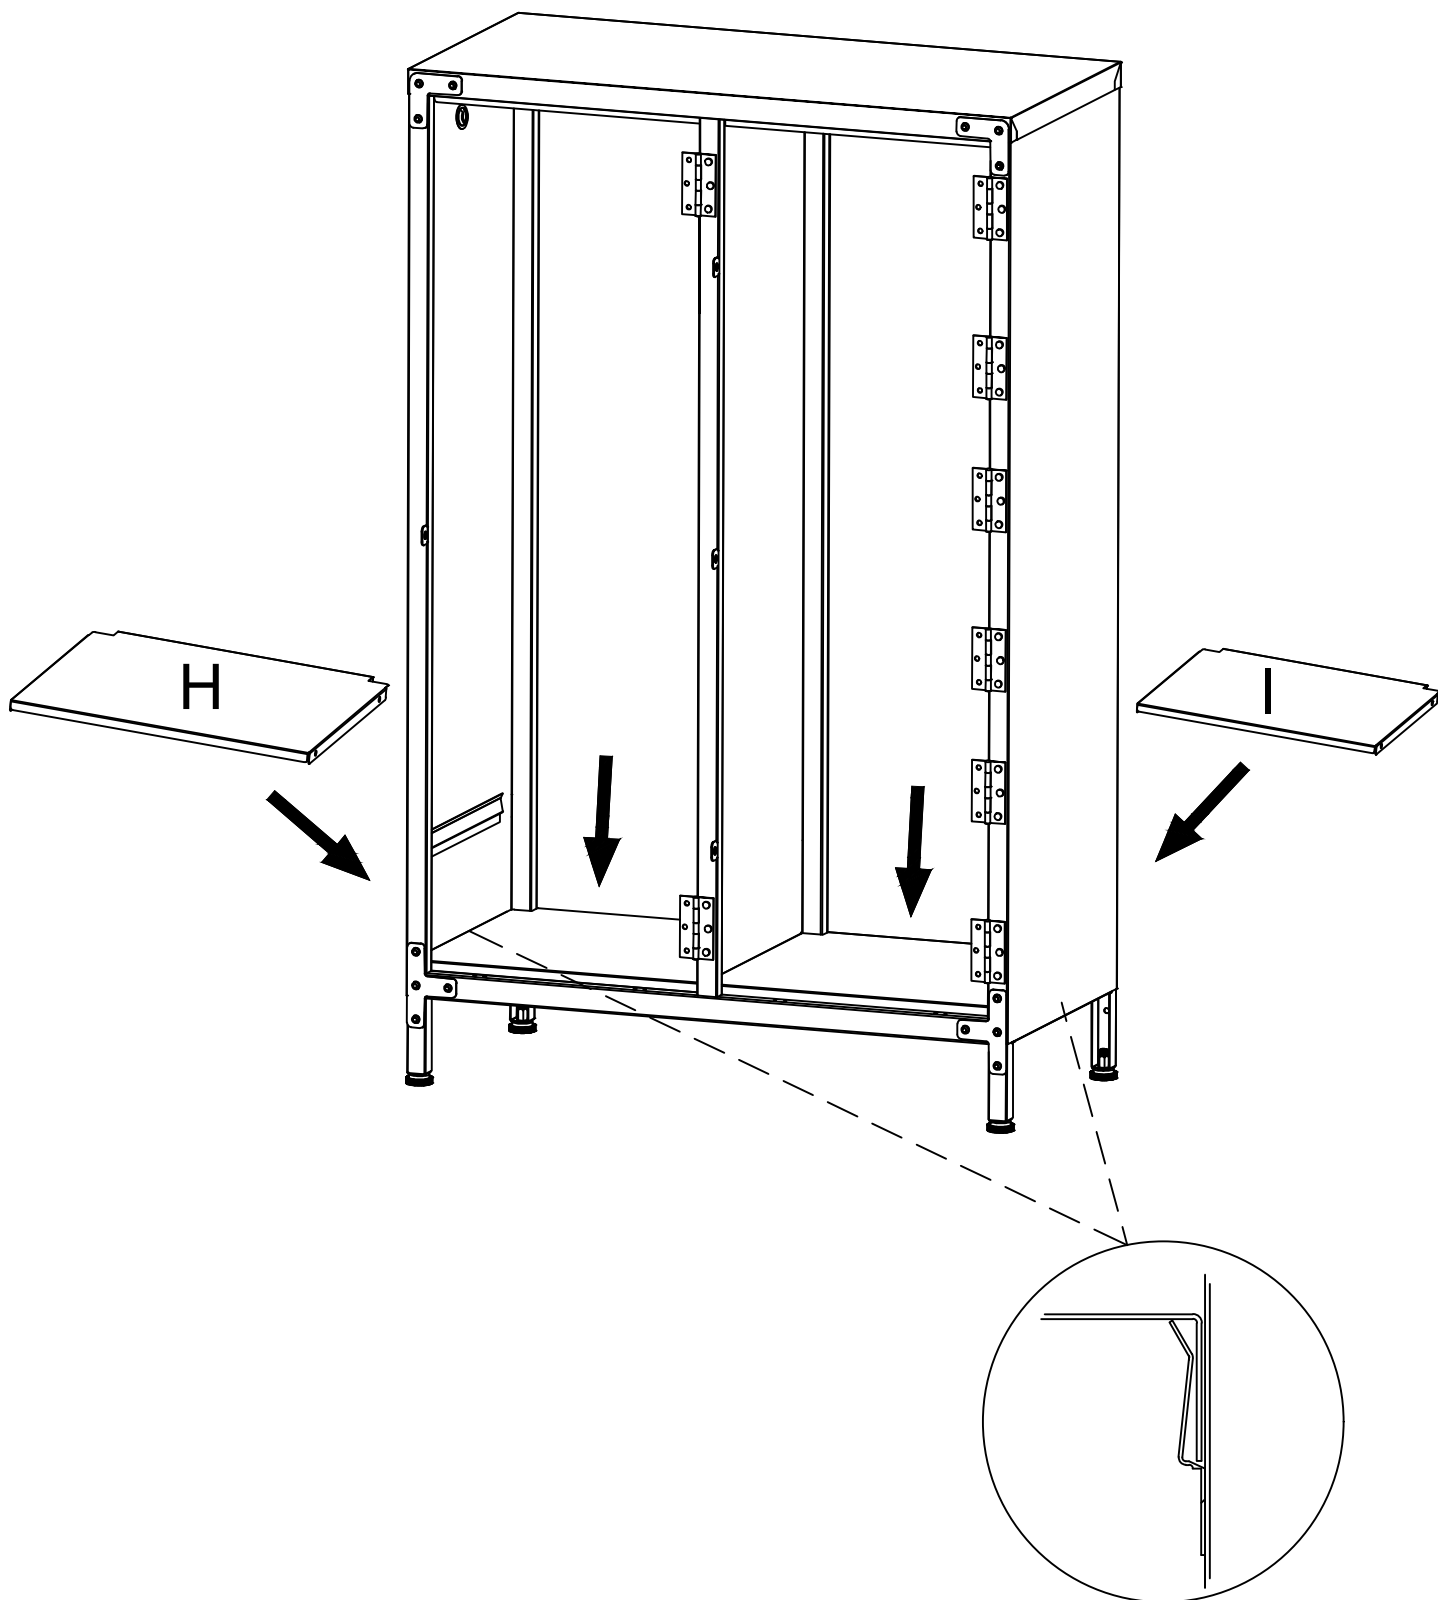


step 8

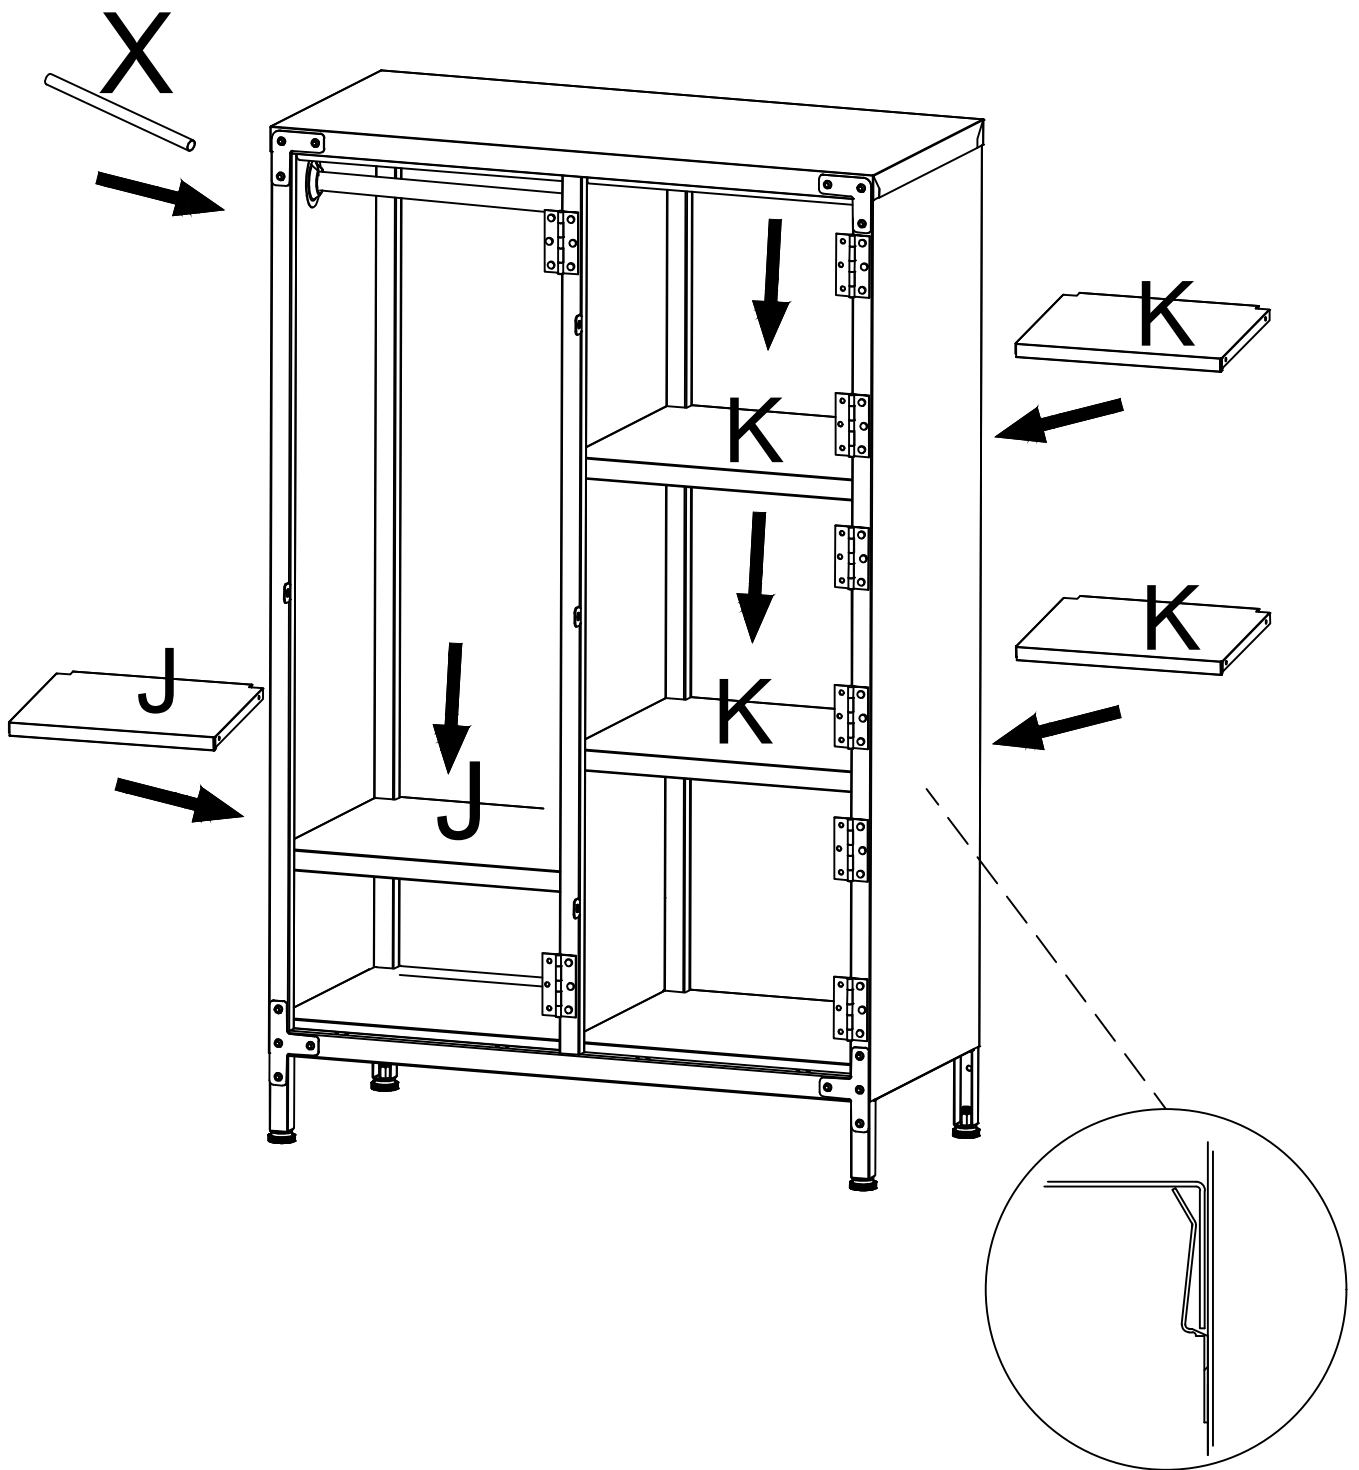


step 9

Adjust parts Y and w clearance,
and then fastening accessories S
More spare parts be prepared just in case

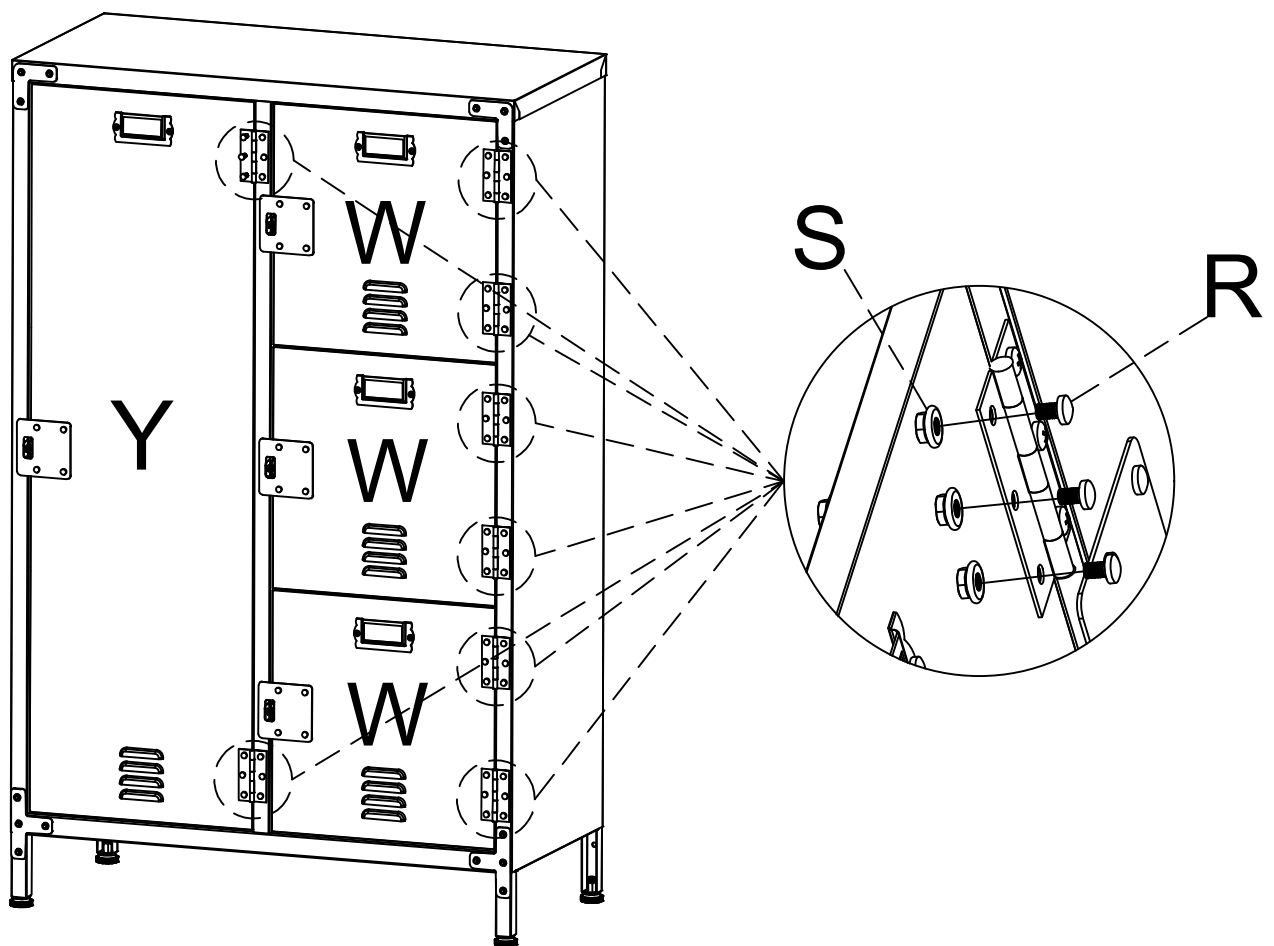

R




x24

S




x24

step 10

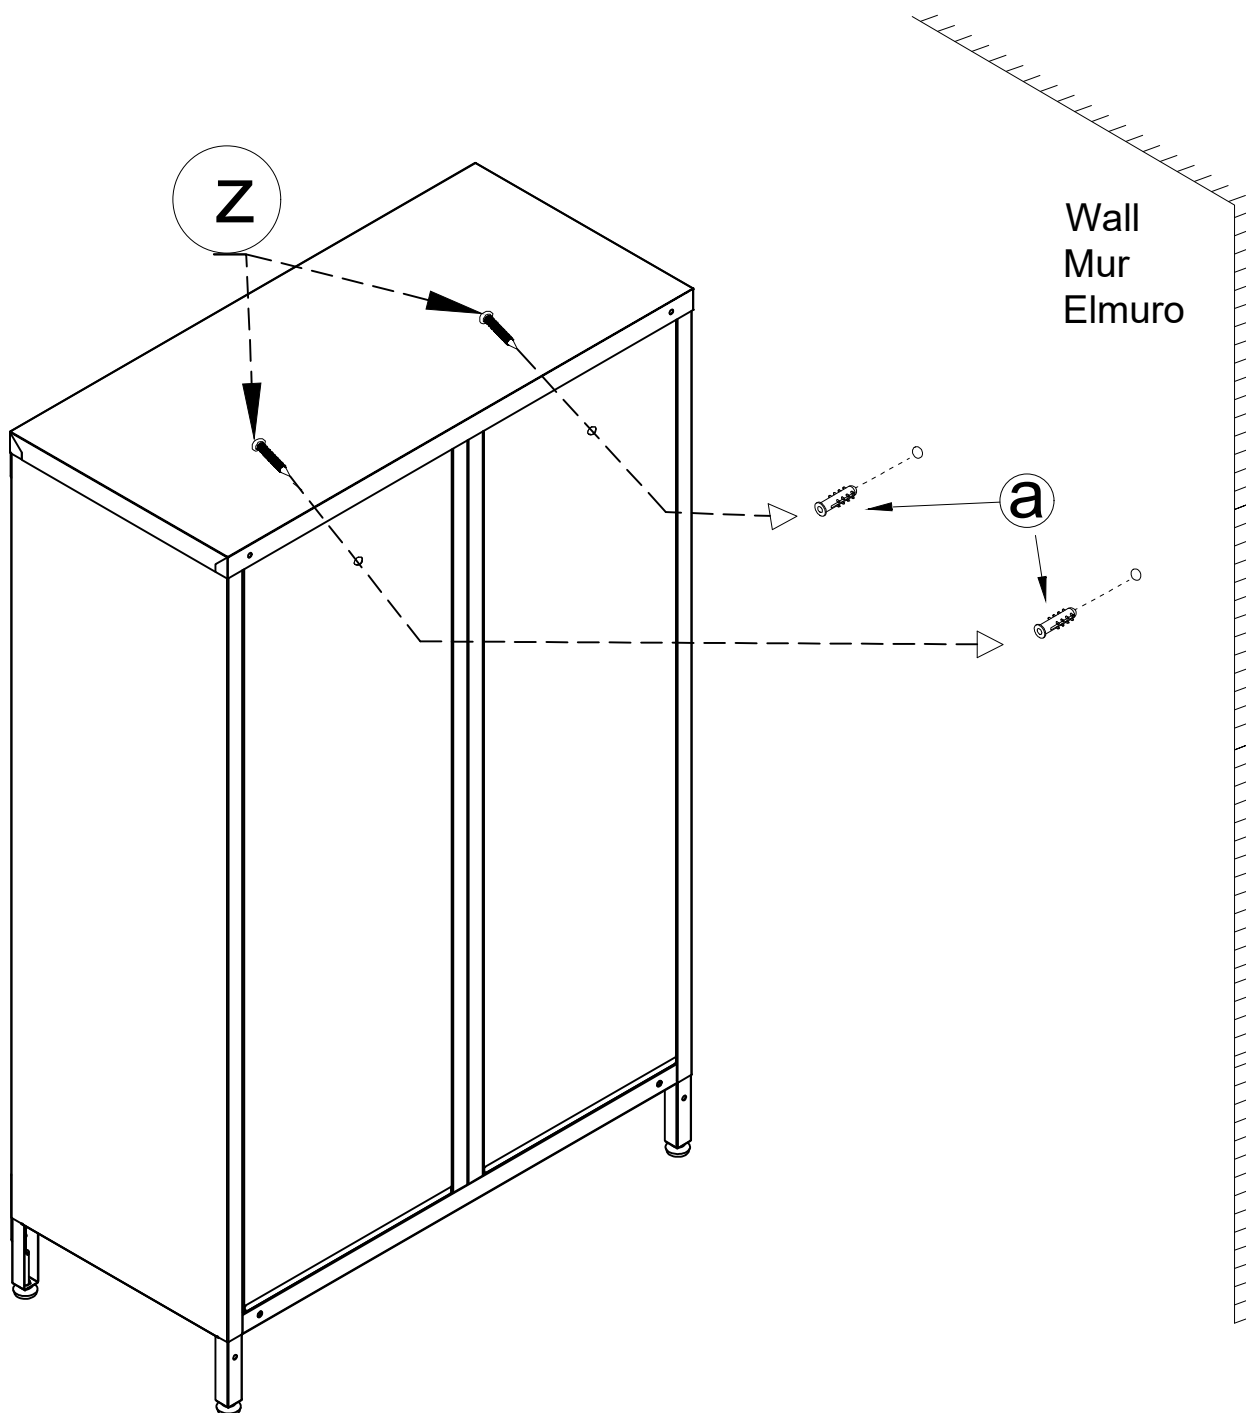


z

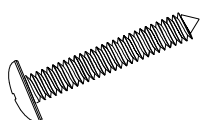

x2

a



x2