

Assembly Instruction Sheet #S-1214P16 For Style 1214P16

s Requised: Fairhand screndiner, Philips screndiner, plinn, wire culture, wire strippers, electrical lups, safety glasses. Searce: (1) 1207 LED-11W DIMMASEE (20009). Searce: (3) 1207 LED-11W DIMMASEE (20009). Searce: Identify and Inspect all parts before legistring installation. Check pertage content list and diagrams below to be sere all parts are set it any parts are miseting or damaged, do not alternat to assemble, Install, or operate the Solare. Context customer service for replacement

These instructions are provided for your safety. It is very important you read them completely before installing the focure. We strongly recommend that a licensed, professional electricism perform the installation. Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt

Disconnect fluture from power source before replacing builbs. Make sure bulbs are given sufficient time to cool before removal

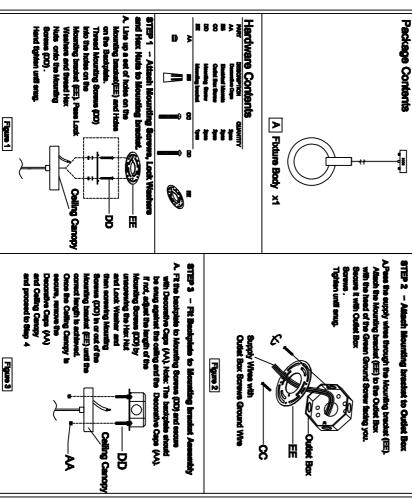

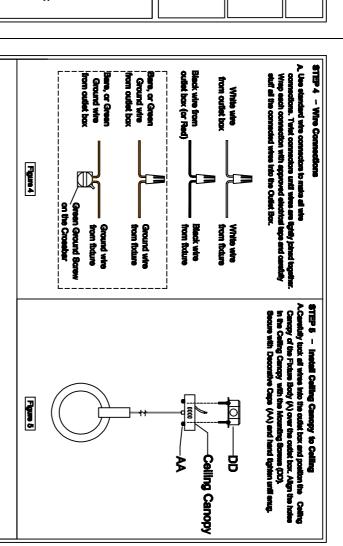

1 약 2