





ASSEMBLY INSTRUCTION
9822-053 STURRIDGE : 24" SHELF ACACIA

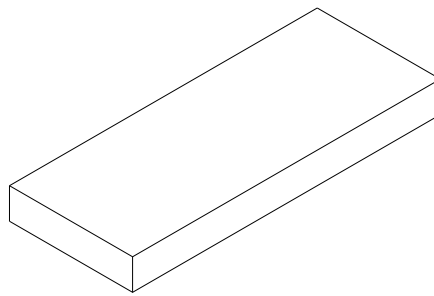


PART LIST

①

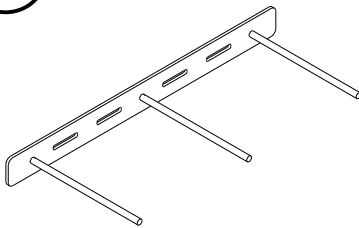

X 1

②

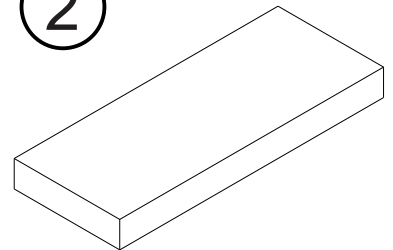

X 1

HARDWARE LIST

Ⓐ




x 4

Ⓑ




x 4

Ⓒ




x 4


STEP -1

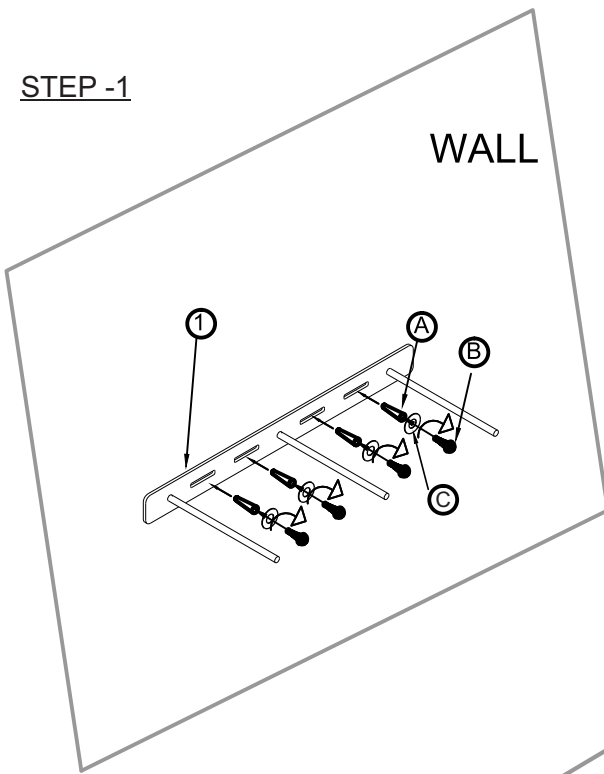

STEP -2

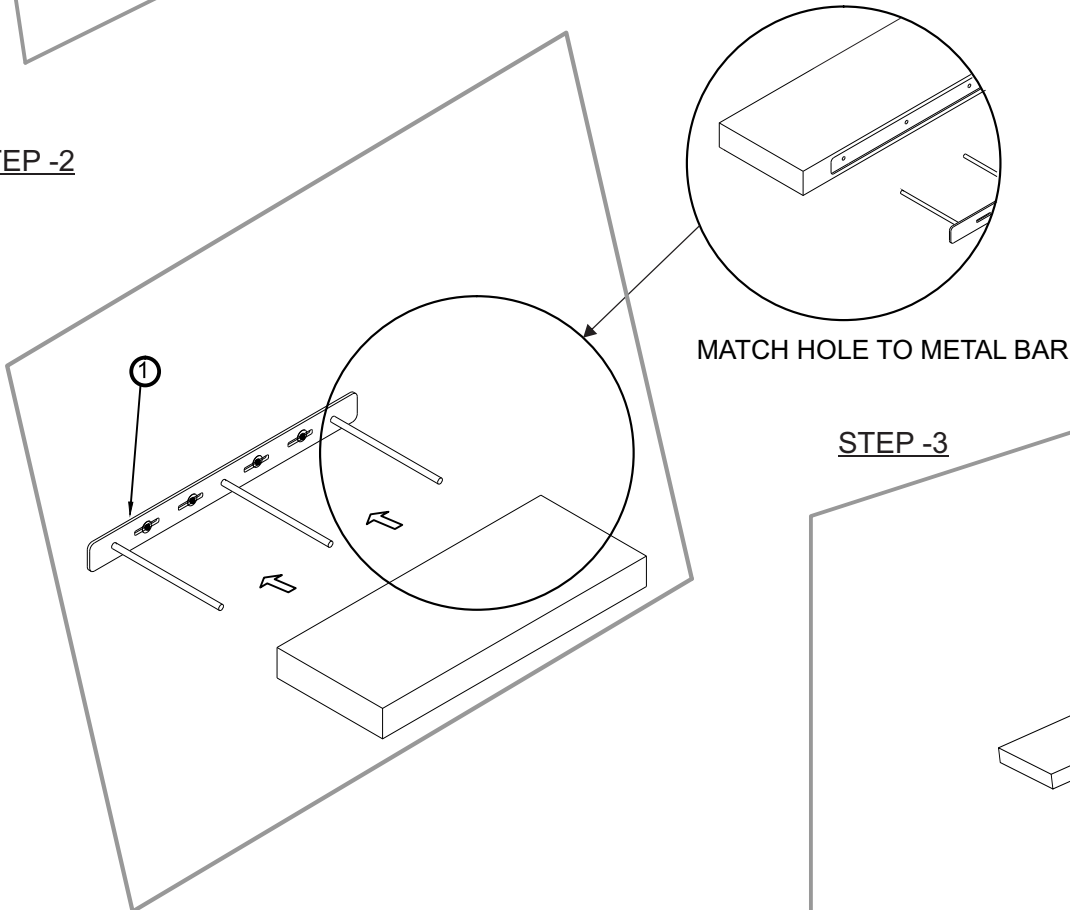

STEP -3

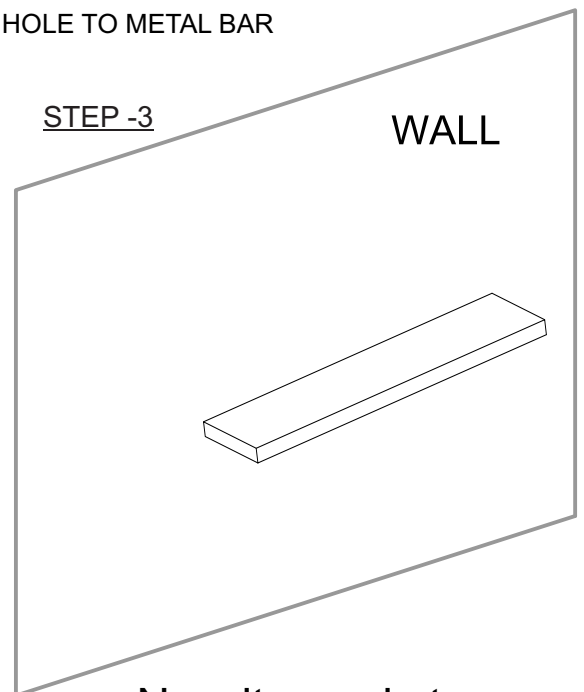

Now its ready to use

Important guide line

1. Mounting hardware should be attached to at least 3 wooden studs. (studs are usually 16" apart- on center)
2. You can easily create additional holes in the mounting bracket by using a metal drill bit. In most cases this will be necessary.
3. Professional, "Handy Man" installation is recommended.