









Belldinni DIY Friendly

Ready to be installed like a pre-hung
door kit with Easy Installation kit


QR code to have EZ installation
instruction on your phone



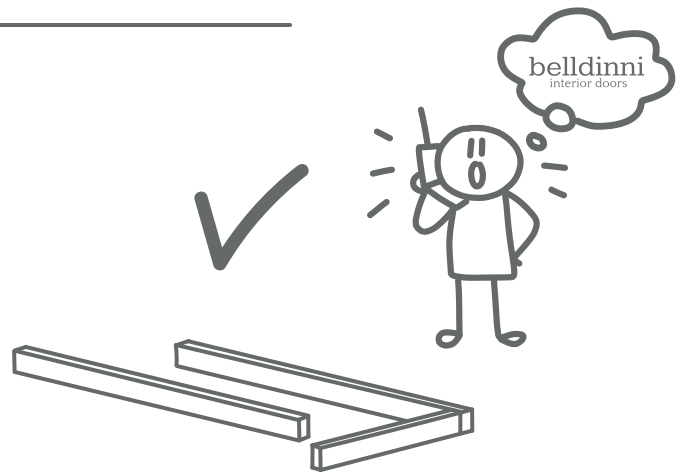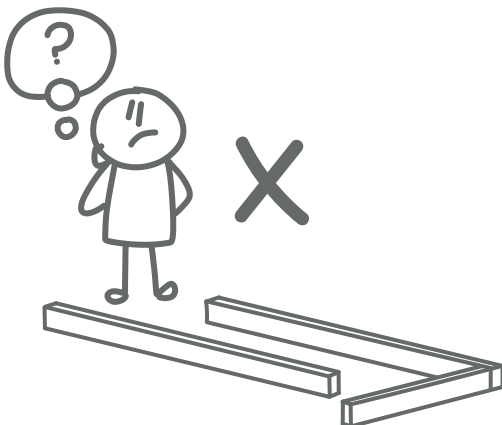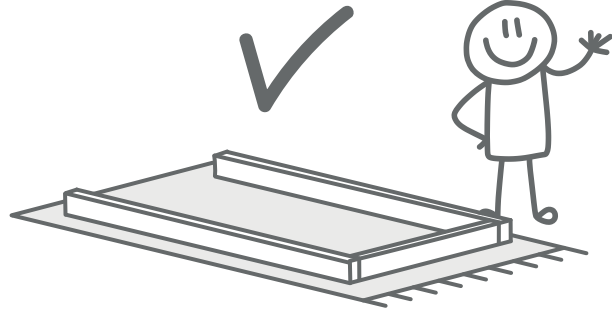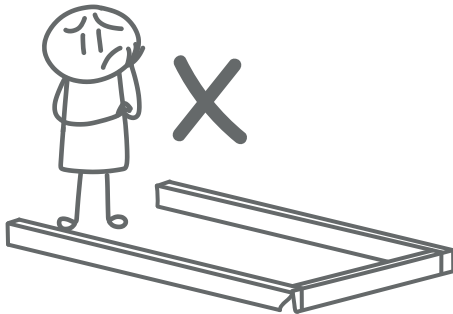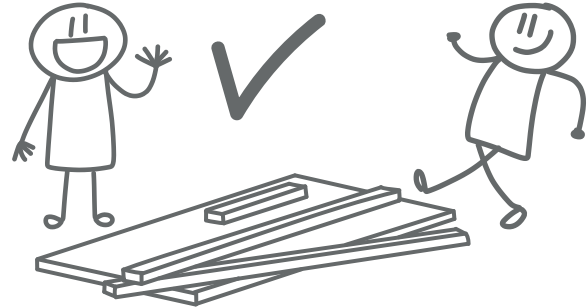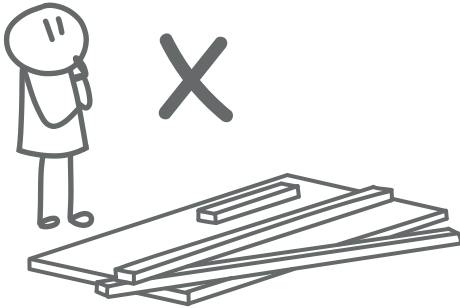

NECESSARY TOOLS

not included

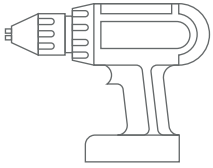

Screwdriver



Screw 1 5/8"



Pencil



Tape measurement



Garbage bags



Level




Shims
(not included)




Safety glasses

DOOR PARTS


(some fixteres may not be included)

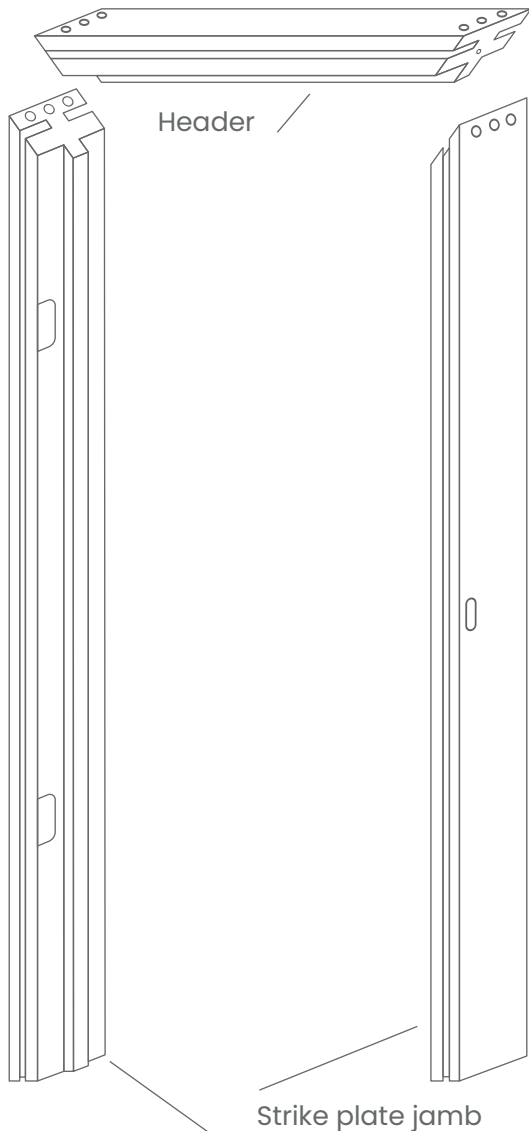

Header

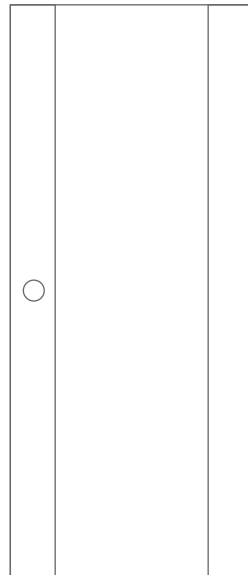

Door slab is already
predrilled for hinges
and handle.



Screw inside
white connector 4 pcs



C
Black 4 pcs.
opposite connector




F
Screw 6 pcs.




G
Screw 18 pcs.



D
Dowel 2 pcs

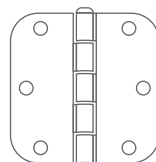

Qty depends on the height
of the door (2 or 3 pcs).
Hinge type can varies

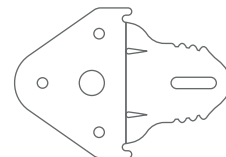

Quick hanger 6 pcs
(may not be included)

Hinges side jamb

Strike plate jamb



Do not use standard
nails and hammer



Do not step
on the door



Do not lay down
on edges



Do not lean
on the wall

WARNING!

Please do not throw away the packing
cardboard until the end of the installation

STEP 1.

Check your order

Check the content of your door unit according to the door parts description above (page 3)


If you have any problems or questions please contact us via diy@belldinni.com or by phone # 646 680 3191

Measure rough opening to make sure all sizes are correct:

Door slab should be at least 2" narrower than opening width, we recommend the door slab to be 2,5" narrower than opening width.
Door slab should be at least 2" shorter than opening height.


Check swing directions according to the chart below

inside

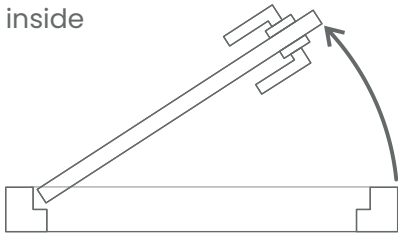

outside

Left hand inswing

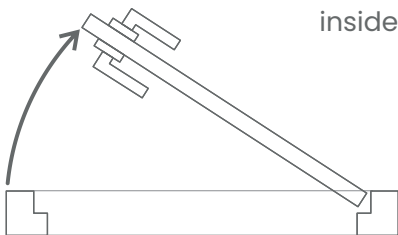


inside

outside

Right hand inswing



STEP 2.

Connect the door frame

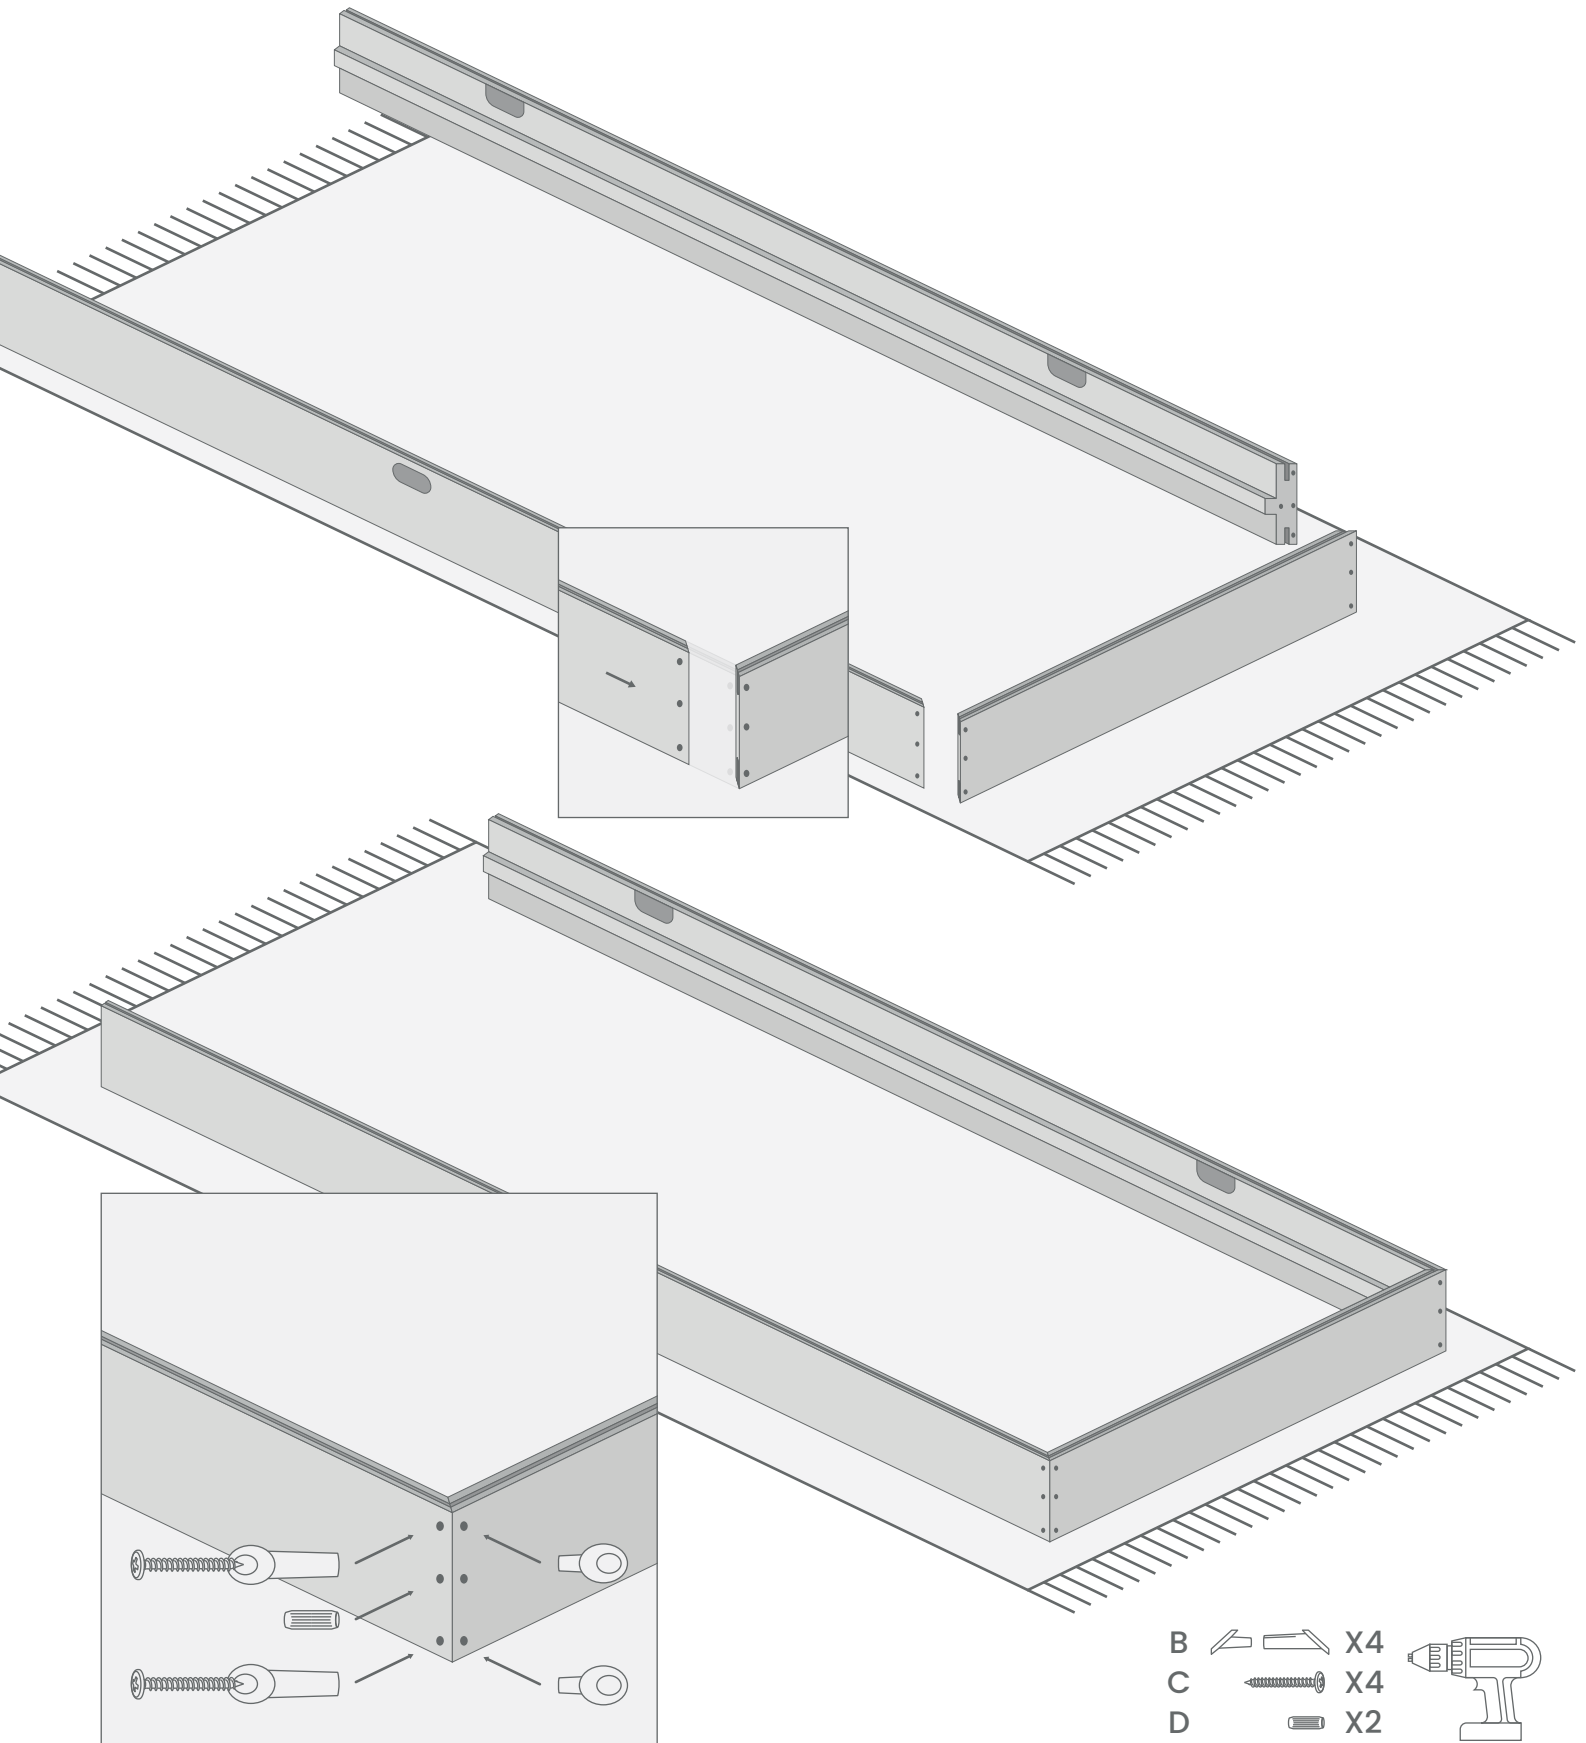

STEP 3.

attaching ez hangers

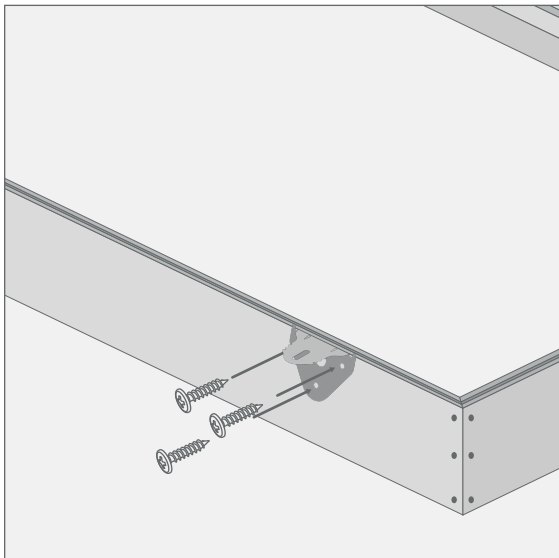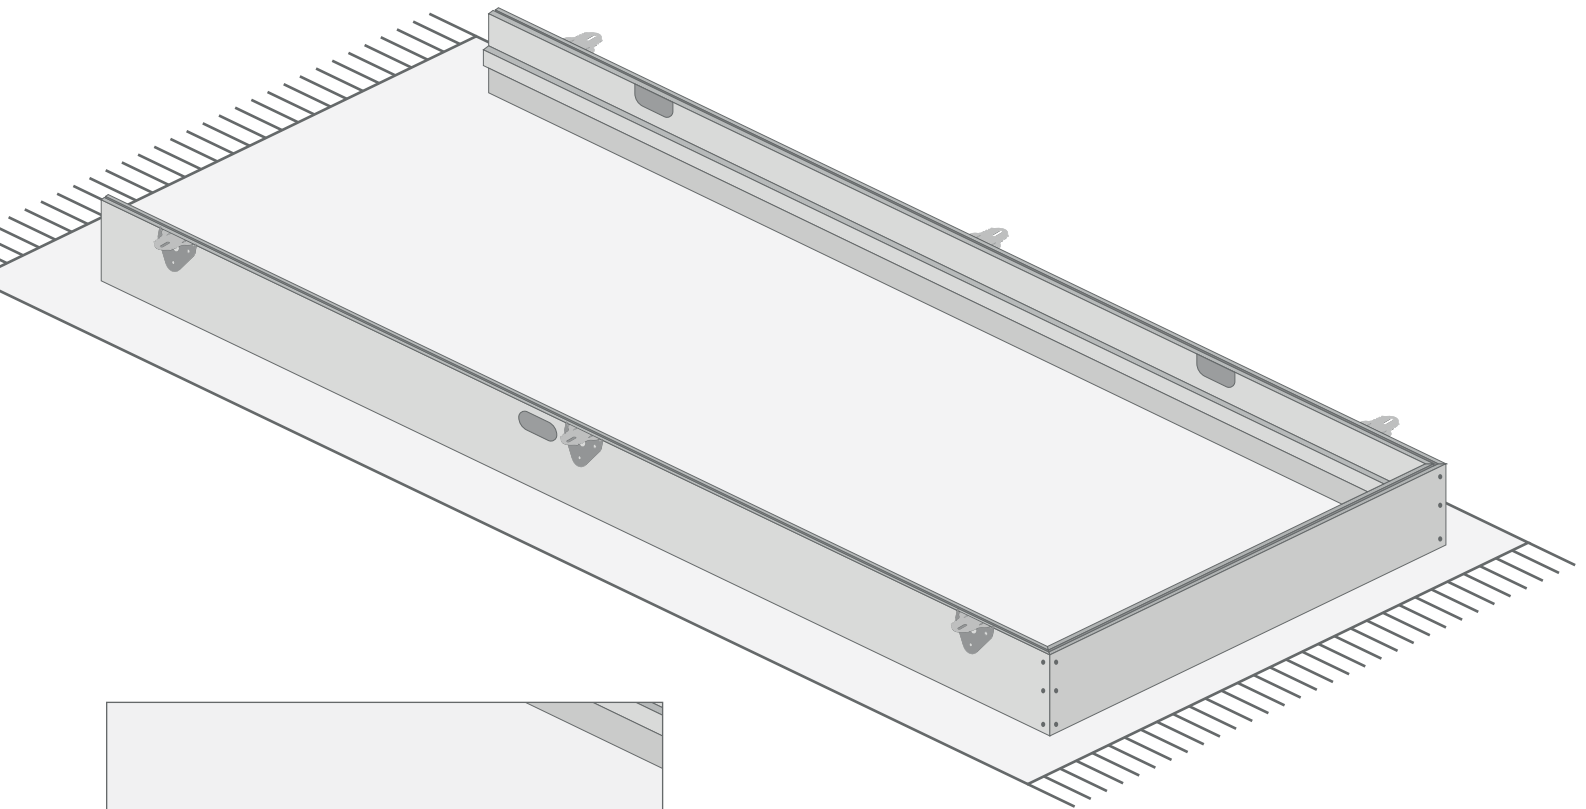


G  X18

E  X6




STEP 4.

Lay out the markings

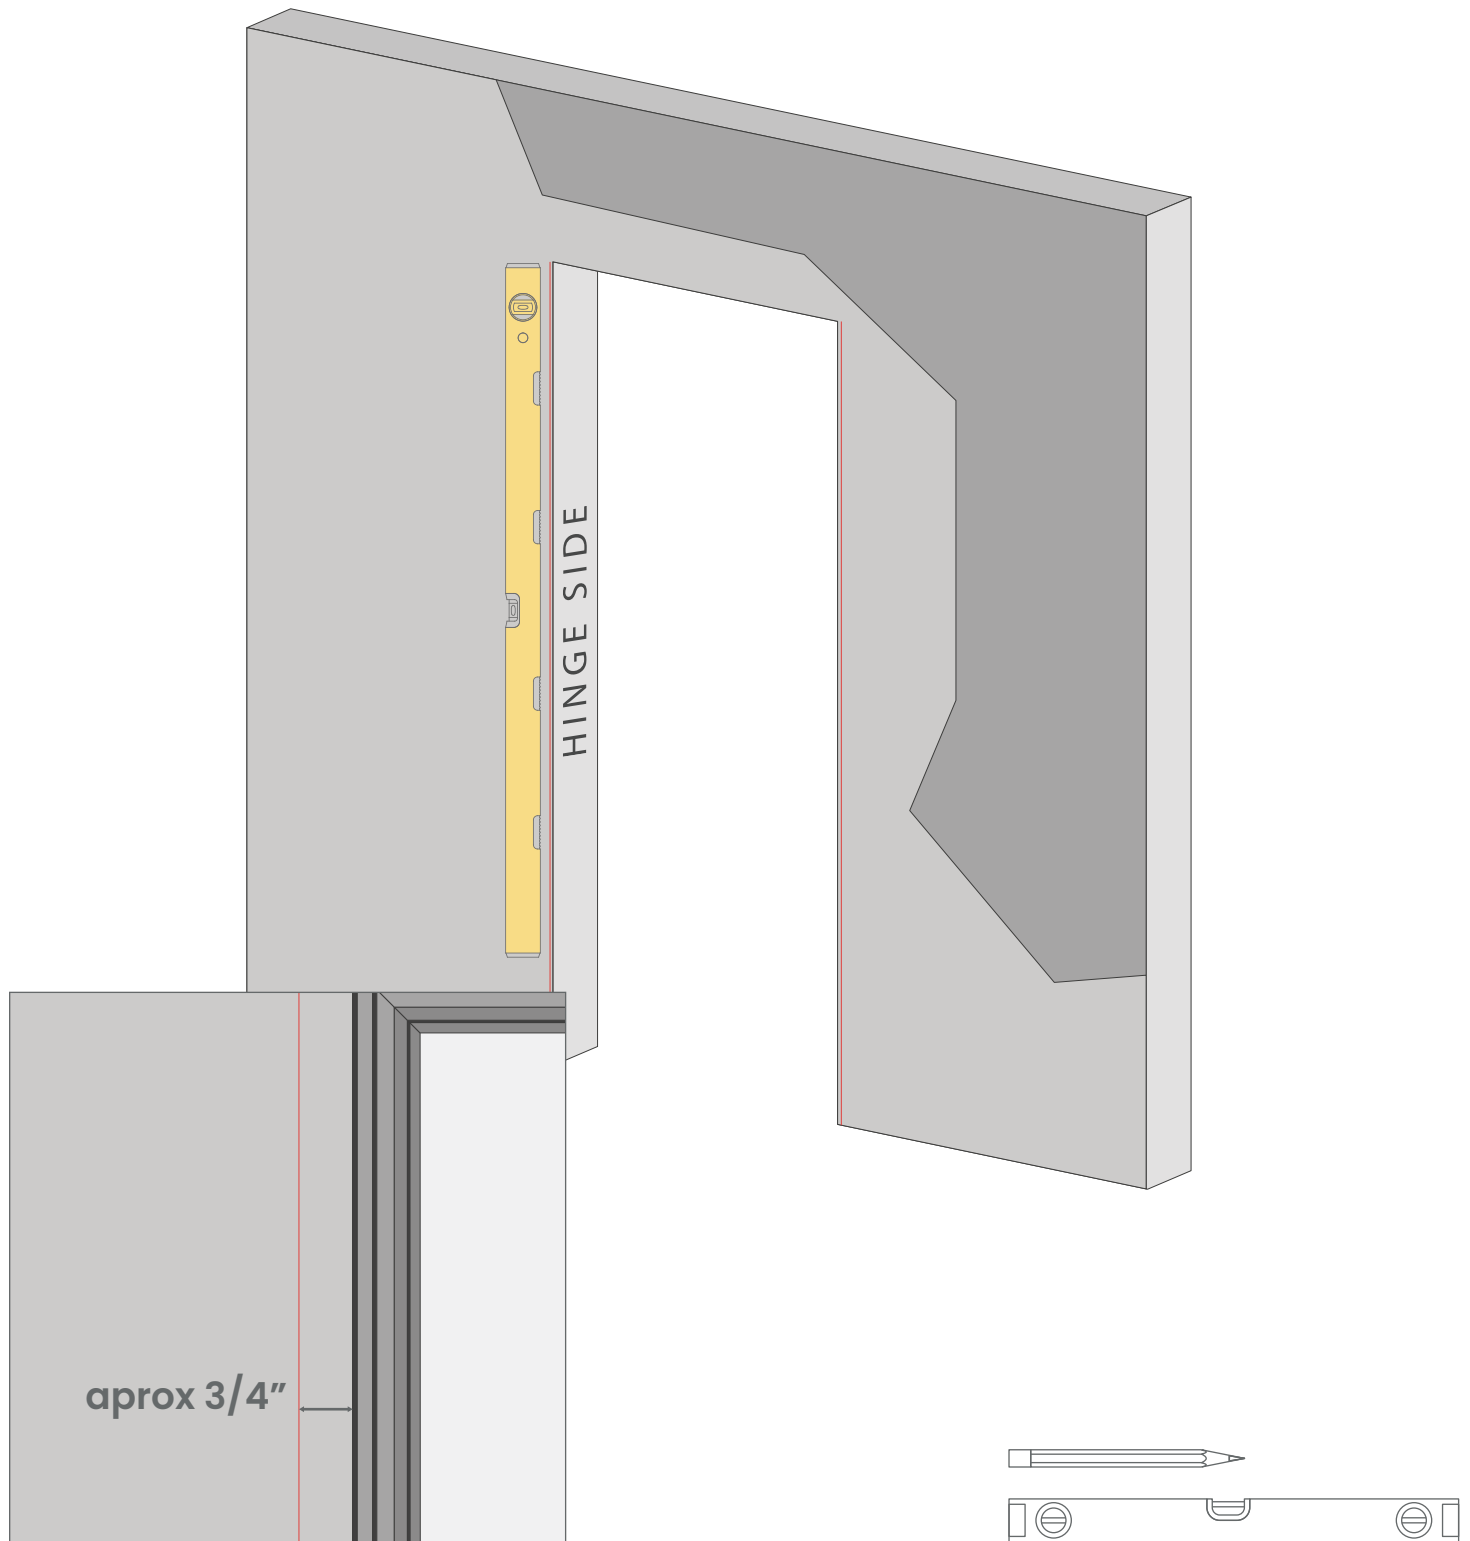


STEP 5.

Install the door frame

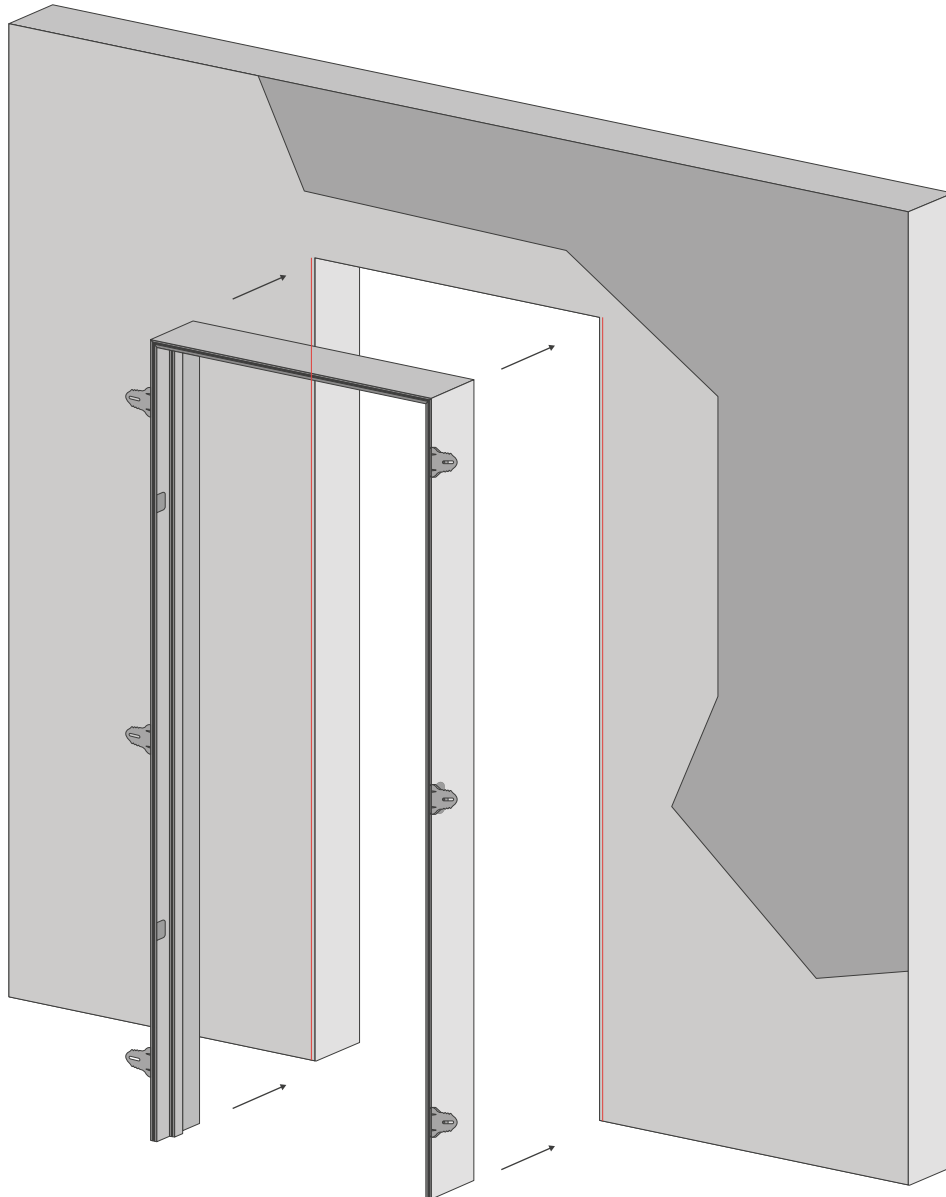

STEP 6.

Align and screw in the door frame

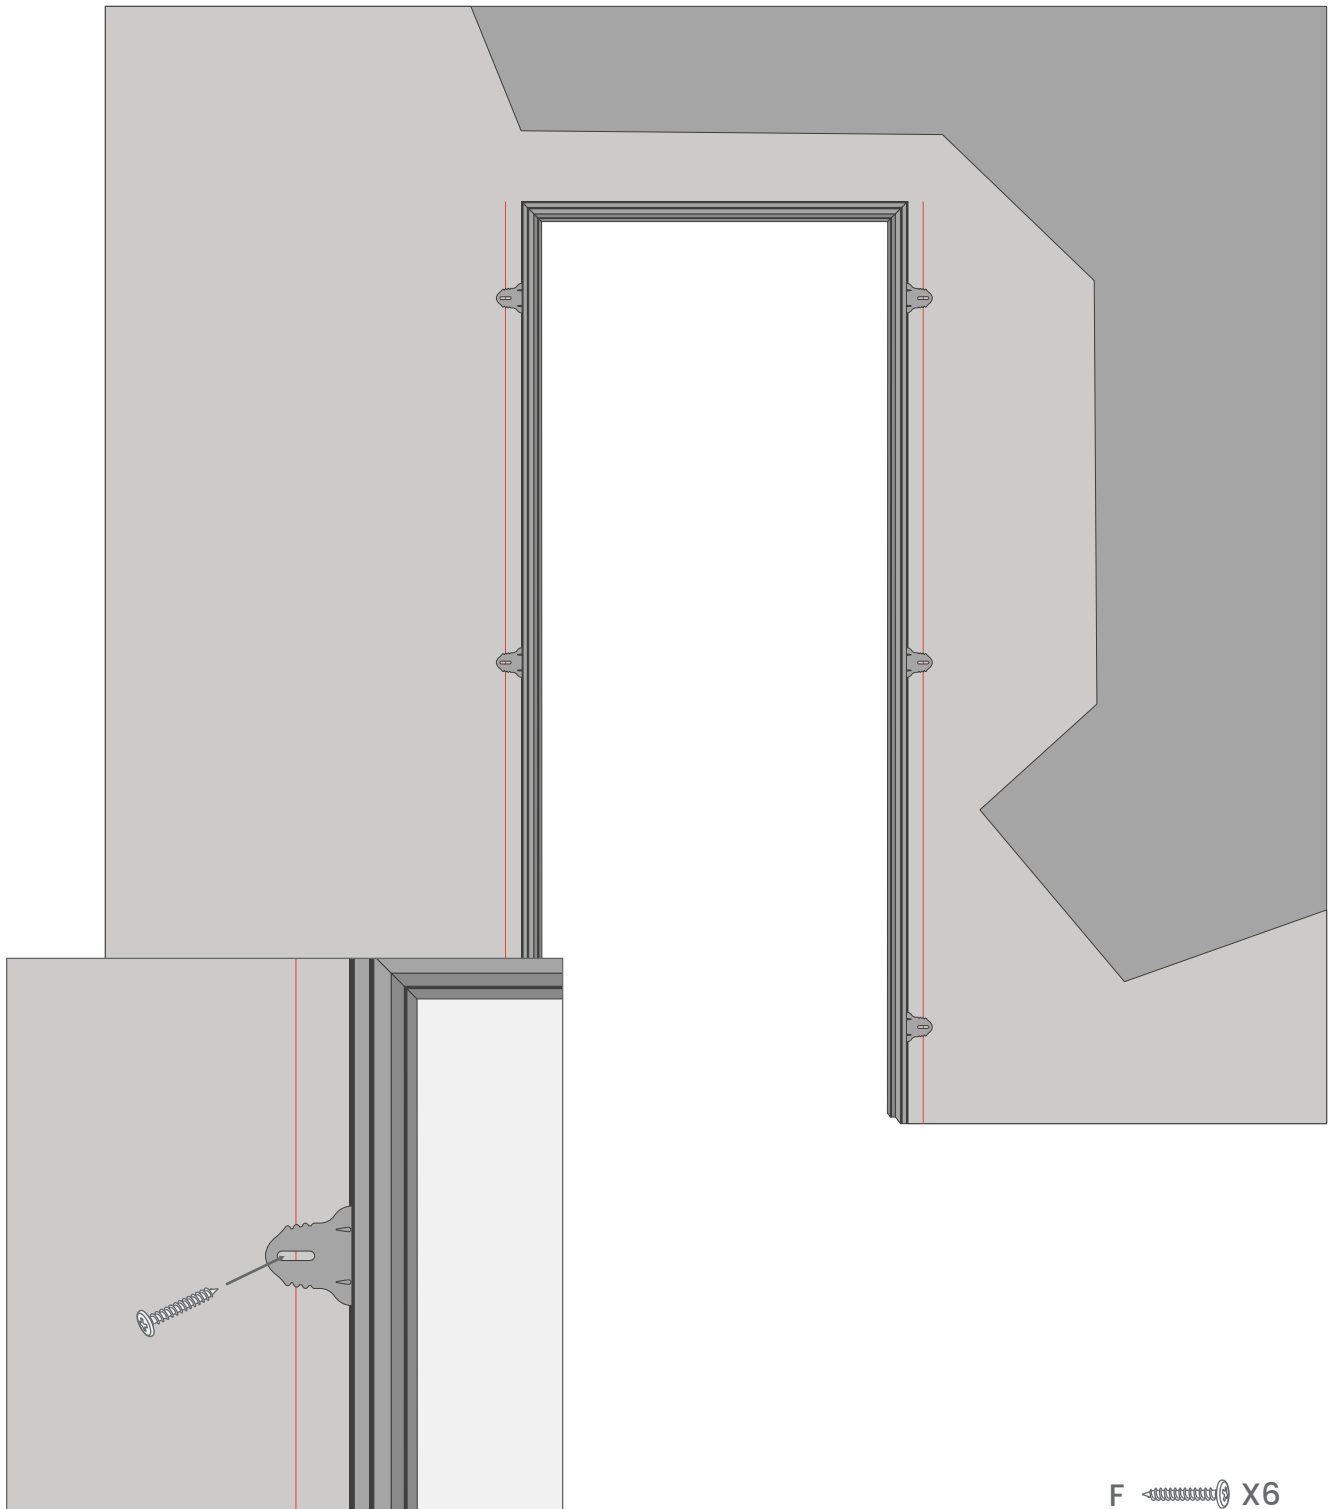


F  X6




STEP 7.

Screwing the hinges to the door slab

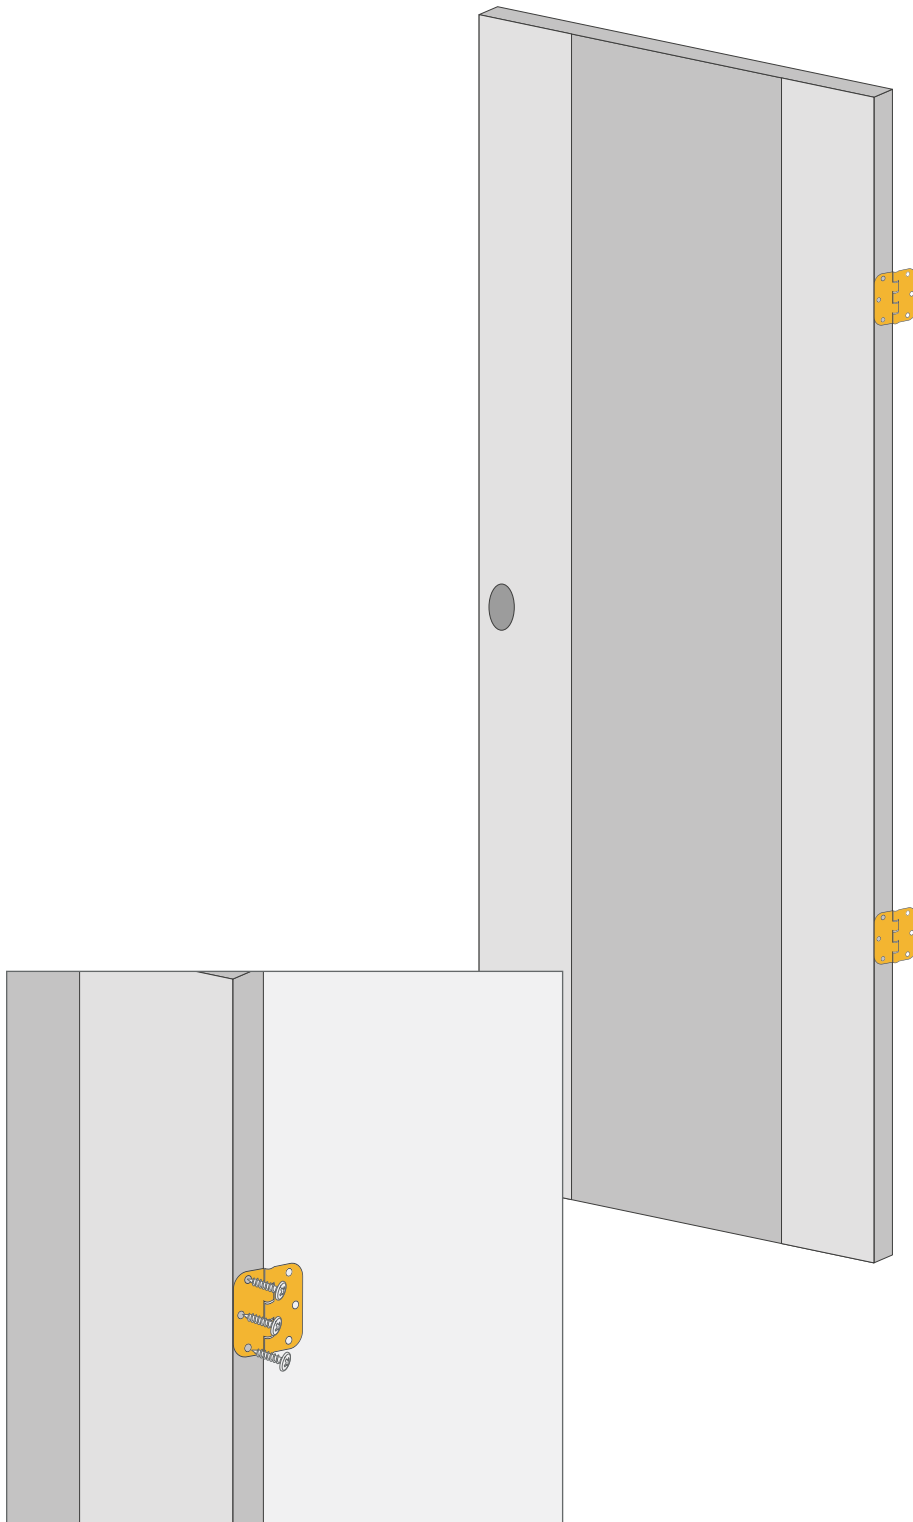


x2

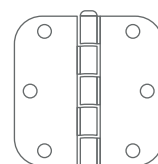


STEP 8.

Screw on the door hinges

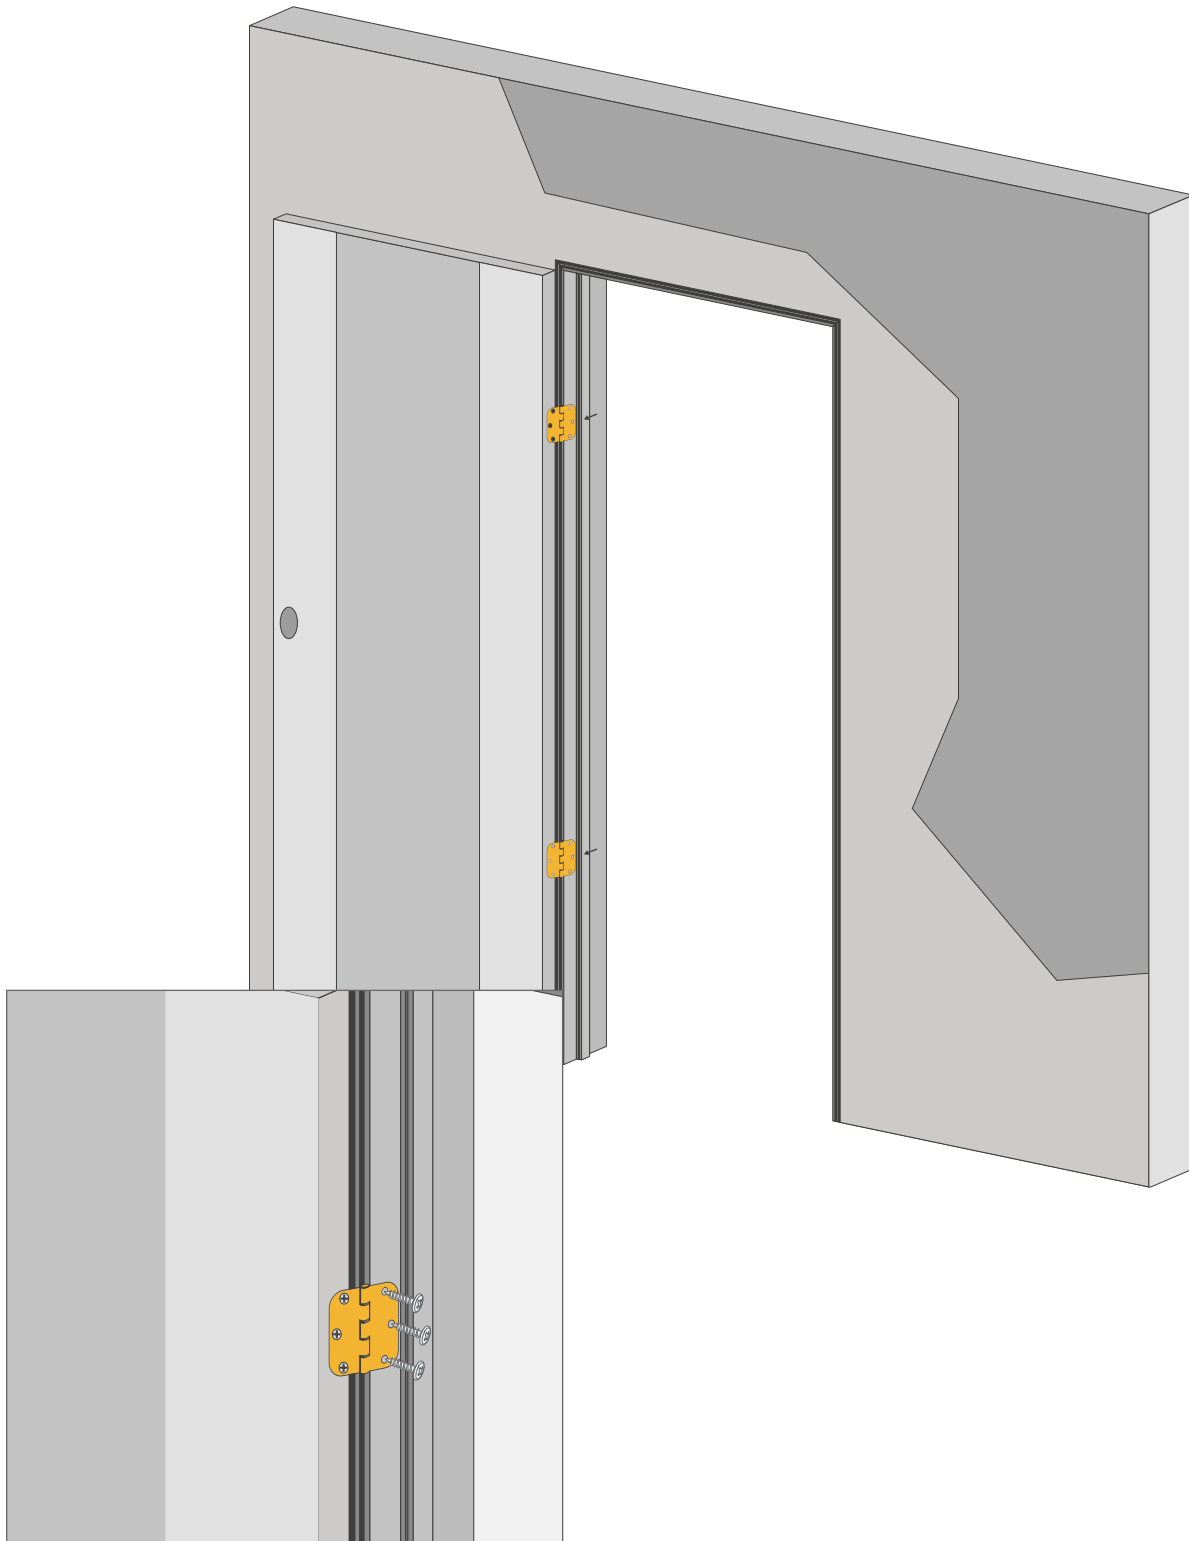


STEP 9.

Install the door slab

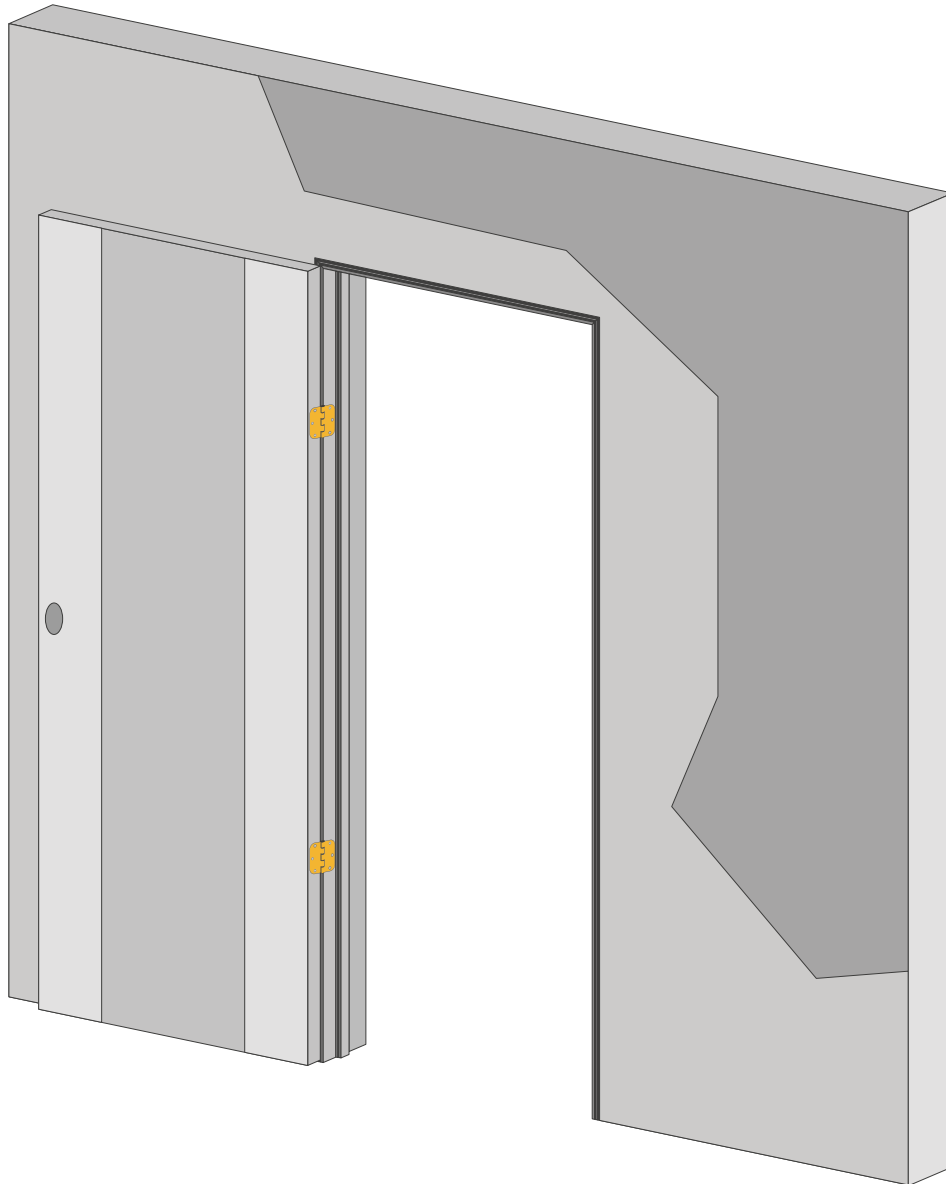

STEP 10.

Adjustment and installation

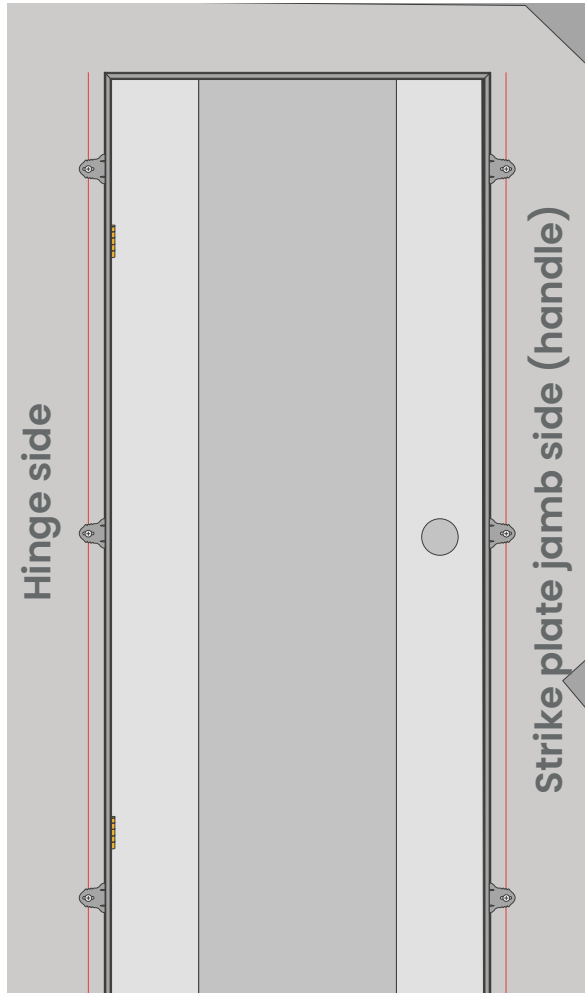

Check and adjust hinge side jamb according to the level first.

Fix the hinge side jamb to the wall with the help of EZ hangers, "A" screws (1 5/8") (not included) and shims (not included) if needed.


Unscrew the screws of the strike plate side (handle side) of the jamb.

Align door slab within door jamb (frame) minding gaps between door slab and door jamb.

Hinge side of the jamb is already fixed to the wall so strike plate side of the jamb and header jamb needs to be adjusted.


Please, notice, metal EZ Hangers have the ability to be bend. In some installation cases you would need to bend them during door installation to be as close as possible to the best installation result

Fix strike plate side (handle side) of the jamb and header jamb to the wall with the help of EZ Hangers, "A" screws (1 5/8") (not included) and shims (not included) if needed.

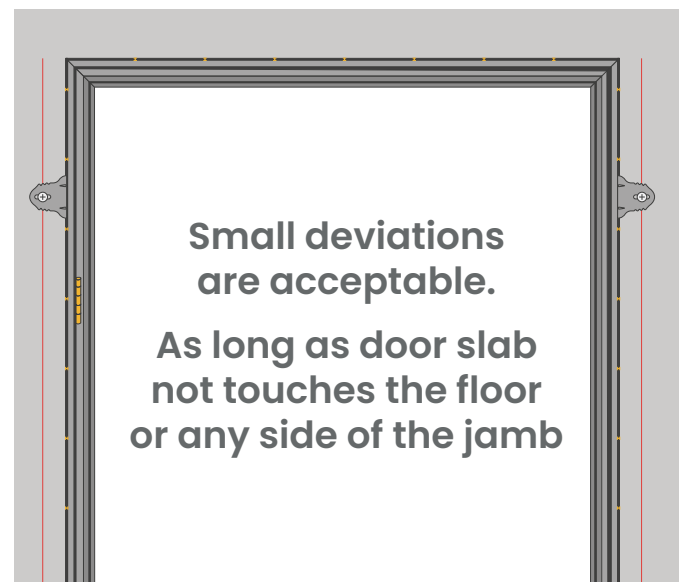

STEP 11.

Moldings installation

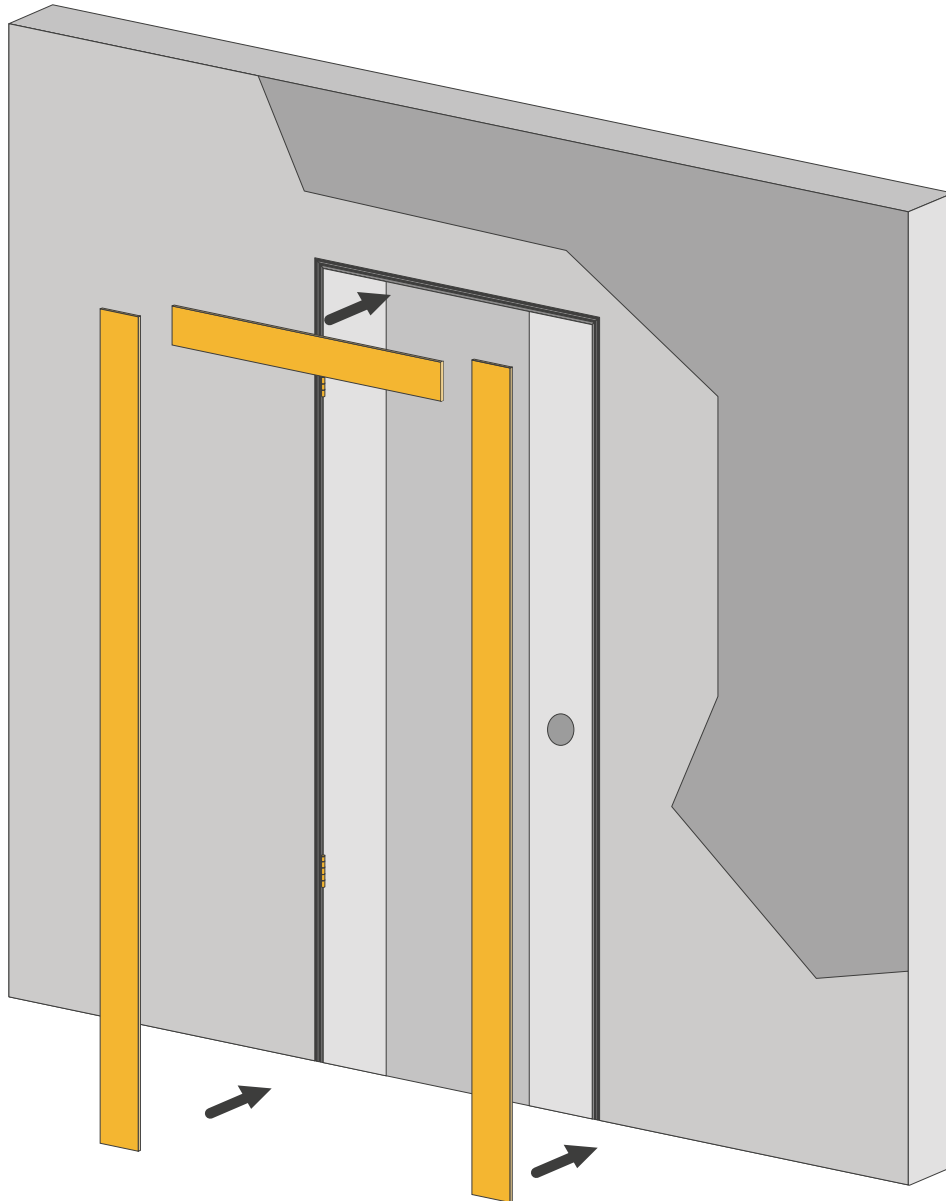

STEP 12.

It's done

