

NOTICE: Consult a professional if needed.

NOTICE: Do not change or modify the product in any way. Doing so may compromise the products structural integrity and will void the warranty.

NOTICE: Installation instructions must be followed. Any diversions from the installations may risk property damage and will void the warranty.

IMPORTANT:

Observe all state and local building codes.

Carefully read all installation and care instructions before proceeding.

Step 1: Use an Allen wrench to remove the mounting bracket from inside of the holder(s).
(Figure 1)

Step 2: Mark the position of one of the towel rack holders on the wall, using a pencil. Using a 1/4" drill bit, drill two pilot holes approximately 1-3/16" deep and use the mounting bracket to determine the distance apart.((Figure 2)

Step 3: Insert the plastic wall anchors into the two pilot holes, making sure the anchor and the wall are even.(Figure 3)

Step 4: Using the provided screws, attached the mounting bracket to the wall.(Figure 4)

Step 5: Fit the base into position and lock it with the set screw using an Allen wrench.
(Figure 5)

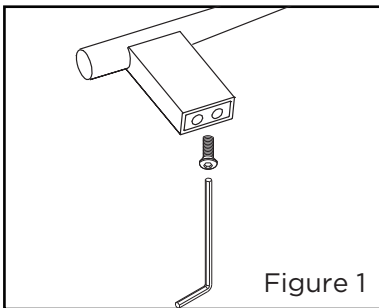


Figure 1

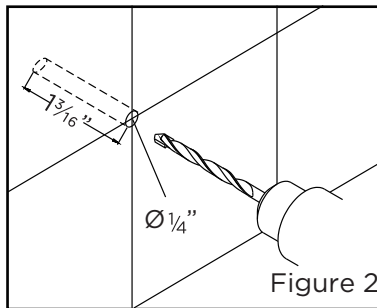


Figure 2

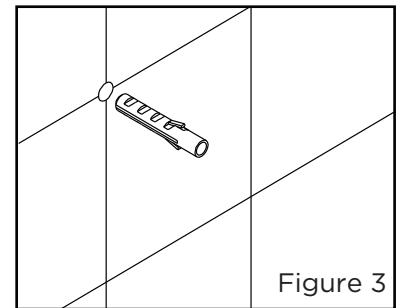


Figure 3

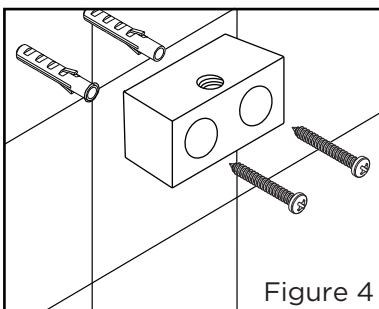


Figure 4

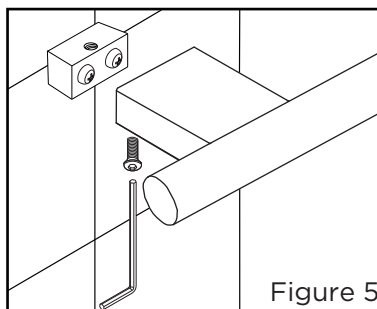


Figure 5

For warranty information please check www.maykke.com.

For customer service concerns please call: [877.659.2858](tel:877.659.2858) or email: support@maykke.com.