



RECTANGLE

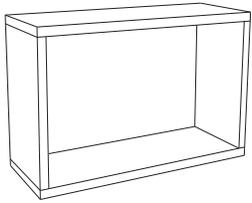


Included




8 Pins



2 Vertical zBoards
adhesive strips on 2 edges




1 Backer Board
thin and has no adhesive



2 Horizontal zBoards
with grooves

WARNING: CHOKING HAZARD
Small parts NOT for children under 3 years

Important

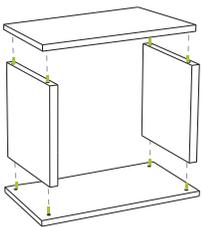

THIS SIDE UP


Tip Start assembly from bottom to top.

DO NOT place unit on its side or back as it will compromise its structural integrity.




- Assemble your unit on a flat even surface, carpet not recommended
- Furniture is for indoor use only


- When moving your Way Basics furniture, lift from the bottom
- Make sure zBoard surfaces are clean and dry

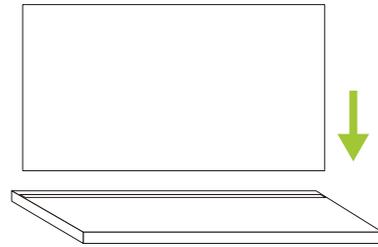


1 Fit backboard into horizontal zBoard groove.

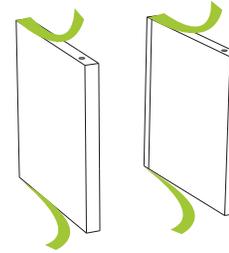


2 Carefully remove the 3M protective layer from adhesive.

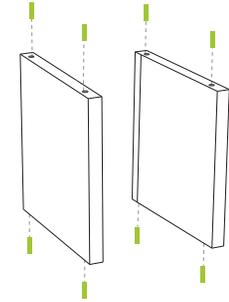


3 Place alignment pins in vertical zBoards.

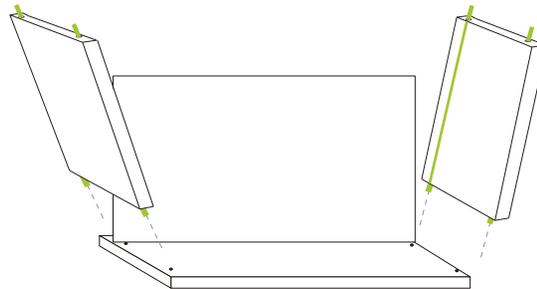

4 Arrange vertical zBoard with grooves facing backboard as shown.

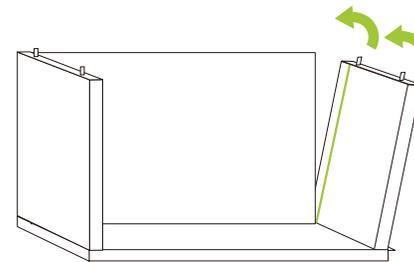

5 Align vertical zBoards to backboard.

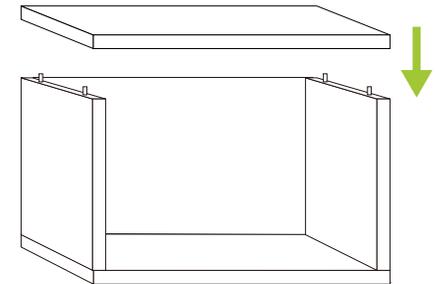

6 Align horizontal zBoard and press firmly to secure unit together. Visit links below for more details.

Enjoy building possibilities!

