

ASSEMBLY INSTRUCTION

FULL BED

IMPORTANT SAFETY NOTICE READ CAREFULLY BEFORE BEGINNING ASSEMBLY!

Before you begin, please read Assembly Instruction carefully and recognized the parts and hardware and follow the assembly step in order. Do not skip any steps.


Place parts on the carton while installing to prevent damage or scratches. Be sure to check all packing materials carefully for small parts may have come loose inside the carton during shipment. If parts are missing, contact the retailer from which you purchased the product to obtain any missing part. **DO NOT USE SUBSTITUTE PART.**

Do not stand on tables, including but not limited to, end tables, coffee tables, and dinner tables, as tables are not to support the weight of a person, use a step ladder in order to assembly upper item.



Where assembly instructions state that the assembly requires two or more people, do not attempt by yourself as there is a risk injury.

NOTE: GLORY FURNITURE DISCLAIMS ANY LIABILITY FOR DAMAGES OR INJURIES WHICH MAY OCCUR DUE TO FAILURE TO PROPERLY FOLLOW ASSEMBLY INSTRUCTION, PROPERLY ASSEMBLY THE PRODUCT, OR PROPERLY USE THE PRODUCT.

NOTE: YOUR UNIT MAY LOOK DIFFERENT IN APPEARANCE FROM THE ONE SHOWN IN THE ILLUSTRATIONS ON THE INSTRUCTION SHEET.

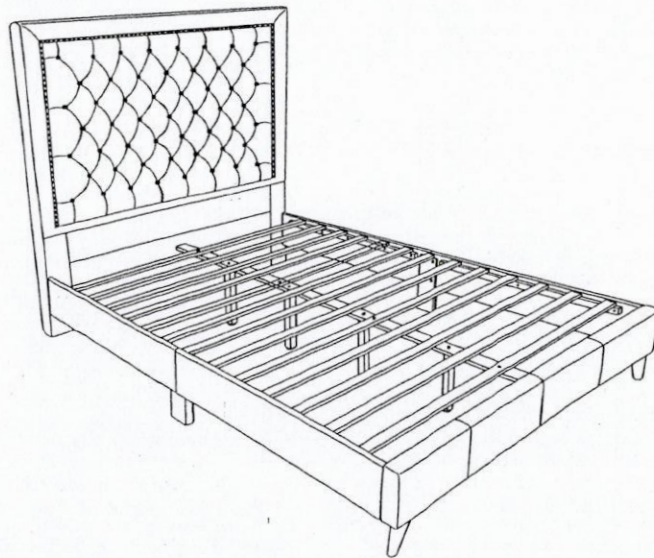

Required Tools : Screwdriver

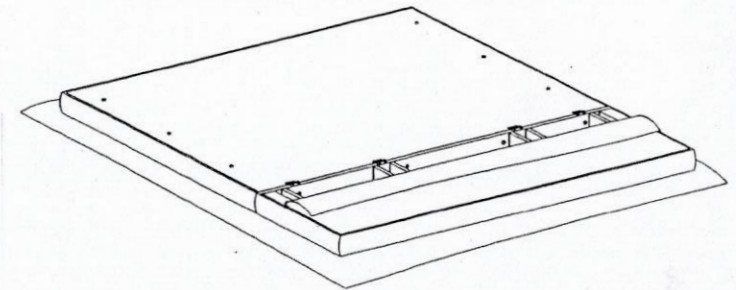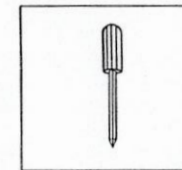

For missing parts/assembly questions call 201-565-6327

Please place on the carton while installing to prevent damage or scratches.

TOP

ASSEMBLY INSTRUCTION


FULL BED

ASSEMBLY PART




Headboard Panel | 1 Pc

2.




Footboard Panel | 1 Pc

3.

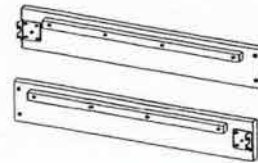

Side Rail Right | 2 Pcs

4.

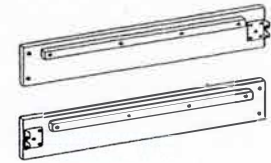

Side Rail Left | 2 Pcs



Side Rail Leg | 2 Pcs

6.




Slat Support | 1 Pc

7.



Support Leg | 4 Pcs


8.

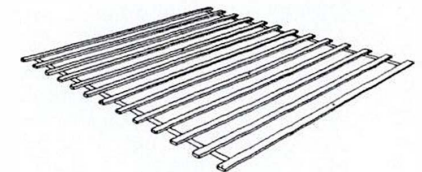

Slat (13pcs) | 1 Pc




Footboard Leg | 2 Pcs

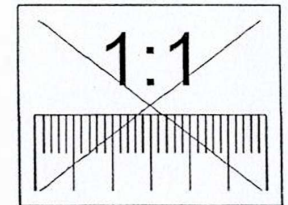



ASSEMBLY INSTRUCTION

FULL BED


HARDWARE DESCRIPTION

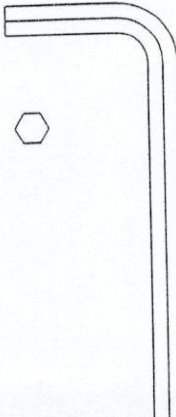
	Allen Key M4		1 PC

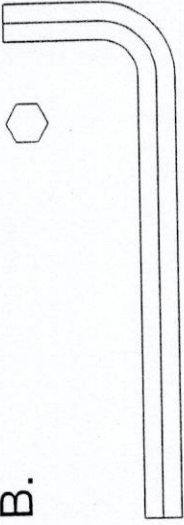	Allen Key M5		1 PC

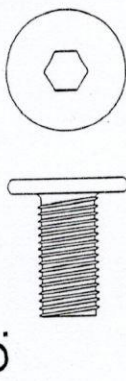	JCBB Bolt M8 x 16mm		8PCS

	JCBB Bolt M8 x 40mm		4PCS


	Spring Washer M8		4PCS

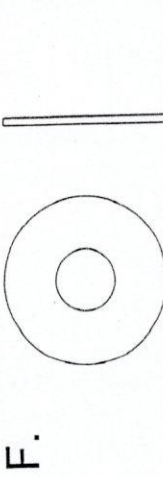
	Flat Washer M8		12PCS


	JCBC Bolt M6 x 35mm		16PCS

	Spring Washer M6		8PCS

	CBC Screw M4 x 16mm		4PCS

	CBS Screw M4 x 32mm		6PCS

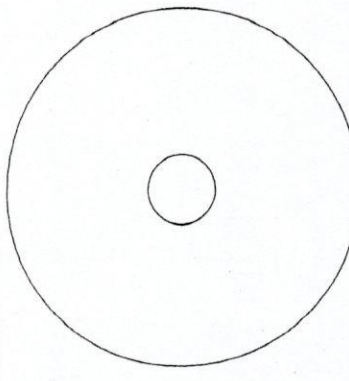	Plastic Washer		2PCS

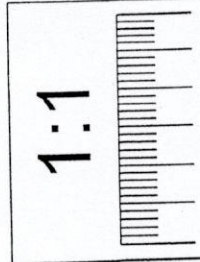


ASSEMBLY INSTRUCTION


FULL BED

2 1.


the cover cloth located begin the Headboard Panel (1). Use JCBB Bolt (D), Spring Washer (E), Washer (F) and Allen Key M5 (B) to fix.

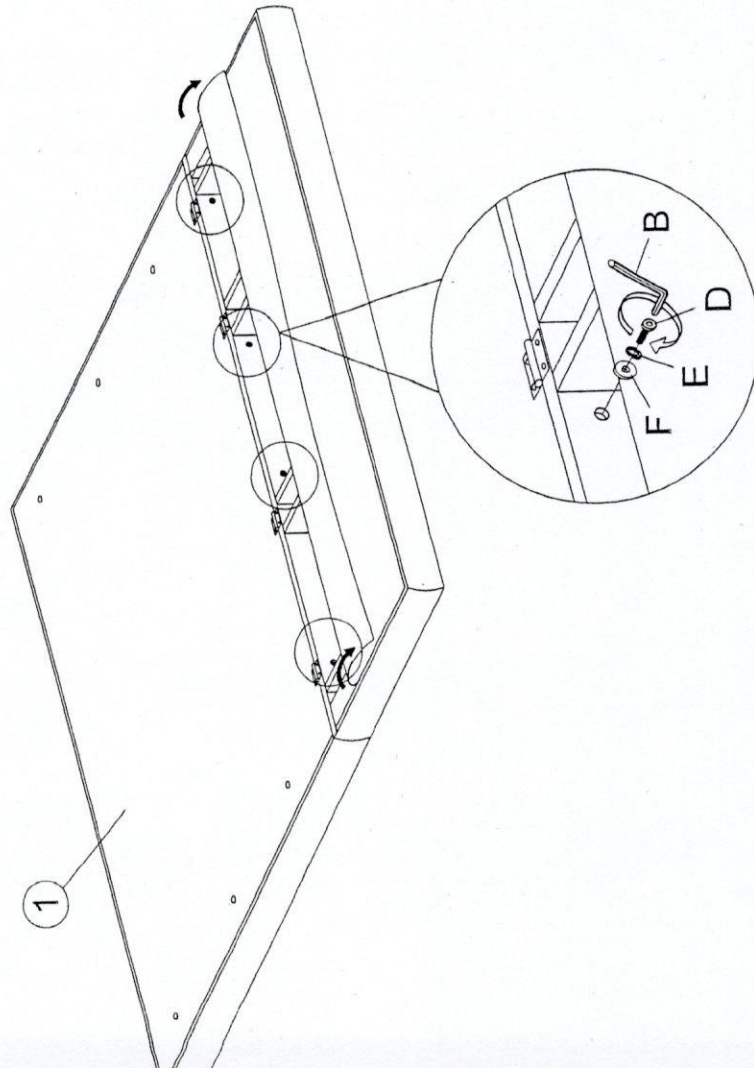


F - Flat Washer M8 - 4pcs

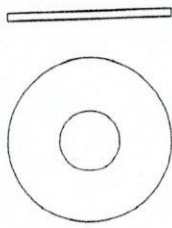


E - Spring Washer M8 - 4pcs



D - JCBB Bolt M8 x 40mm - 4pcs

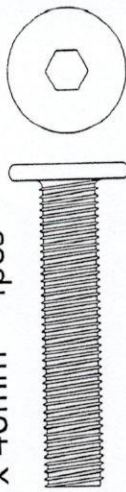

B - Allen Key M5 - 1pc


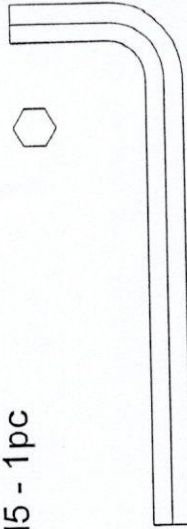


ASSEMBLY INSTRUCTION

FULL BED

Step 2.

Slide the Footboard Leg (9) (2pcs) and Plastic Washer (K) to Footboard Panel (2).

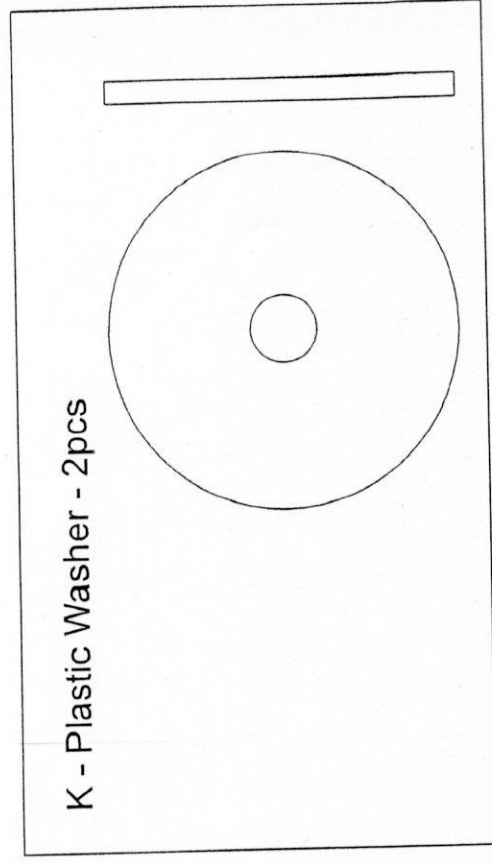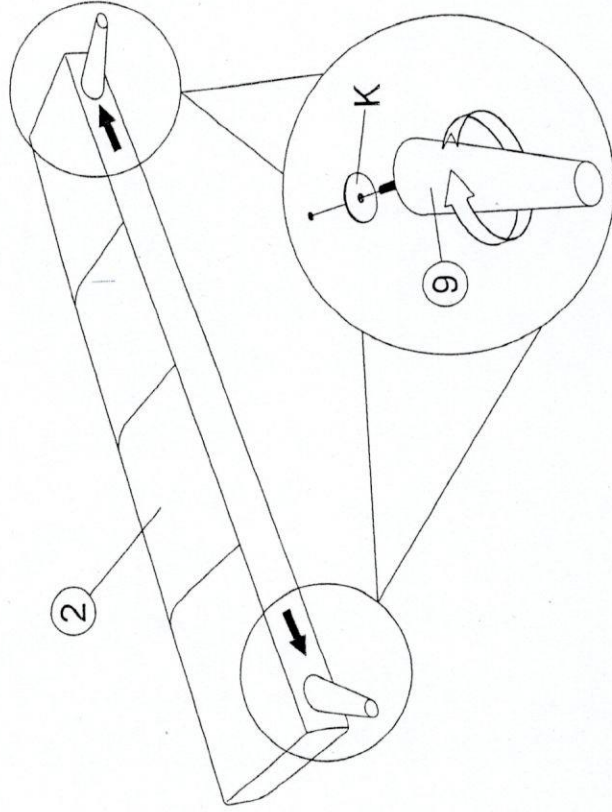


ASSEMBLY INSTRUCTION

FULL BED


Step 3.

Attach the Metal L on the Slat Support (6). Use CBS Screw (1) and screwdriver to fix.

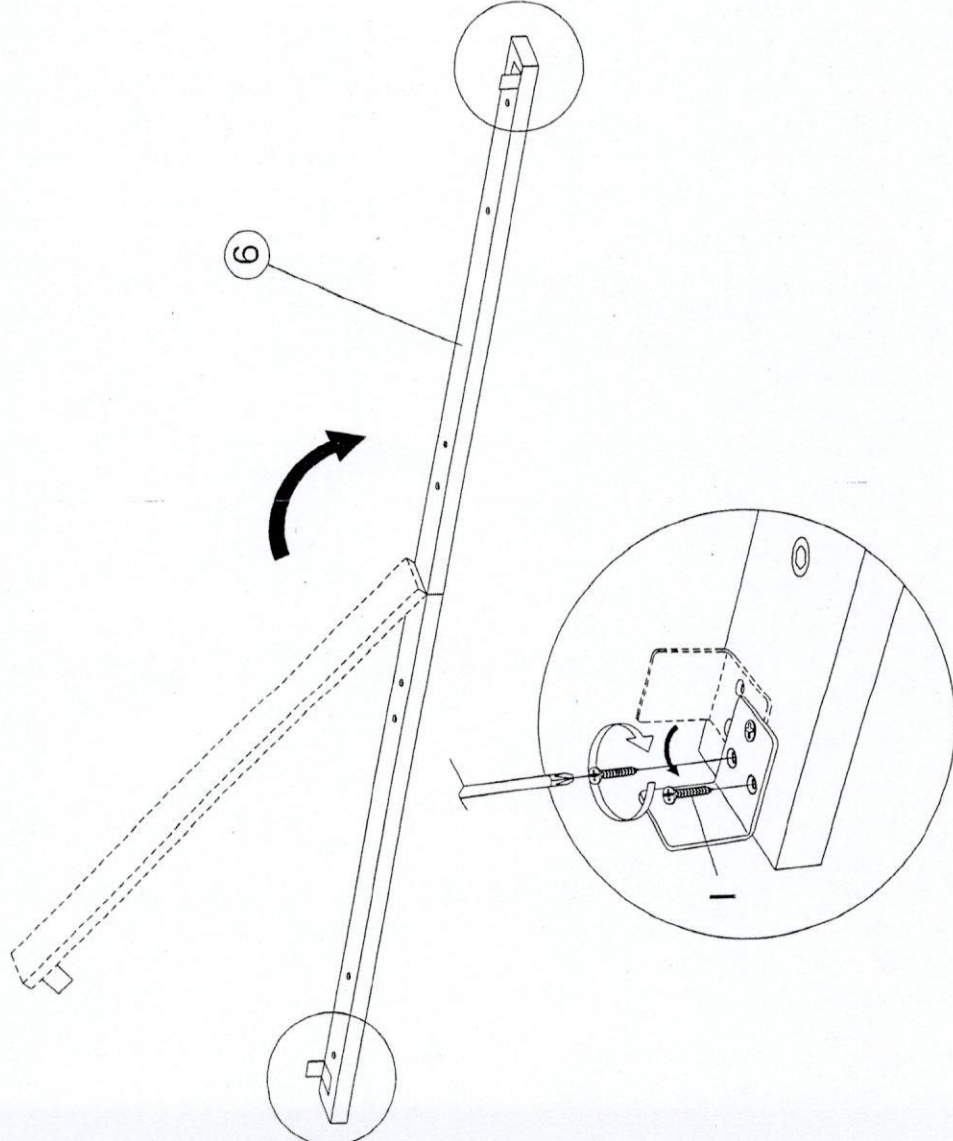

Step 4.


Insert the Slats Support (6) to Support Leg (7). Use JCBC Bolt (G) and Allen Key M4 (A) to fix.

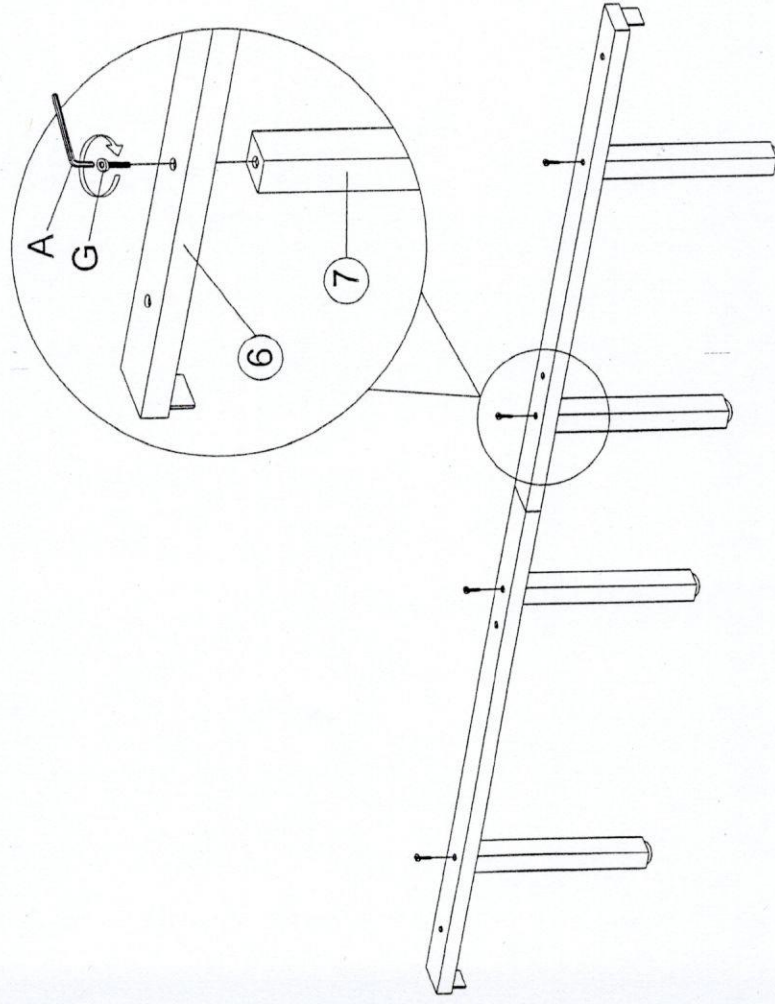

G - JCBC Bolt M6 x 35mm - 4pcs



A - Allen Key M4 - 1pc

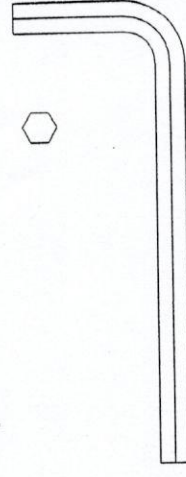




ASSEMBLY INSTRUCTION

FULL BED

2 5.


and tighten the Side Rail Right (3) (2pcs) and Side Rail Left (4) (2pcs) to Side Rail Leg (5) (2pcs). Use JCBC Bolt (G), Washer M6 (H), Flat Washer (F) and Allen Key M4 (A) to fix.

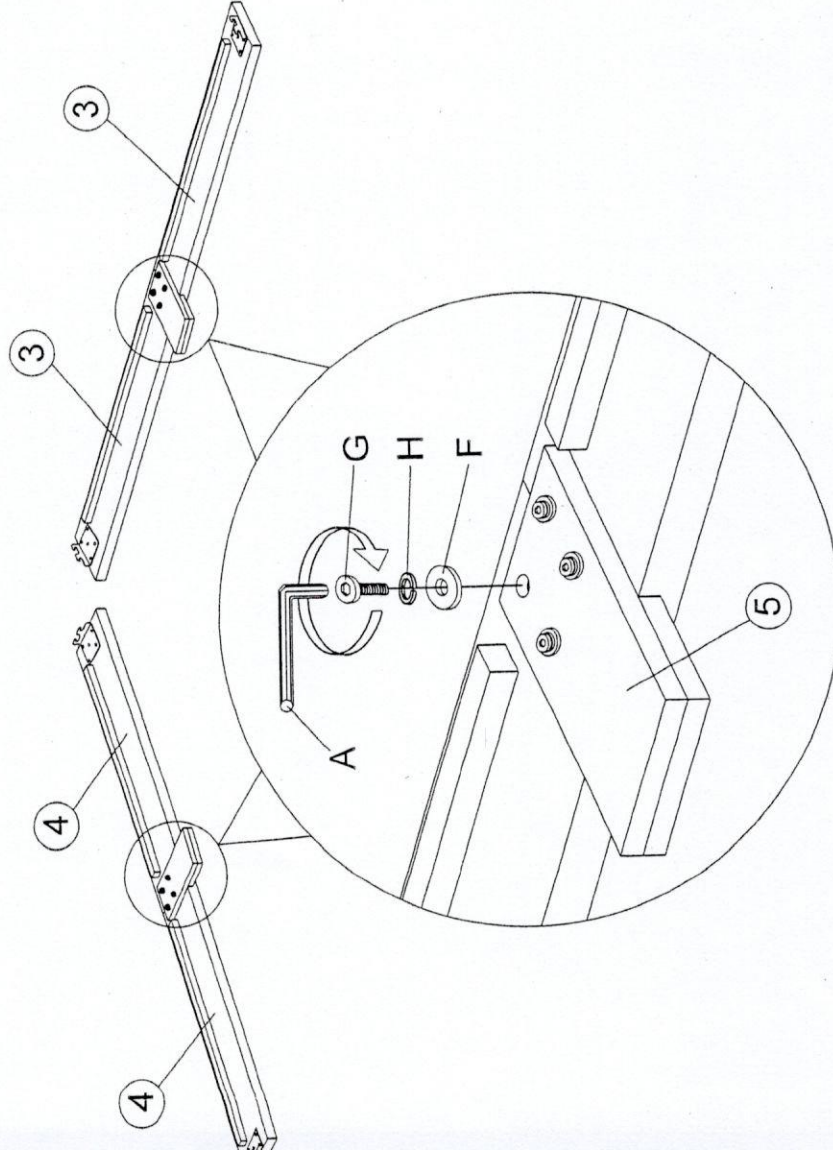

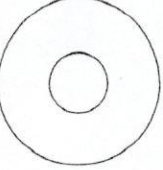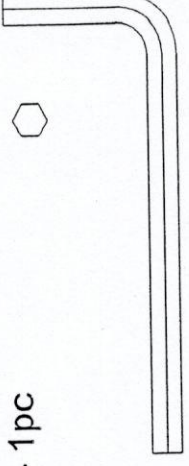F - Flat Washer M8 - 8pcs	
H - Spring Washer M6 - 8pcs	
G - JCBC Bolt M6 x 35mm - 8pcs	
A - Allen Key M4 - 1pc	

FULL BED

the all Side Rail to bracket of Headboard Panel (1) and Footboard Panel (2).
CBB Bolt (C) and Allen Key M5 (B) to fix.

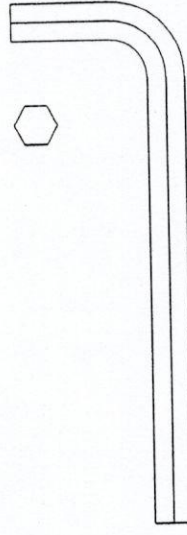


ASSEMBLY INSTRUCTION

FULL BED

Step 7.

and tighten the Slat Support (6) to Headboard Panel (1) and Footboard Panel (2). Adjusting the leg adjuster to the floor.

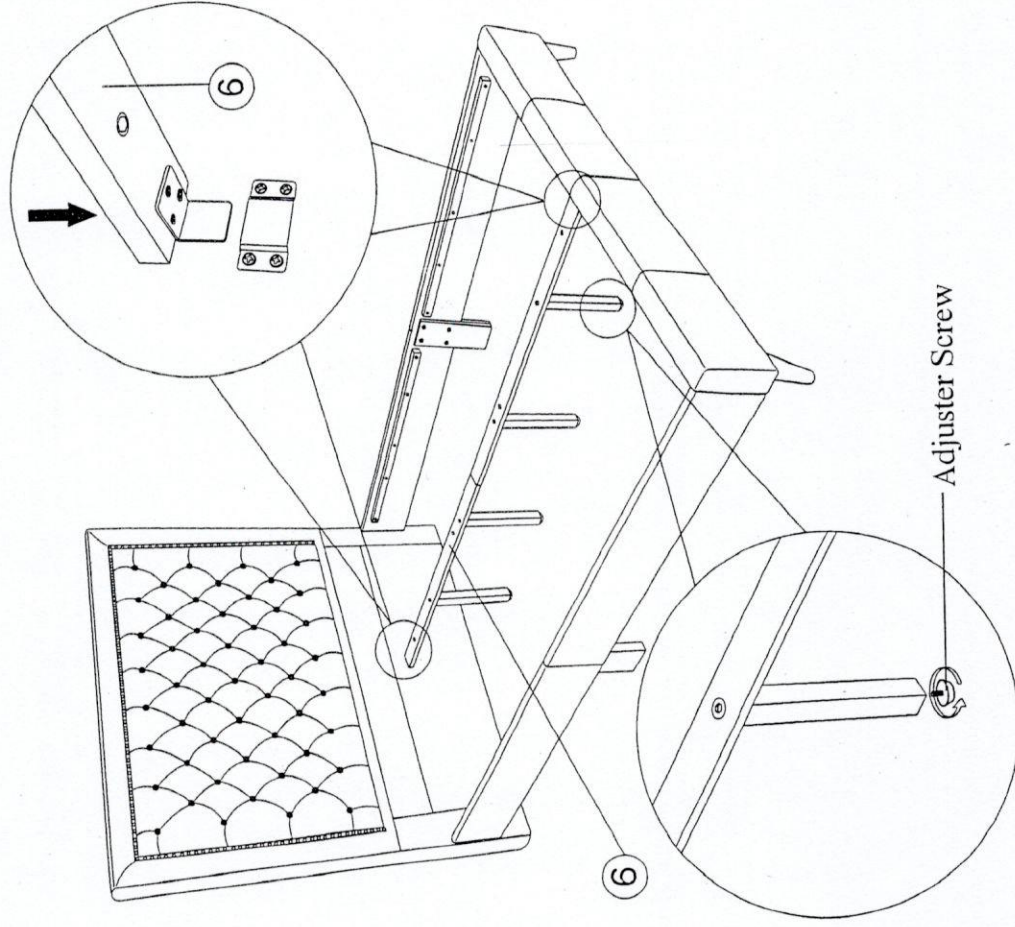



ASSEMBLY INSTRUCTION

FULL BED

STEP 8.

Attach and tighten the Slat (8) to Slat Support and Side Rail. Use CBS Screw (J) and screwdriver, JCBC Bolt (G) and Allen key M4 (A) to fix.

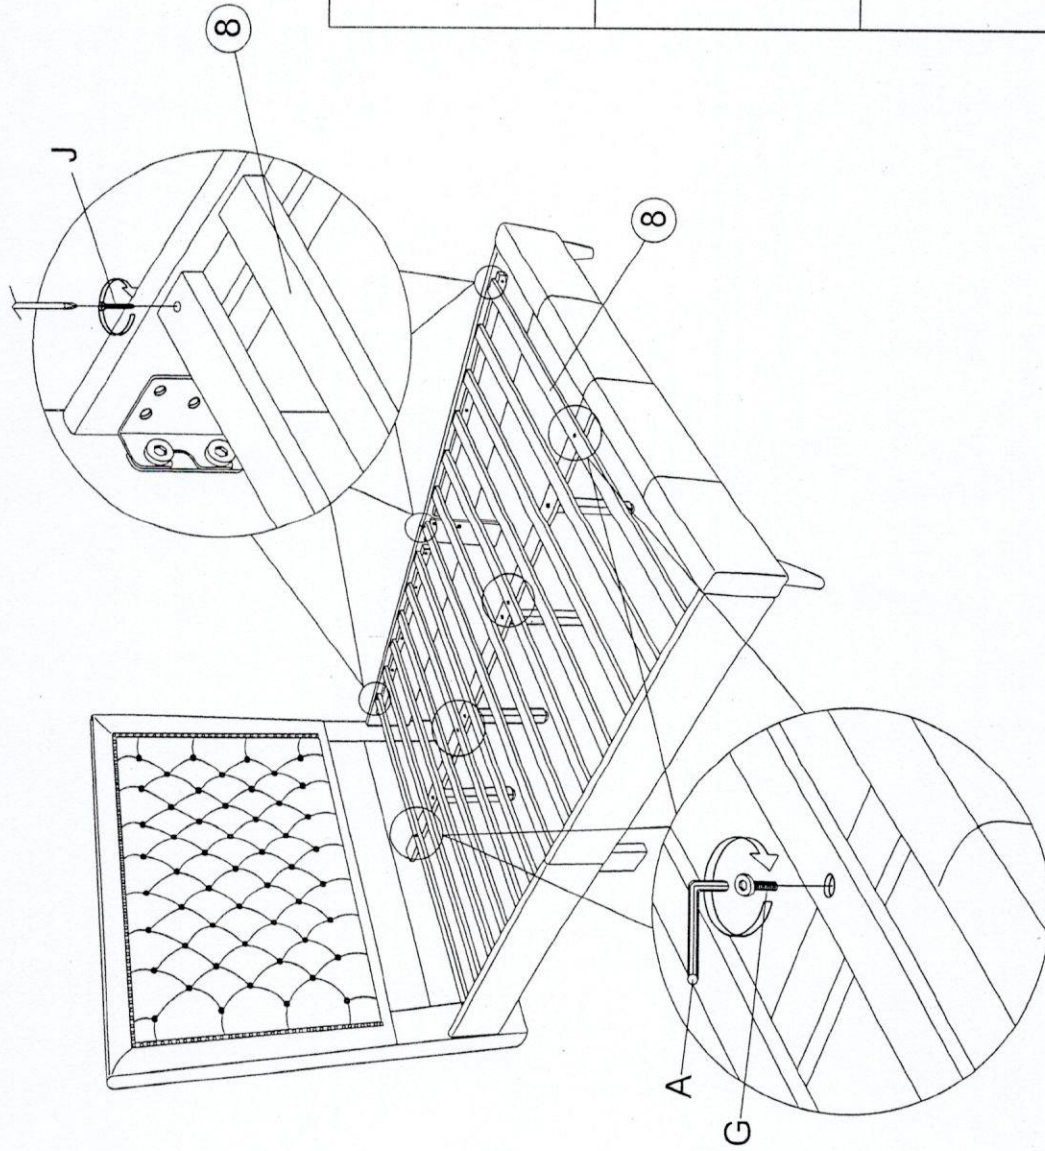

G - JCBC Bolt M6 x 35mm - 4pcs		
J - CBS Screw M4 x 32mm - 6pcs		
A - Allen Key M4 - 1pc		