

to Required: Flathead screwidiver, Philips screwidiver, pliers, wire culturs, who safeppers, electrical tape, safety glasses.

12 Source: (1) 120V LED \*190V DIMAARI E (4000K)

Instaled Assembly Time: 10-20 minutes

partition: Identify and impact all parts before beginning installation. Check package content let and diagrams below to be sure all parts are


part. If any parts are missing or demaged, do not allempt to assemble, Install, or operate the fidure. Context customer service for replacement.


## Warnings and Cautions

We strongly recommend that a licensed, profes Turn off electricity at circuit breaker or main flase box before installation. Consult a licensed electricism if in doubt. These instructions are provided for your safety. It is very important you read them completely before installing the focuse. We strongly recommend that a licensed, professional electricism perform the installation.

Disconnect fixture from power source before replacing bufbs. Make sure bufbs are given sufficient time to cool before removal STEP 1 - Attach Mounting Screws, Lock Washen

8

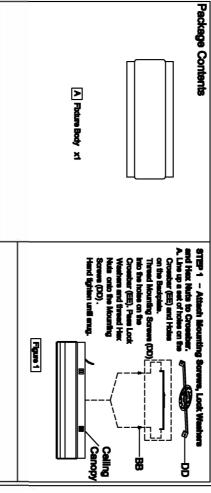

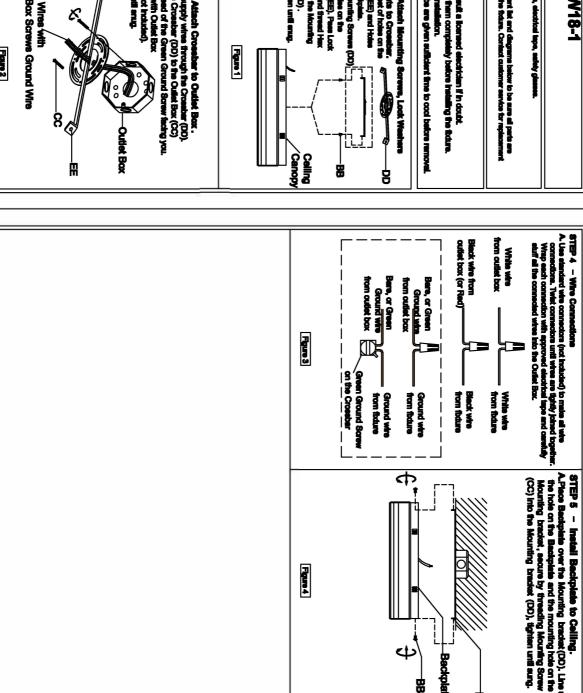

8

200 2pos

Electrical Marrets Outlet Box Screw

lighten until snug

ecure It with Outlet Box

(not included)

Mounting Screw

8

₹

8

8

Supply Wires with Outlet Bax Screws Ground Wire

g

Figure 2

PART

DESCRIPTION QUANTITY

Hardware Contents