

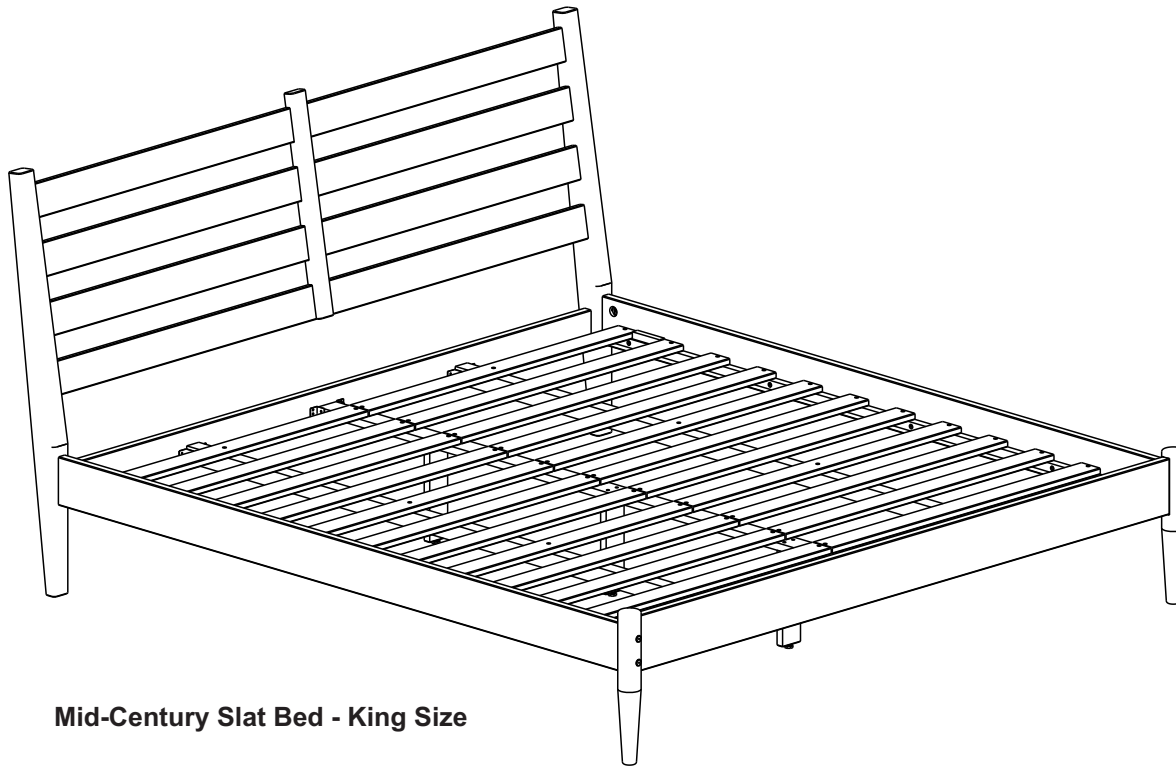
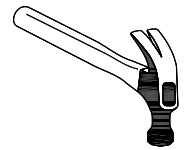


ASSEMBLY INSTRUCTIONS

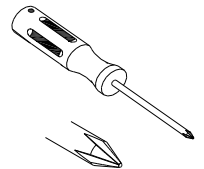


Mid-Century Slat Bed - King Size

01:20 Hs

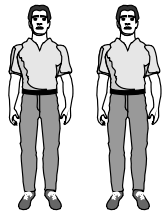

HARDWARE INCLUDED



A - 10,0x50 Wood Dowel
Qty. 28



B - 4,0x40 Screw
Qty. 24




C - 3,5x16 Screw
Qty. 40




D - 3,5x30 Screw
Qty. 56




E - Screw Nut
Qty. 08




F - Allen Key
Qty. 01

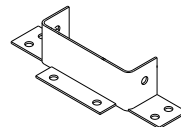


G - Support Bar
Qty. 02




H - 1/4x100 Screw
Qty. 08




I - 7,0x50 Screw
Qty. 06



J - Bed Frame Separator 98mm
Qty. 02

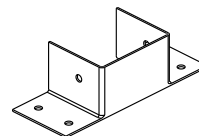


K - Support Bar
Qty. 04




L - 4,0x30 Screw
Qty. 08


PARTS INCLUDED

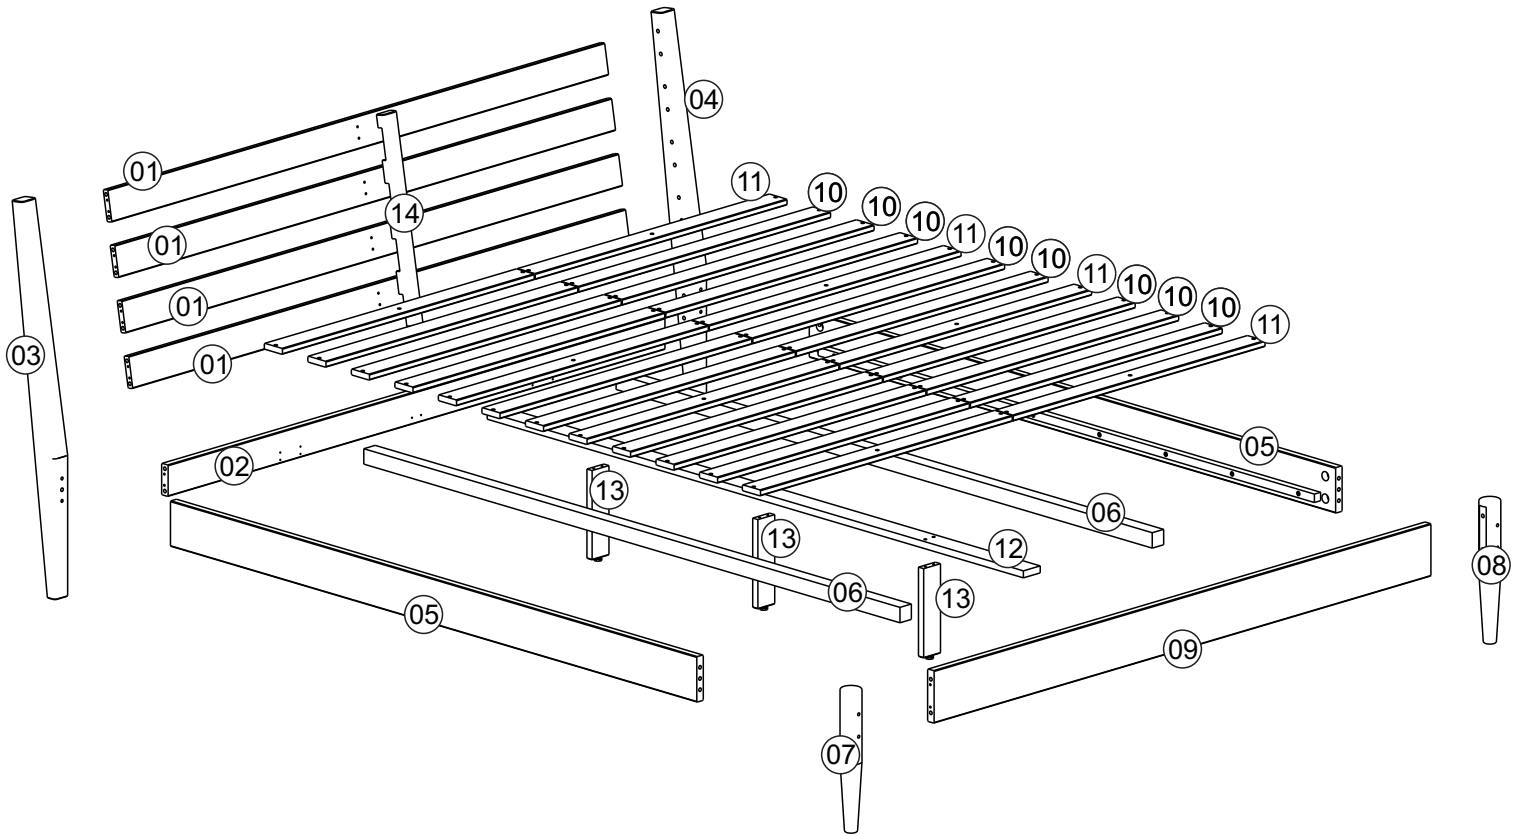


STEP 1

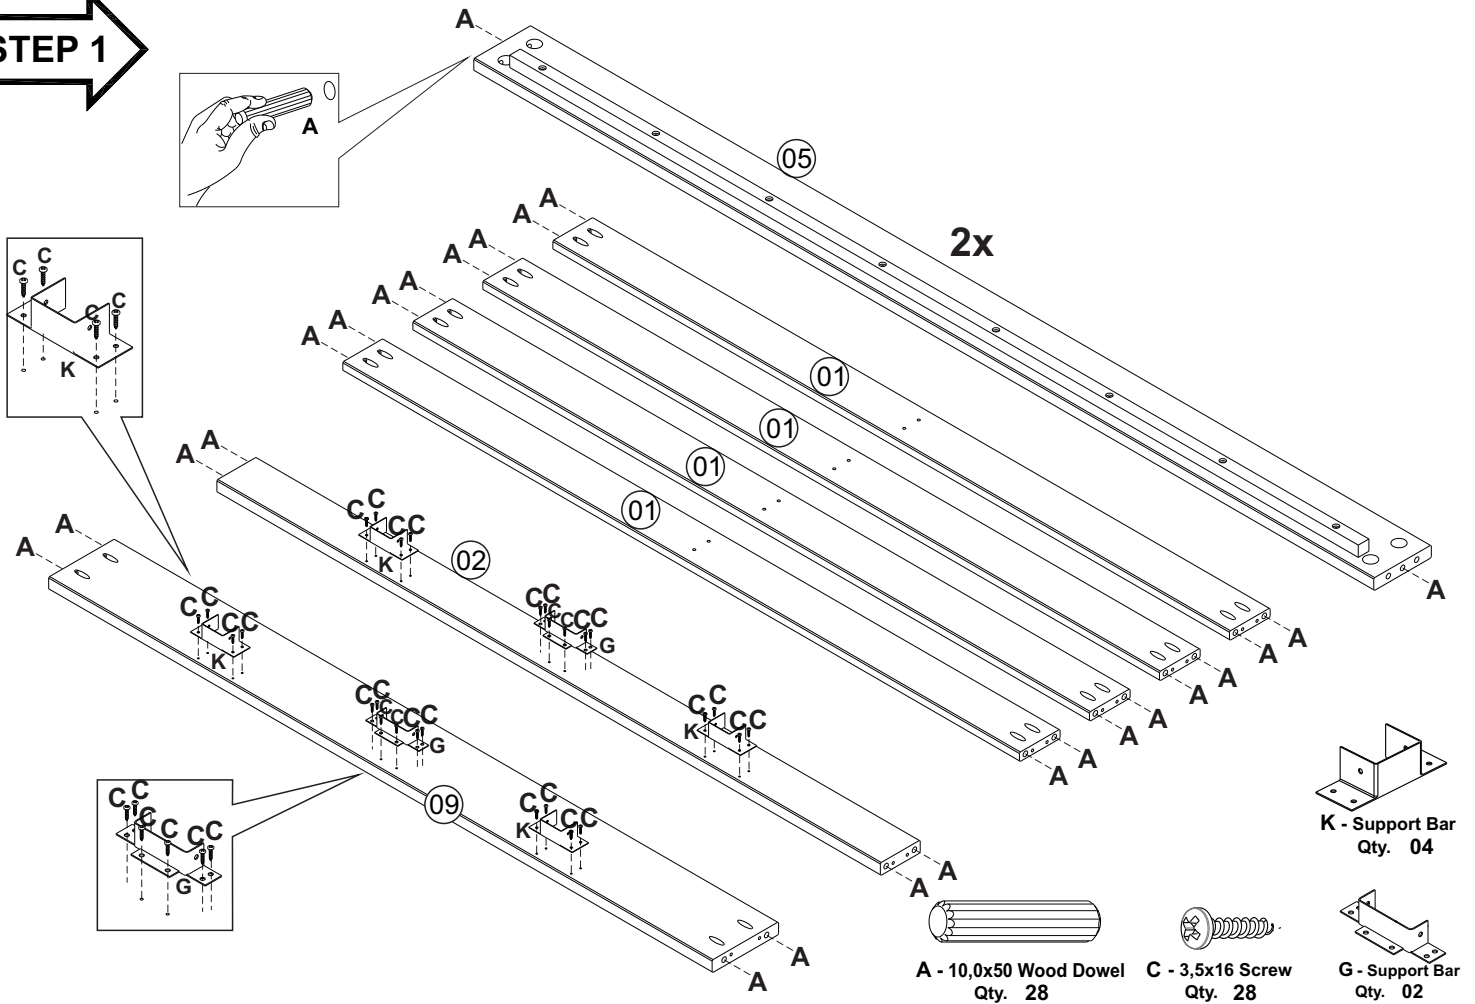


STEP 2

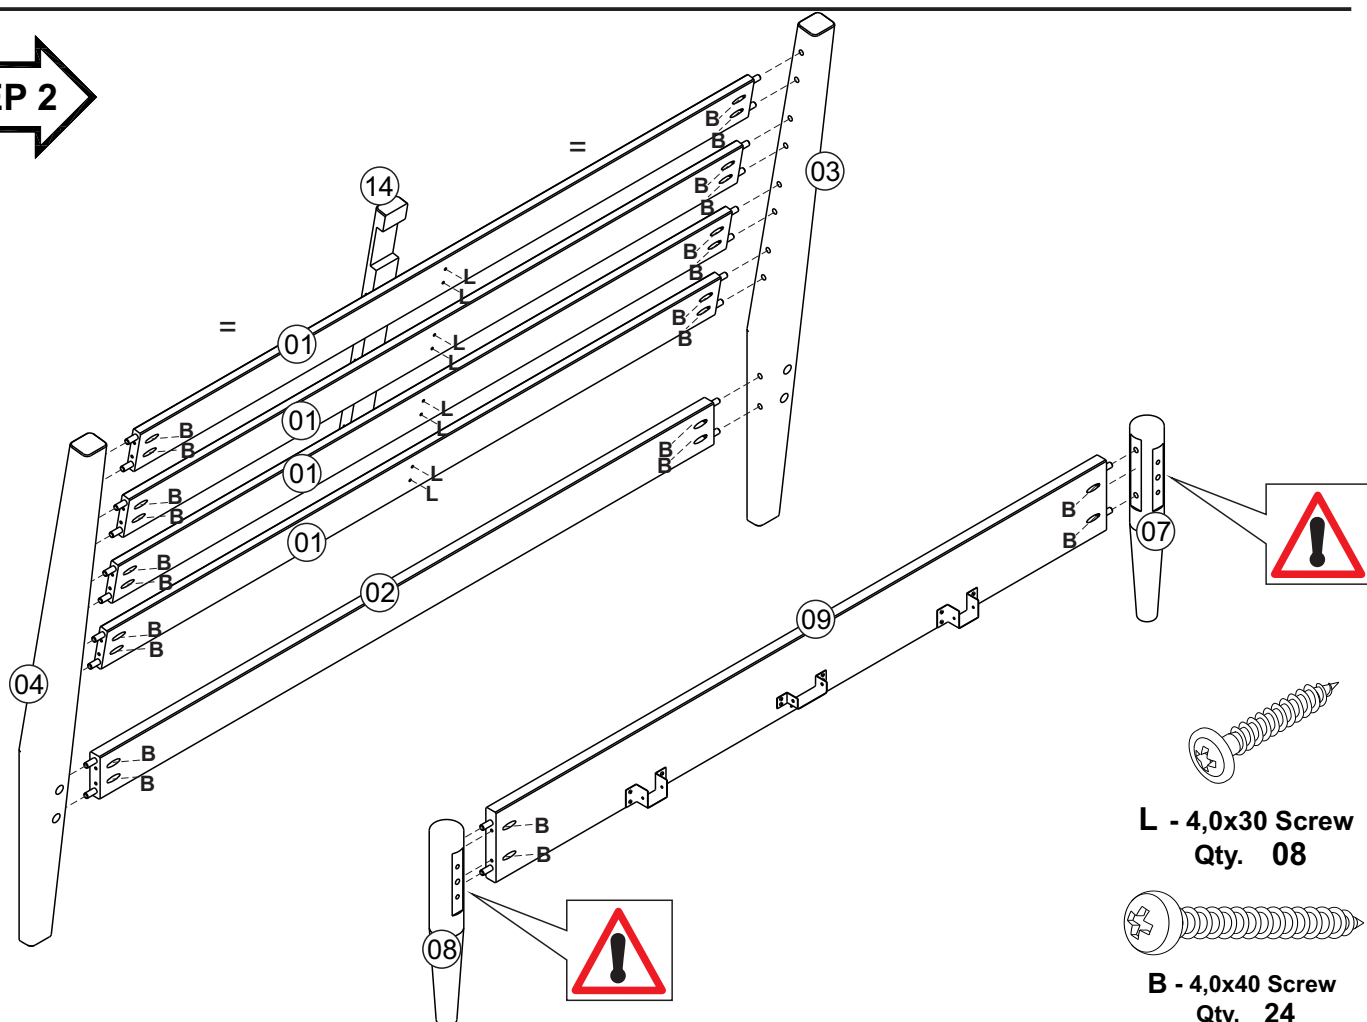


STEP 3

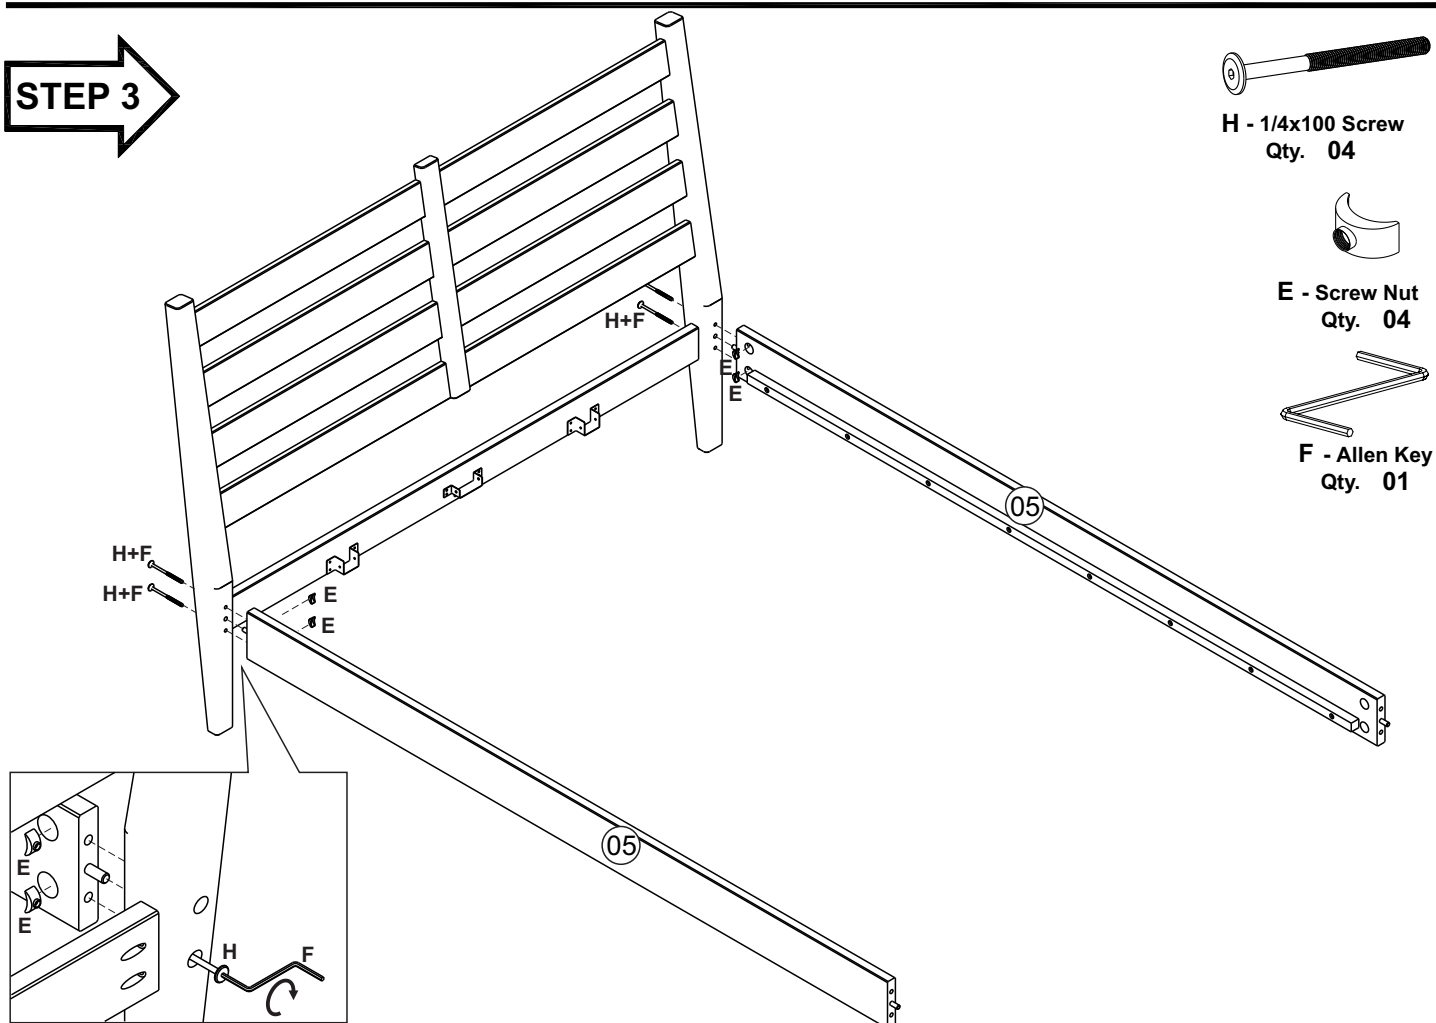



STEP 4

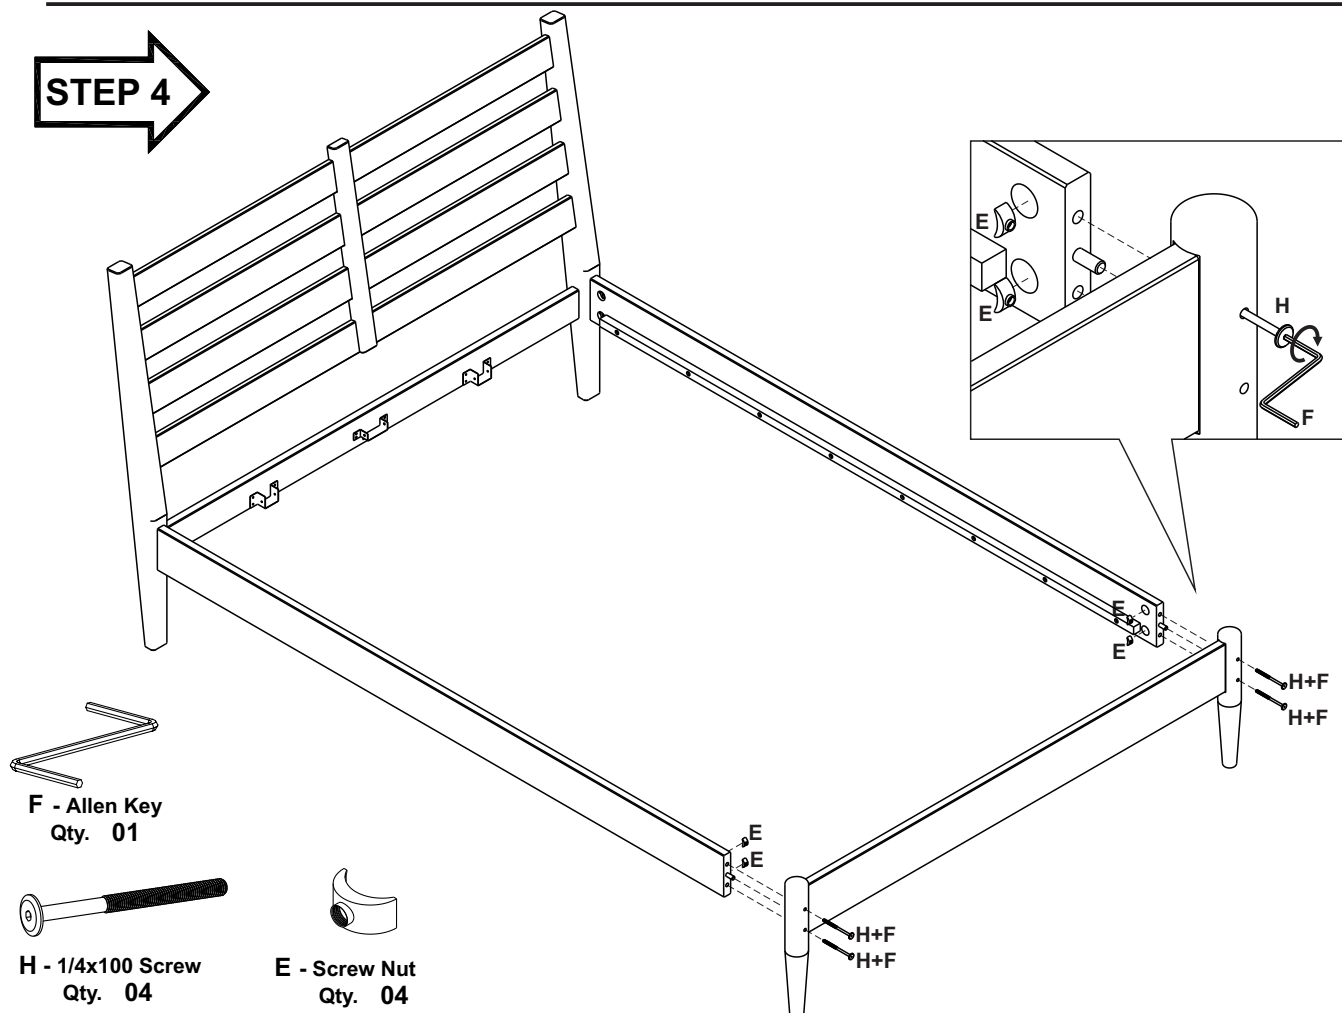

STEP 5


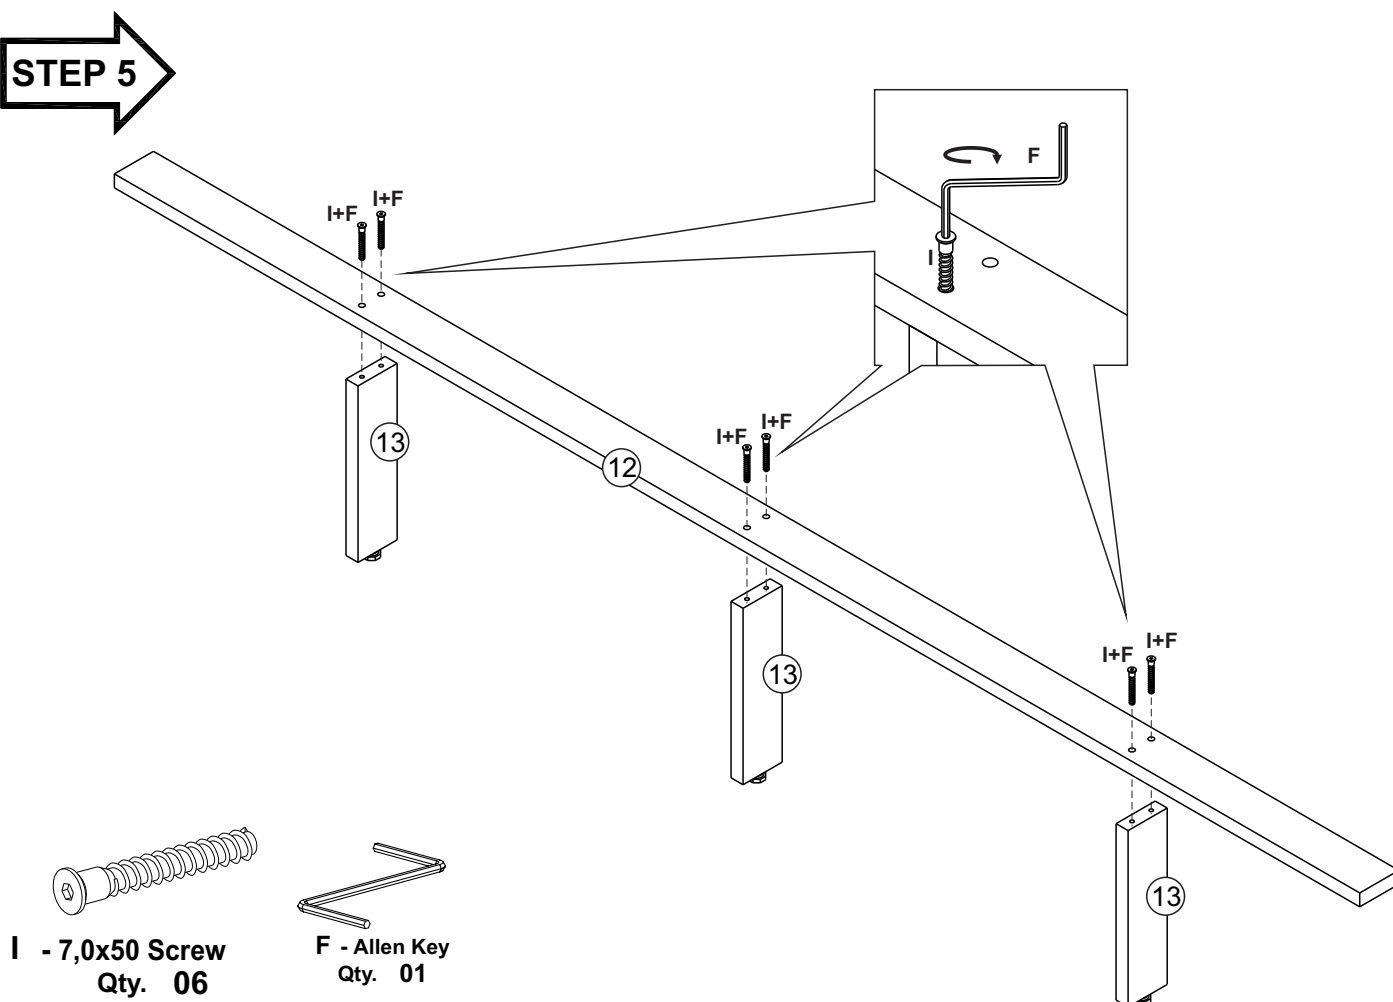


STEP 6

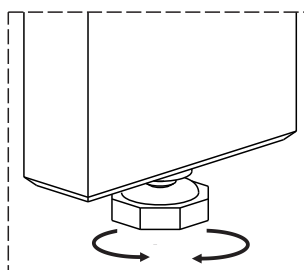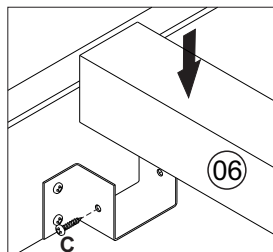


C - 3,5x16 Screw
Qty. 12

STEP 7

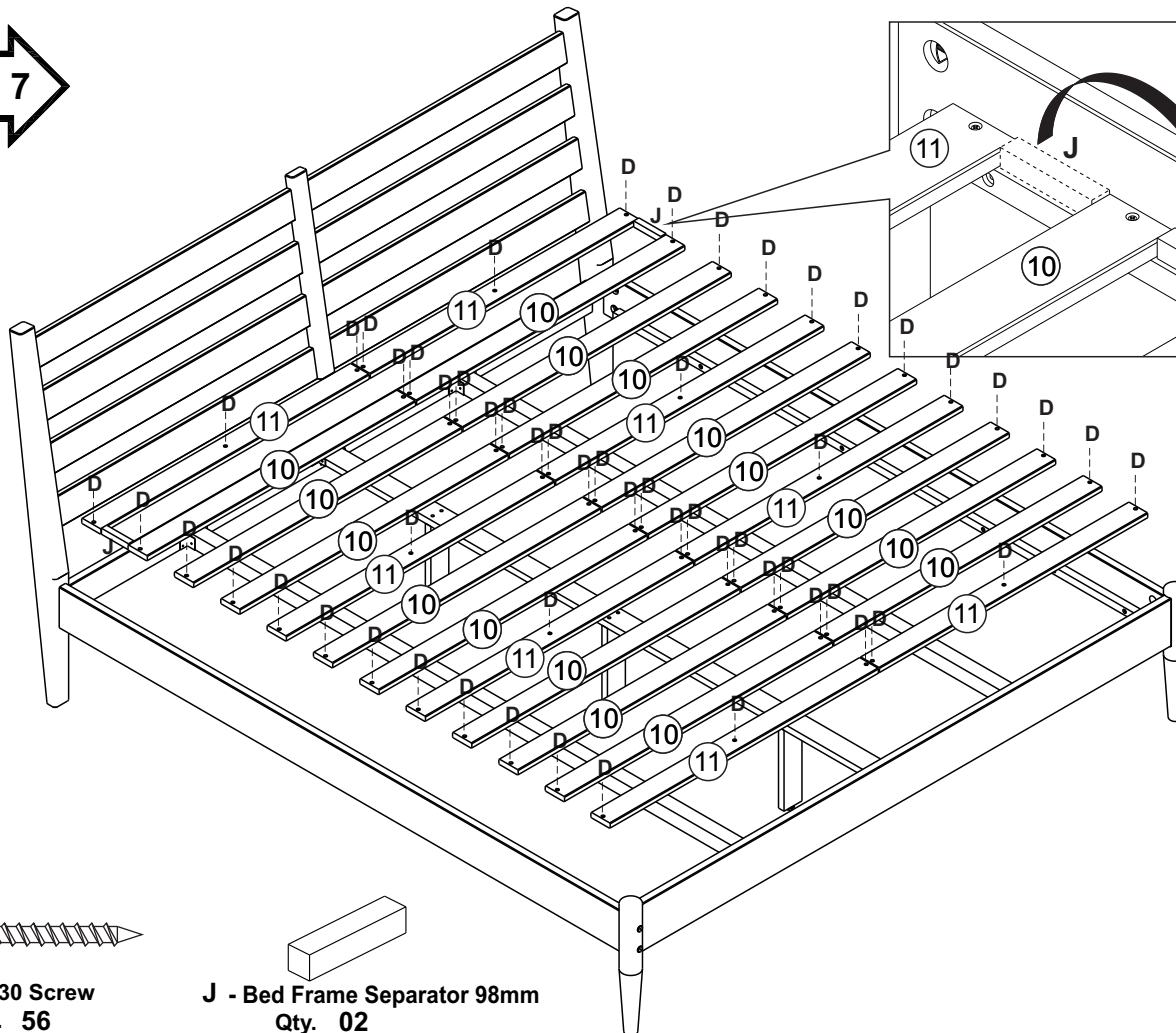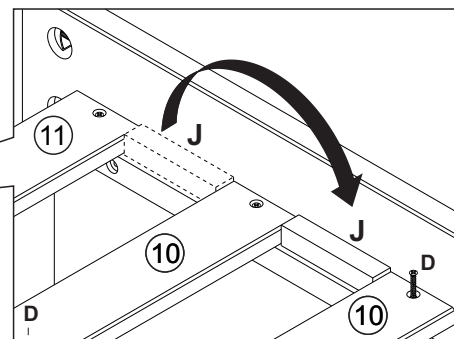

D - 3,5x30 Screw
Qty. 56



J - Bed Frame Separator 98mm
Qty. 02