

ASSEMBLY INSTRUCTION


QUEEN BED

IMPORTANT SAFETY NOTICE READ CAREFULLY BEFORE BEGINNING ASSEMBLY!

- * Before you begin, please read the Assembly Instruction carefully, identify all the parts, and hardware included. Do Not skip any steps and follow the assembly steps in order.
- * Place parts on the carton while installing to prevent damage or scratches. Be sure to check all packing materials carefully for small parts may have come loose inside the cartoon during shipment. If parts are missing, contact the retailer from which your purchased the product to obtain any missing part. **DO NOT USE SUBTITUTE PART.**
- * Some steps may require two or more people, do not attempt by yourself as there is a risk injury.



NOTE: GLORY FURNITURE DISCLAIMS ANY LIABILITY FOR DAMAGES OR INJURIES WHICH MAY OCCUR DUE TO FAILURE TO PROPERLY FOLLOW ASSEMBLY INSTRUCTION, FAILURE TO PROPER ASSEMBLY OR FAILURE TO PROPERLY USE OF THE PRODUCT.

NOTE: YOUR UNIT MAY LOOK DIFFERENT IN APPEARANCE FROM THE ONE SHOWN IN THE ILLUSTRATIONS ON THIS INSTRUCTION SHEET.

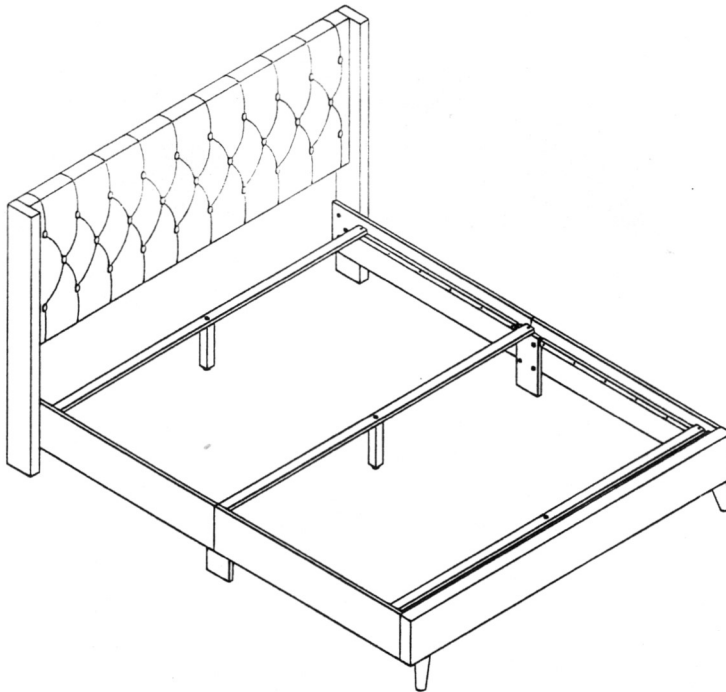

For missing parts/assembly questions call 201-565-6327

Required Tools : Screwdriver

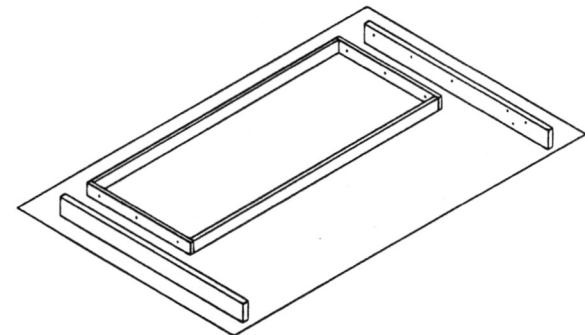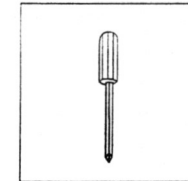










Please place on the carton while installing to prevent damage or scratches.


ASSEMBLY INSTRUCTION

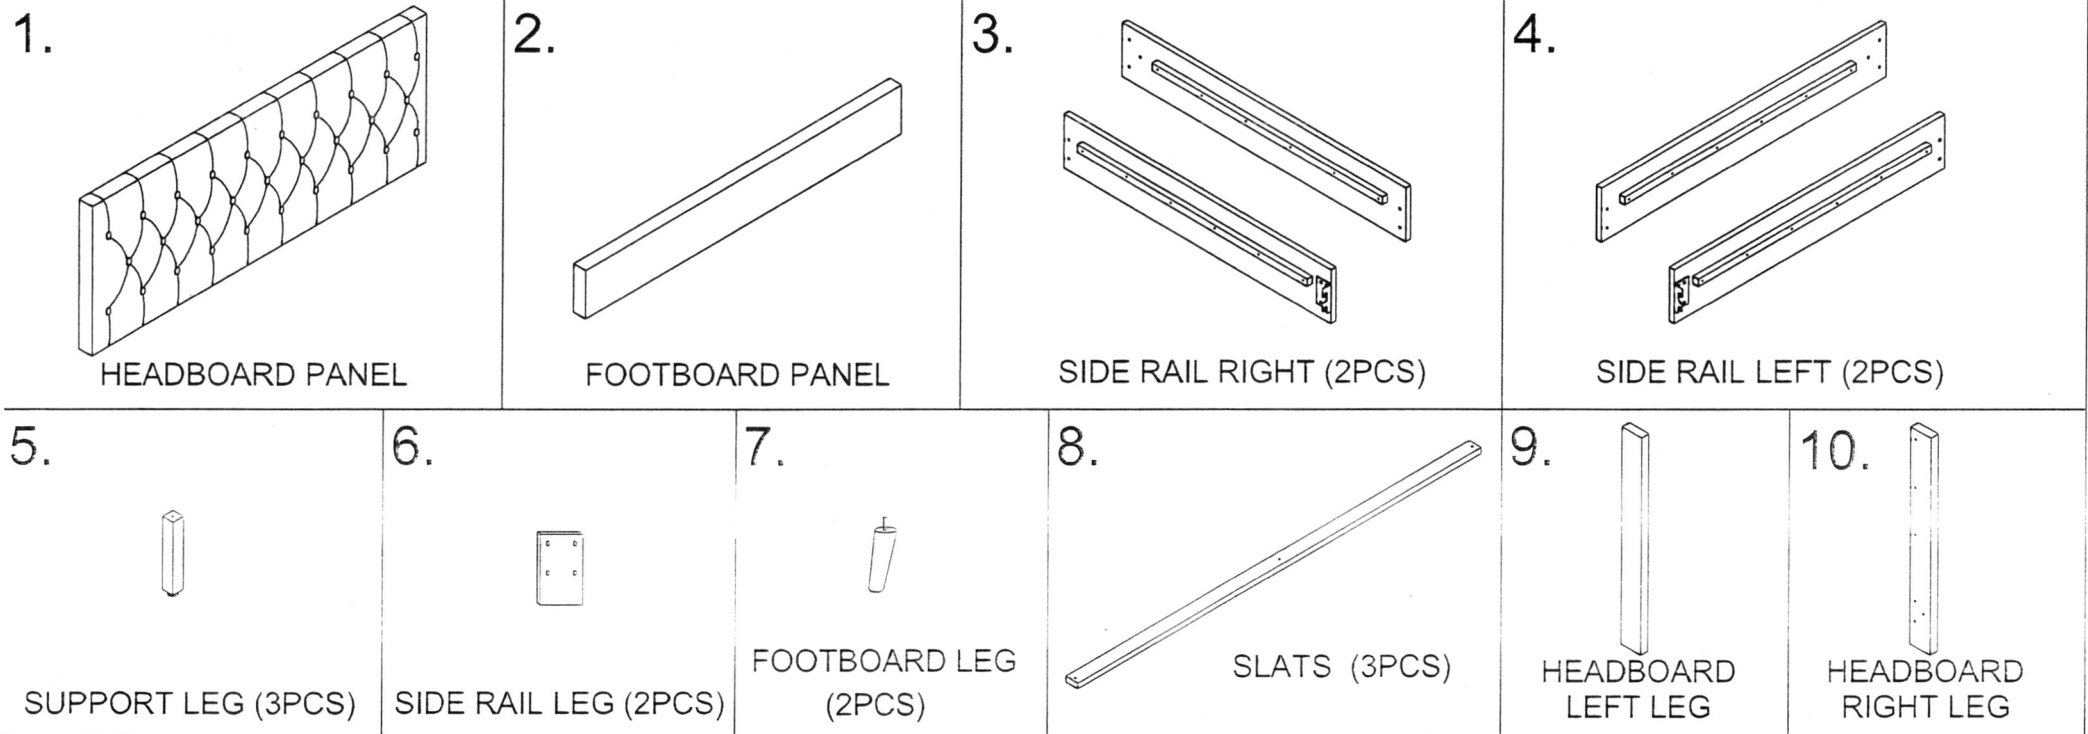QUEEN BED

ASSEMBLY PART



NO	HARDWARE DESCRIPTION	QTY
A.	Allen Key M5 	1PC
B.	Allen Key M4 	1PC
C.	JCBC Bolt M6 x 30mm 	17PCS
D.	JCBC Bolt M6 x 35mm 	6PCS
E.	Chipboard Screw M4 x 40mm 	2PCS
F.	Chipboard Screw M4 x 35mm 	6PCS
G.	Spring Washer 	23PCS
H.	Flat Washer 	23PCS
SCREW DRIVER NOT PROVIDE !!!		

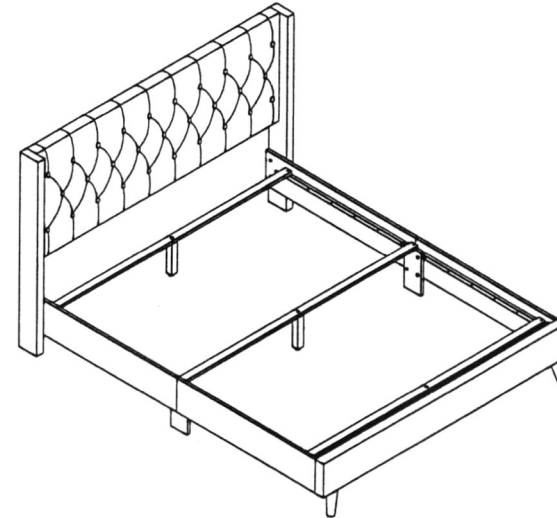


ASSEMBLY INSTRUCTION

QUEEN BED


STEP 1.

Attach the Headboard Panel (1) to Right Leg (10) and Headboard Left Leg (9). Use JCBC Bolt (C), Spring Washer (G), Flat Washer (H) and Allen Key (B) to fix.

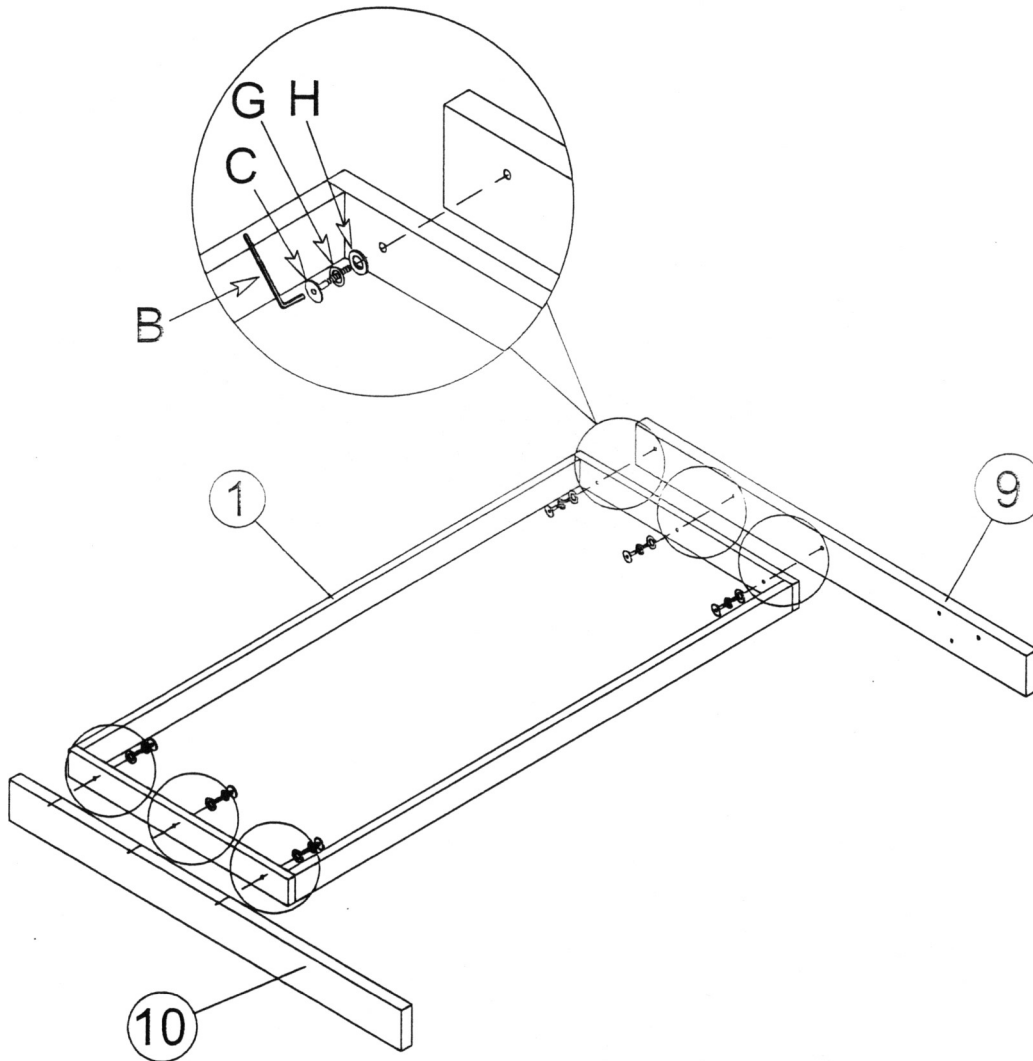

STEP 2.

Attach the Slats (8) to Support Leg (5). Used JCBC Bolt (C) Spring Washer (G), Flat Washer (H) and Allen Key (B) to fix.

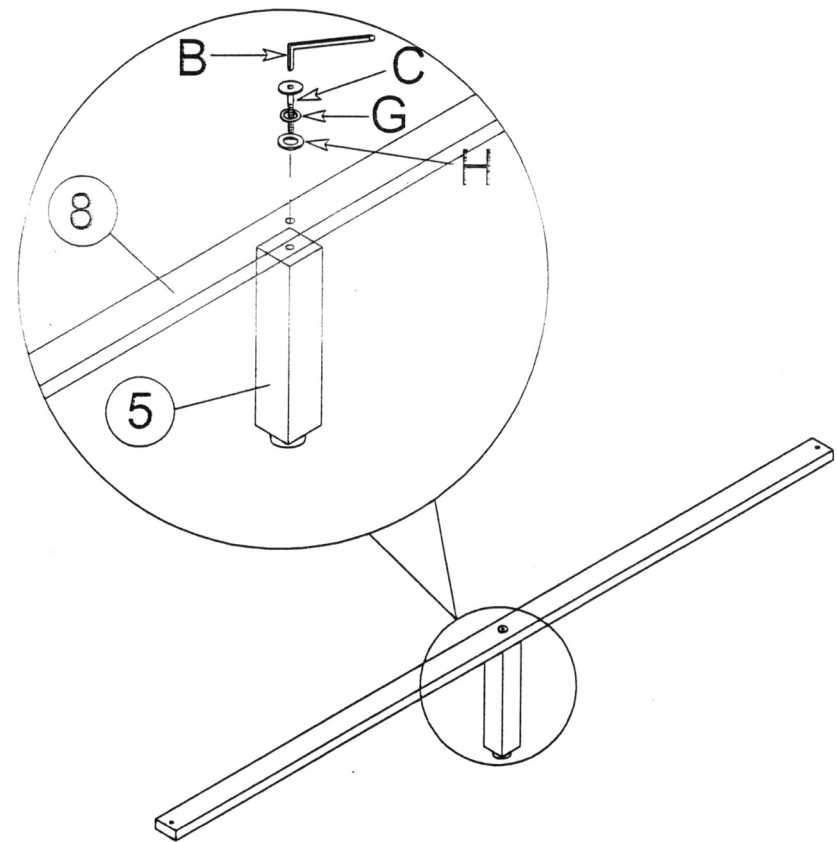


ASSEMBLY INSTRUCTION

QUEEN BED


STEP 3.

Attach and tighten the Side Rail Right (3) (2pcs) & Side Rail Left (4) (2pcs) to Side Rail Leg (6) (2pcs.) Use JCBC Bolt (C), Spring Washer (G), Flat Washer (H) and Allen Key (B) to fix.

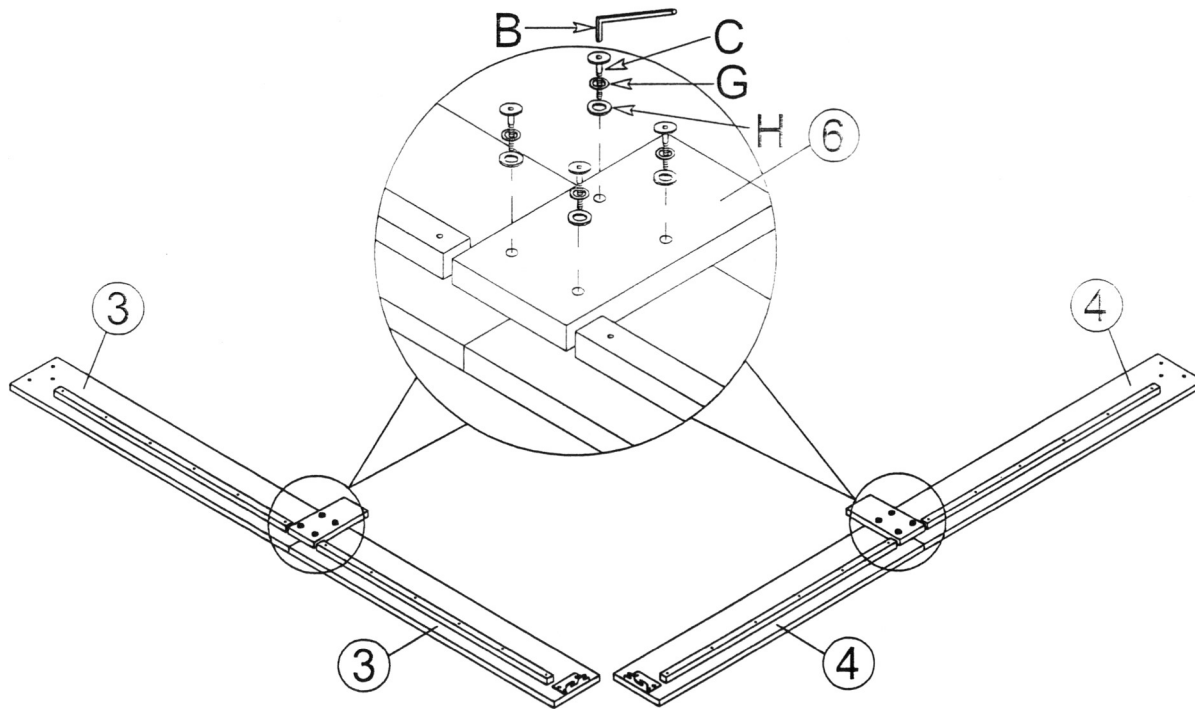

STEP 4.

Attached the Footboard Leg (7)(2pcs) to Footboard Panel (2). Use Screw M4 x 40mm (E) and Screwdriver to fix.

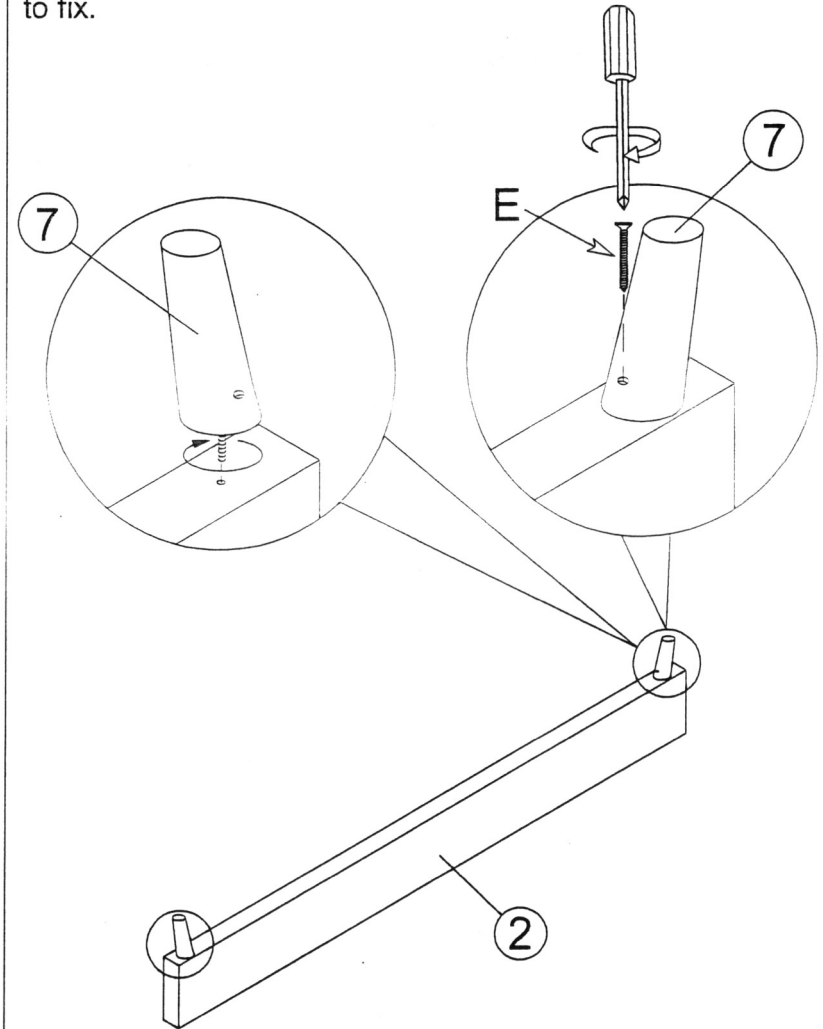


ASSEMBLY INSTRUCTION

QUEEN BED


STEP 5.

Attach and tighten the Side Rail Right (3) (2pcs) & Side Rail Left (4) (2pcs) to Headboard (1). Use JCBC Bolt (D), Spring Washer (G), Flat Flat Washer (H) and Allen Key (B) to fix.

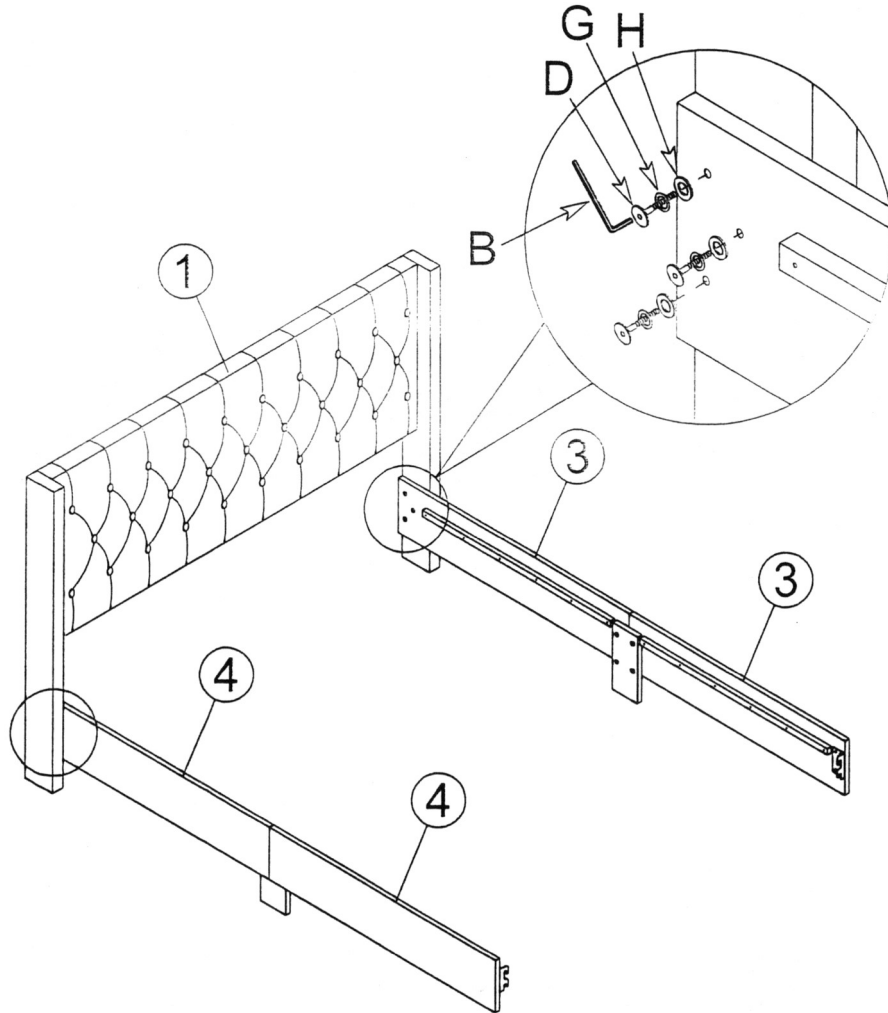

STEP 6.

Attach (hook) the Side Rail to Footboard Panel (2). Use JCBC Bolt & Allen Key M5 (A) to fix.

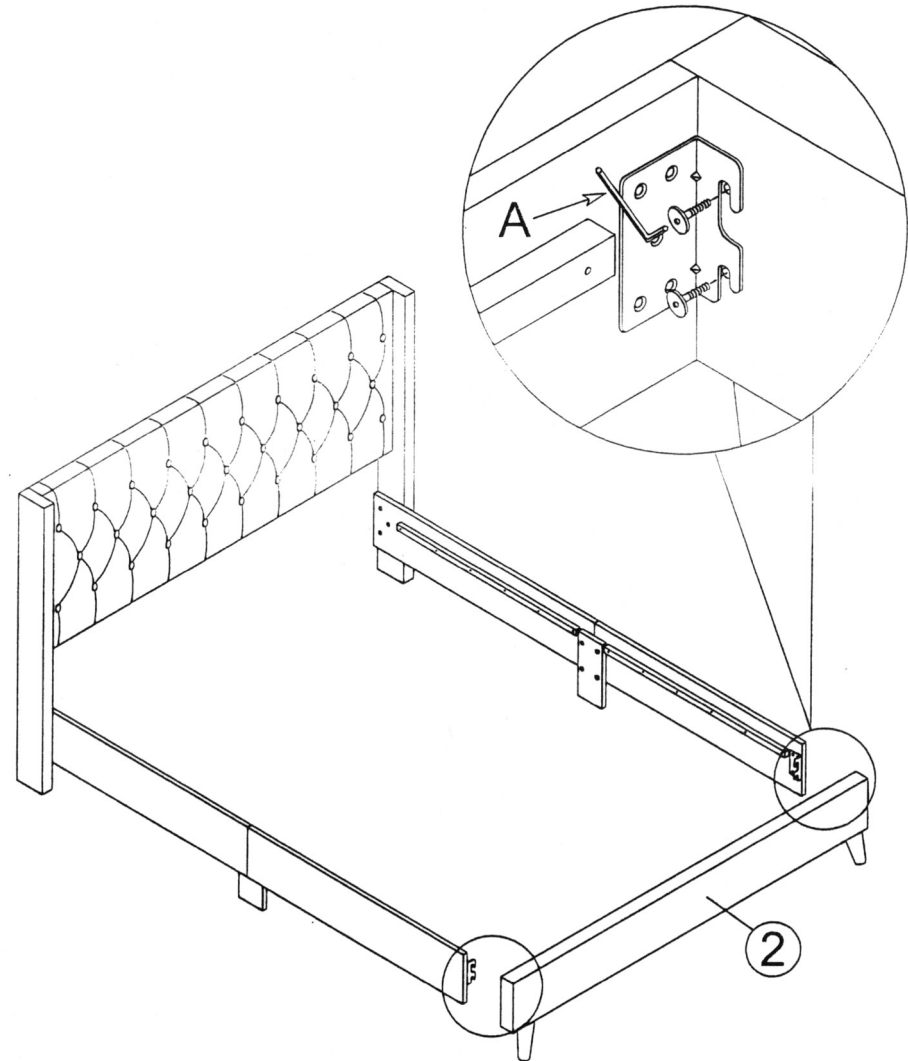

ASSEMBLY INSTRUCTION

QUEEN BED

STEP 7.

Attach and tighten the Slats (8) to Side Rail. Adjusting the leg adjuster to the floor. Use Screw M4 x 35mm (F) and Screwdriver to fix.

