


# STANDARD FLUSH MOUNT INSTALLATION INSTRUCTIONS (Key Hole)

2011A-E REV. 2/97

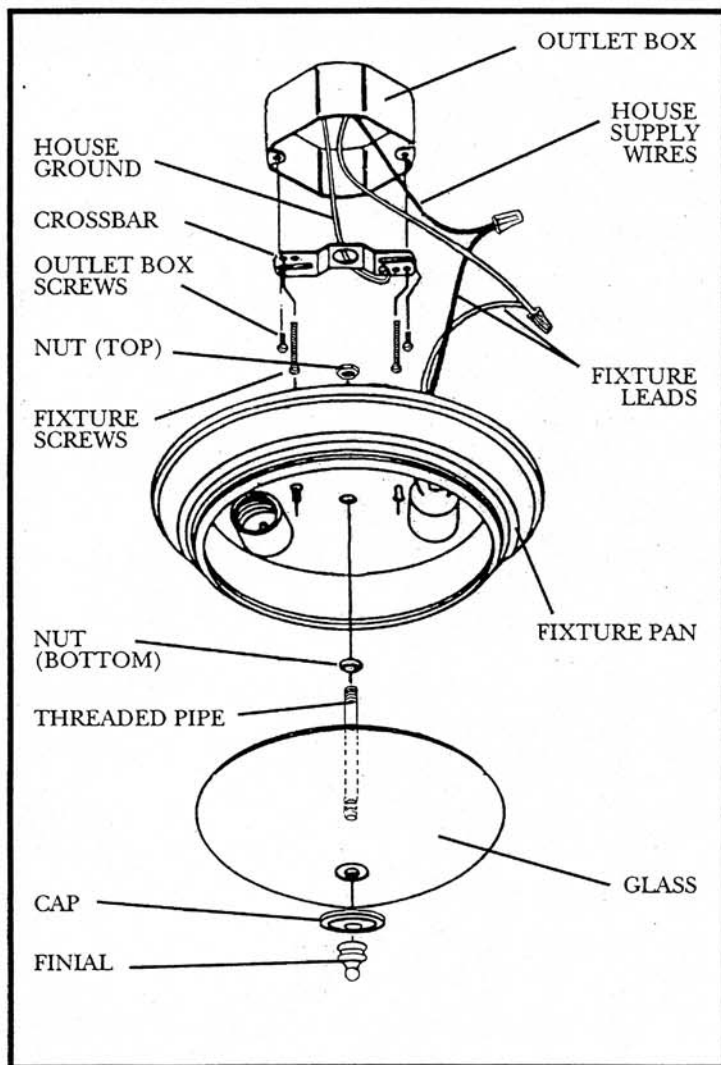

1. Before beginning the installation, carefully unpack and identify all parts, referring to the illustration.
2. **DISCONNECT POWER DURING INSTALLATION.**
3. Install the CROSSBAR on the OUTLET BOX, using (2) OUTLET BOX SCREWS (not supplied).
4. Begin threading the (2) FIXTURE SCREWS into the appropriate threaded holes in the CROSSBAR. (Check the CROSSBAR against the FIXTURE KEYHOLE SLOTS to ensure proper fit.)
5. Prepare the FIXTURE: Install the THREADED PIPE, using (1) NUT above the FIXTURE PAN, and (1) NUT below the PAN, as shown. Tighten both NUTS with a wrench or pliers. Make sure to allow enough THREADED PIPE to extend beneath the FIXTURE to permit at least (4) full threads of the FINAL to engage and hold the GLASS securely.
6. Make the wiring connections: Using the GROUND SCREW, fasten the HOUSE GROUND to the CROSSBAR, as shown. Connect the HOUSE WHITE WIRE to the FIXTURE WHITE (or RIBBED) LEAD; connect the HOUSE BLACK (or RED) WIRE to the FIXTURE BLACK (or SMOOTH) LEAD.
7. Carefully tuck all wiring back into the outlet box. Locate the FIXTURE PAN over the box, positioning the SCREW heads through the large openings of the keyhole slots. Rotate the PAN to seat the screws, and tighten securely.
8. Install the bulbs. (See markings and/or labels on the fixture for maximum wattages – DO NOT OVER-LAMP.) Secure the GLASS with CAP and FINIAL, taking care not to over-tighten.

# MURRAY FEISS