


CHIC TEAK

Assembly Instruction

INSTRUCTION DE MONTAGE
MONTAGEANLEITUNG
SAMLEVEJLEDNING

MAKE SURE THE LETTERS
MATCH BEFORE ASSEMBLING
NEED ASSEMBLY ASSISTANCE?
CALL US AT 866-814-8325

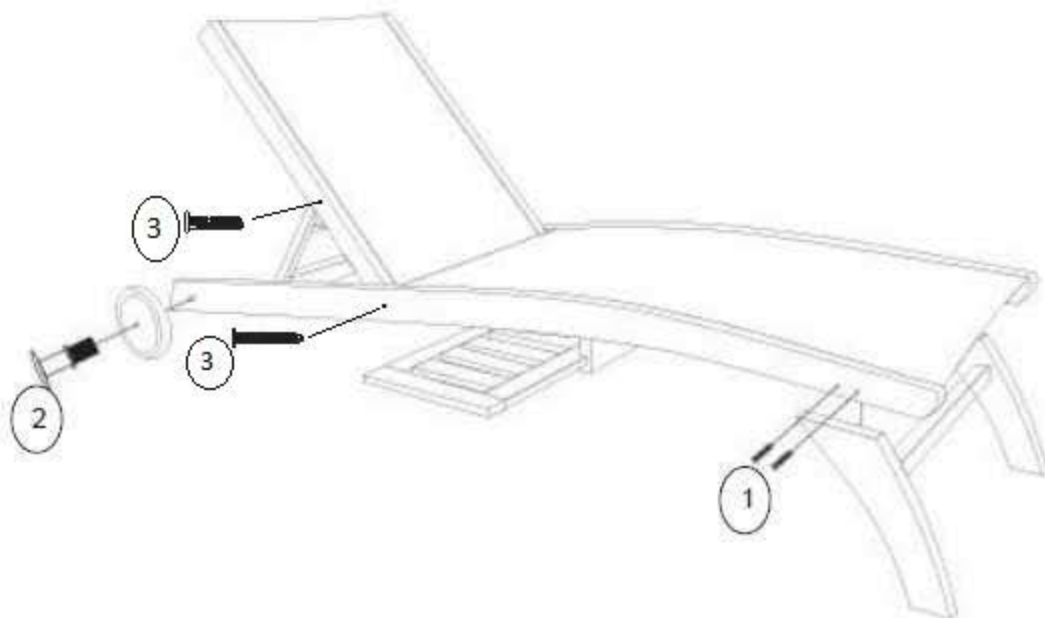

*Make sure to use Gorilla Glue (Not Included)
on all wood joints before assembly*

Code

AK30

Hardware



1. Custom Bolt (4 Pcs)




2. Bolt (2Pcs)



3. F.Bolt (4Pcs)

Tool



Socket Wrench 4m/n Rt

Total Section

3 Section