

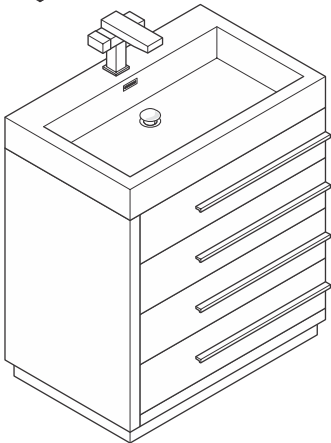
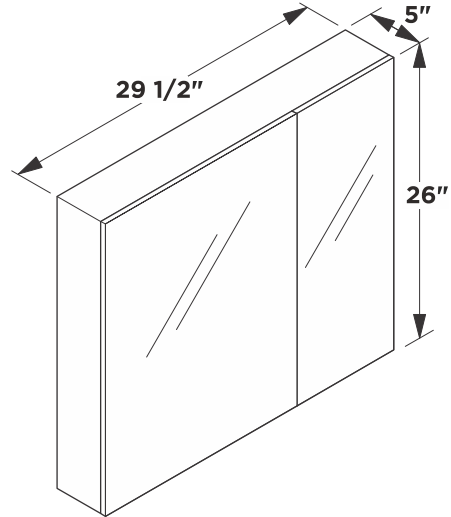


Medicine Cabinet

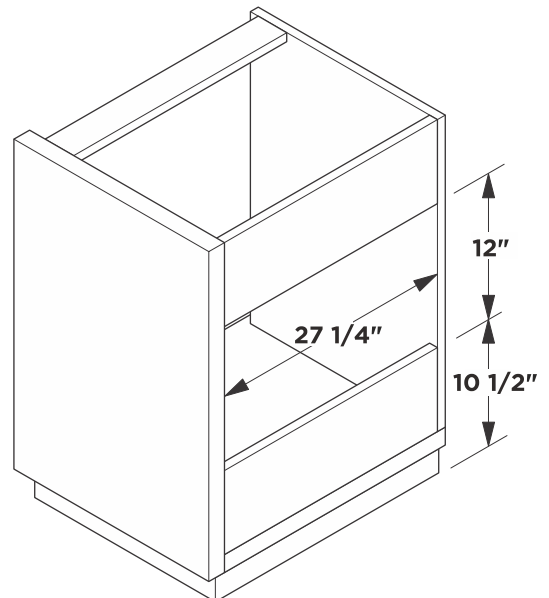

Vanity Front

Vanity Back

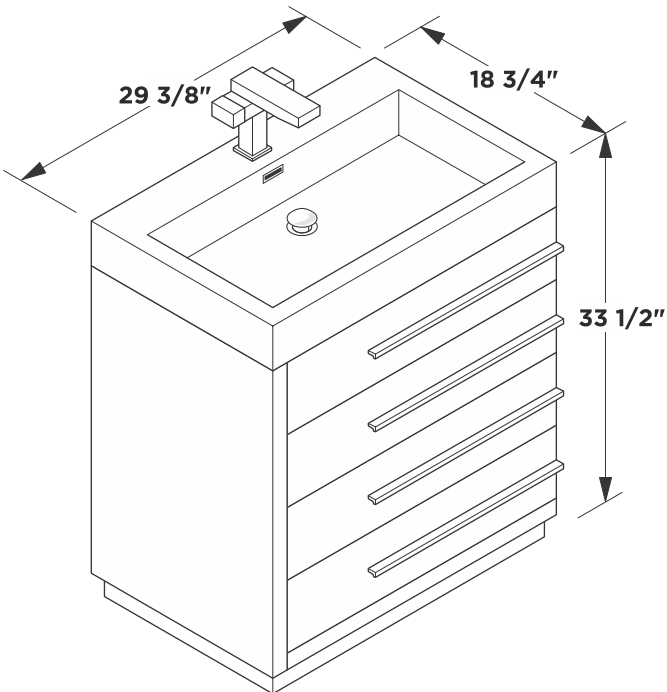





Note: All dimensions and specifications are approximate and subject to change without notice.



TOOLS FOR ASSEMBLY




PARTS

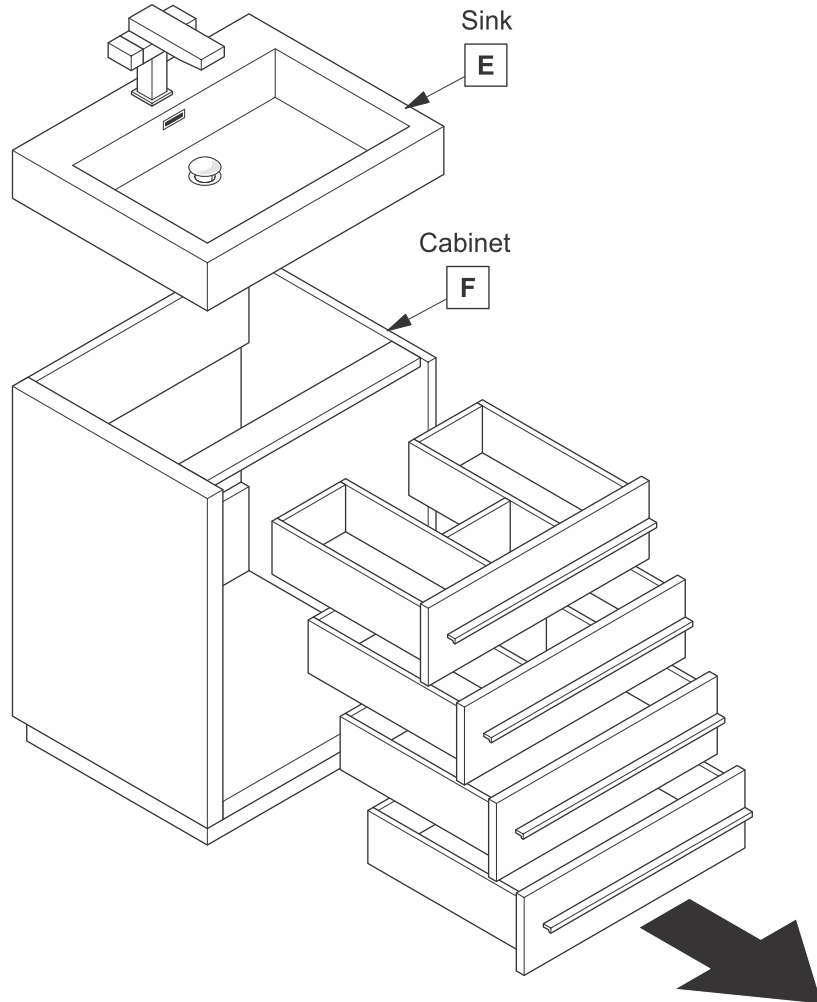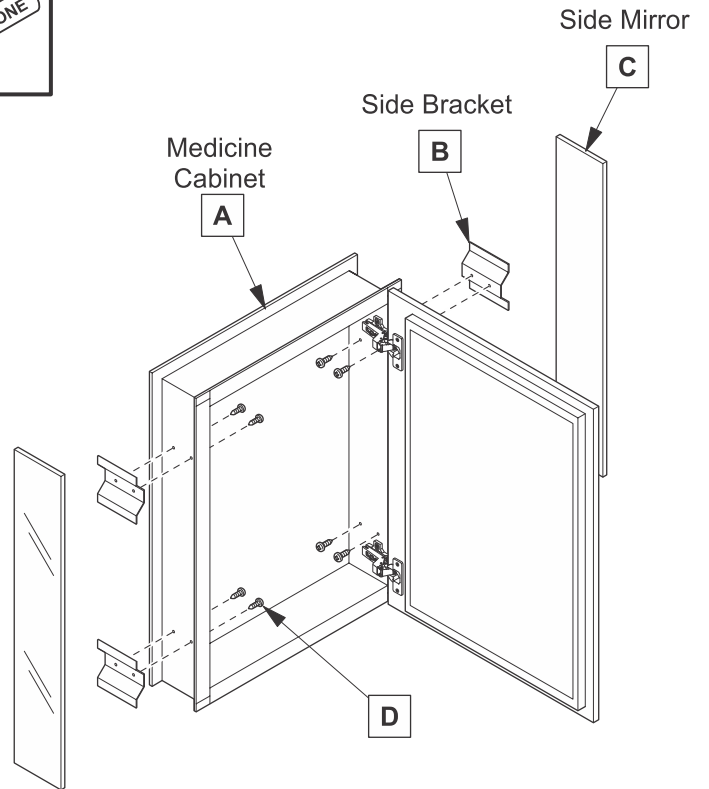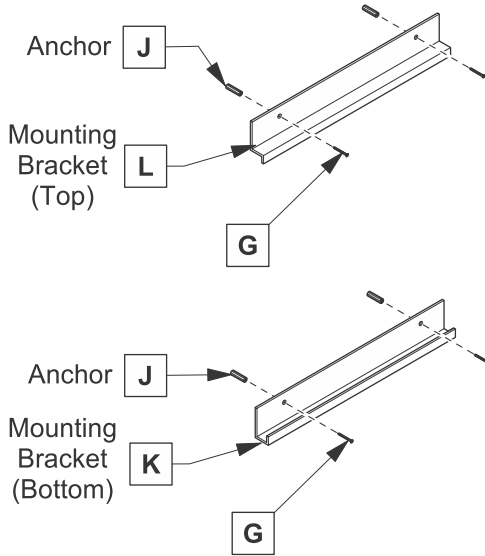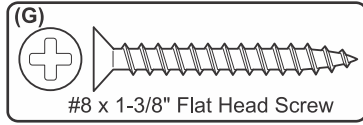


DRAWER REMOVAL & INSTALLATION

REMOVAL

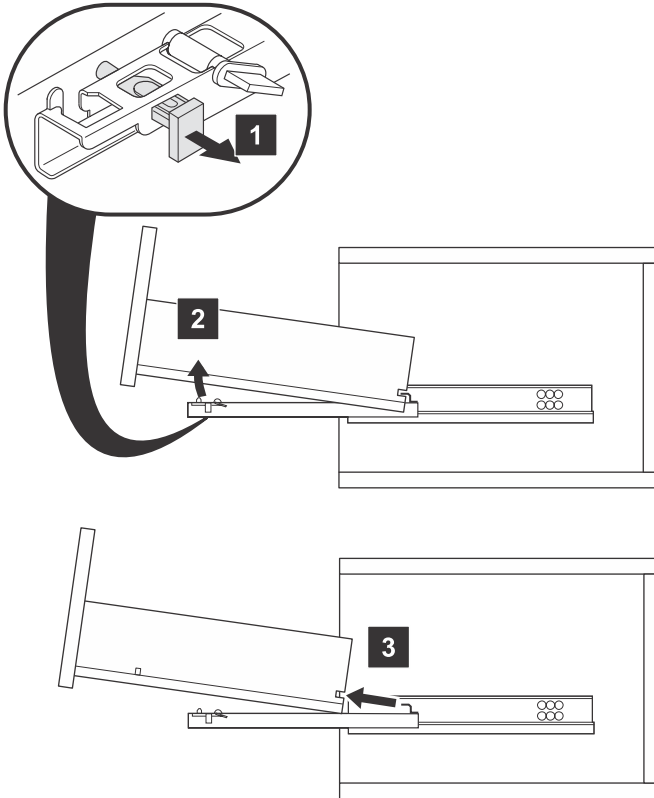


INSTALLATION

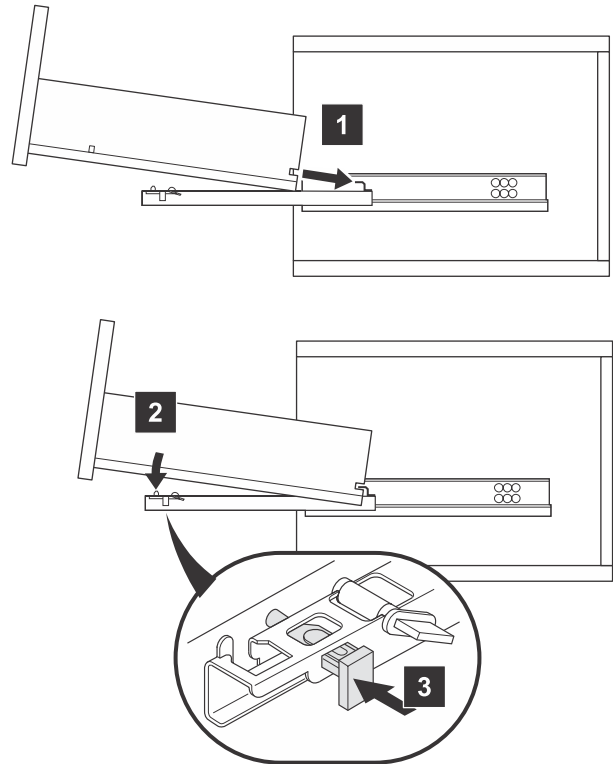


1 Remove drawer (M)


2 Install cabinet (F)

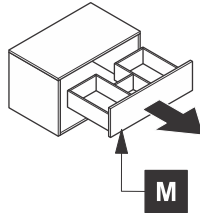

IMPORTANT: Consult an expert for the proper screws/bolts to use when attaching to various wall constructions. Screws provided do not attach to all wall construction types.

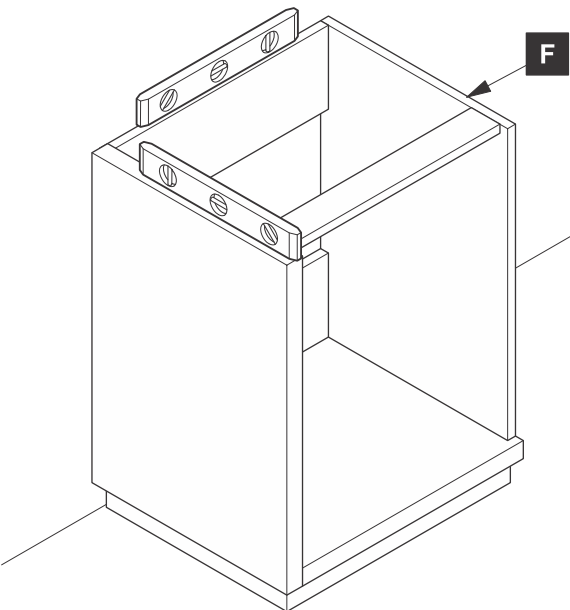


3 Apply silicone and install sink (E)

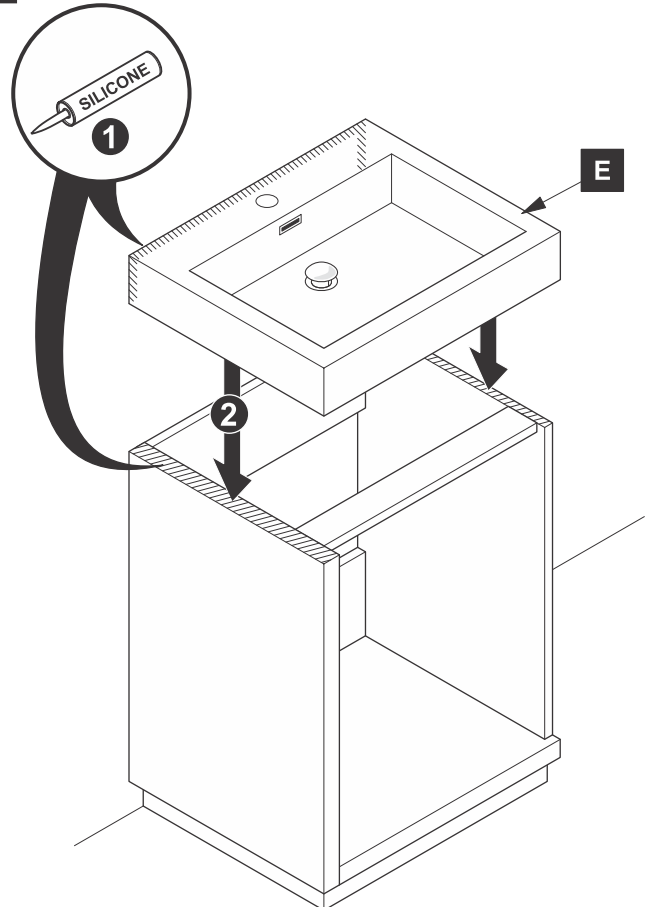


MEDICINE CABINET INSTALLATION


1 Install side brackets (B)

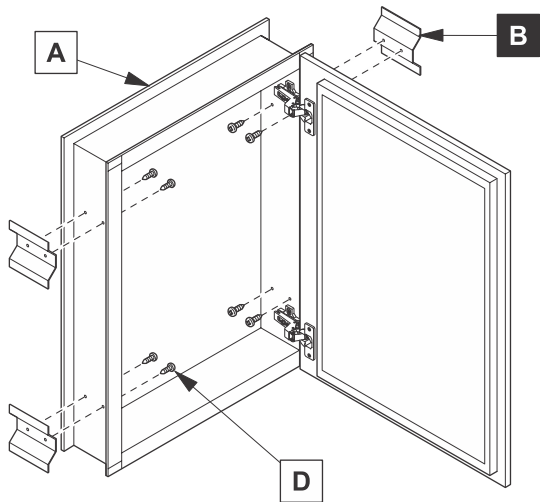



2 Install side mirrors (C)

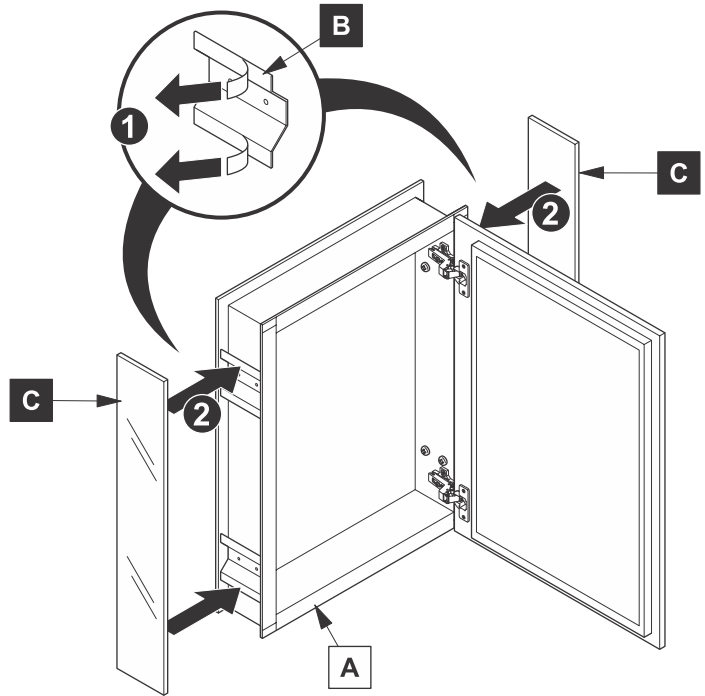

3 Mark cabinet (A) location


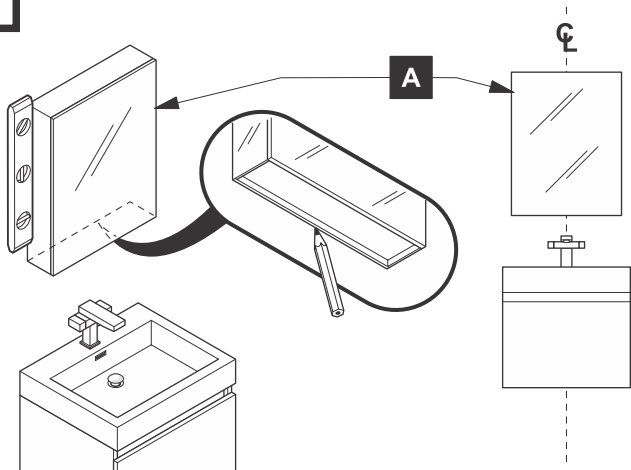


5 Install cabinet (A)

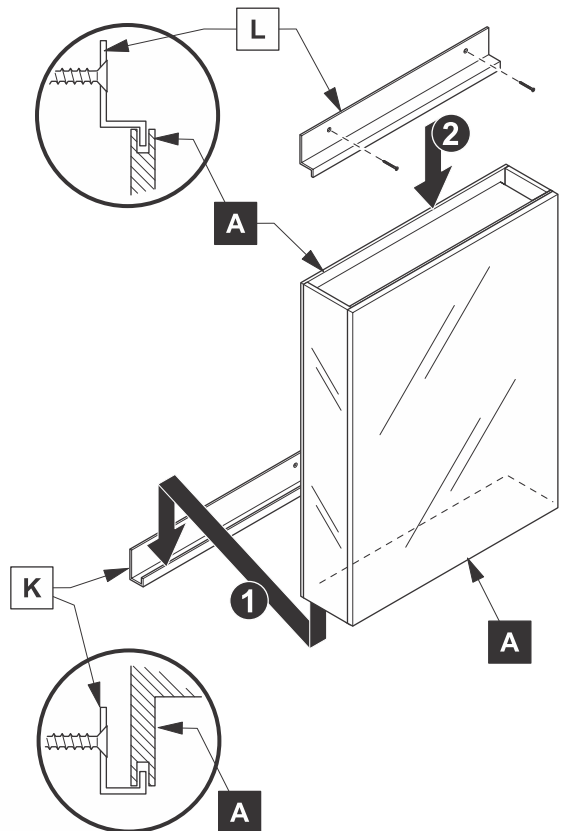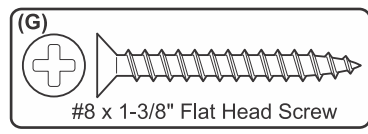


4 Install bottom bracket (K)

IMPORTANT: Consult an expert for the proper screws/bolts to use when attaching to various wall constructions. Screws provided do not attach to all wall construction types.

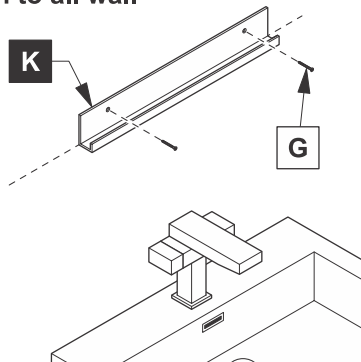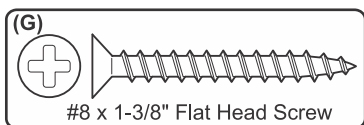


P-TRAP AND POP-UP INSTALLATION INSTRUCTIONS

Your item may appear slightly different from the illustration

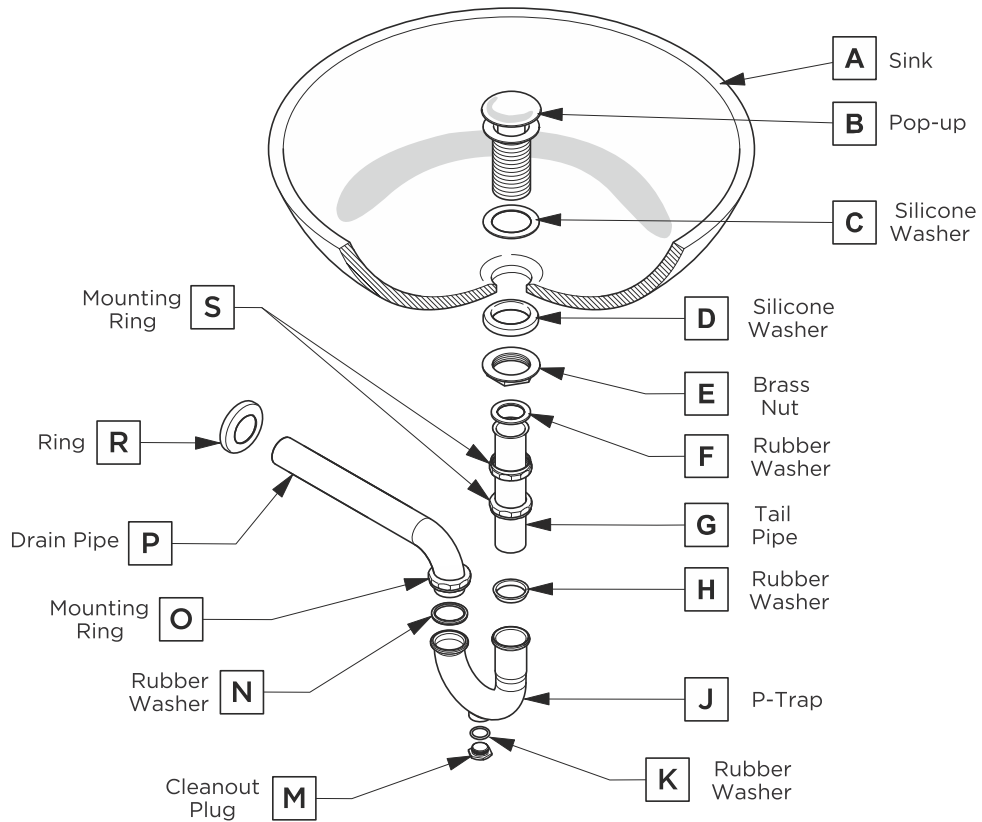


POP-UP INSTALLATION

FOR SINKS WITHOUT OVERFLOW

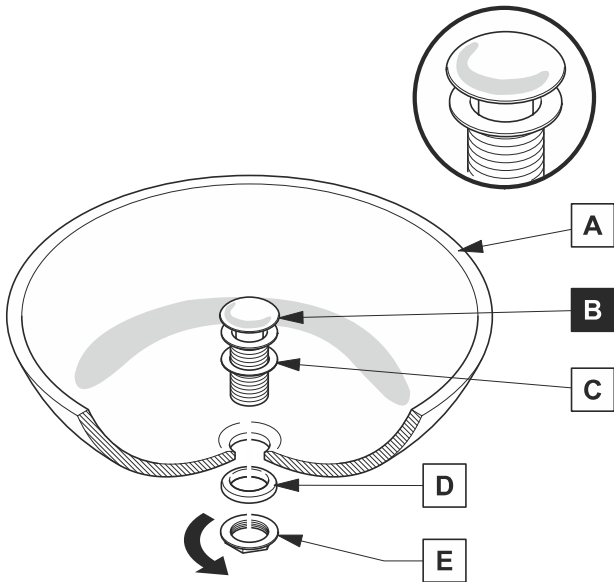


OR

FOR SINKS WITH OVERFLOW

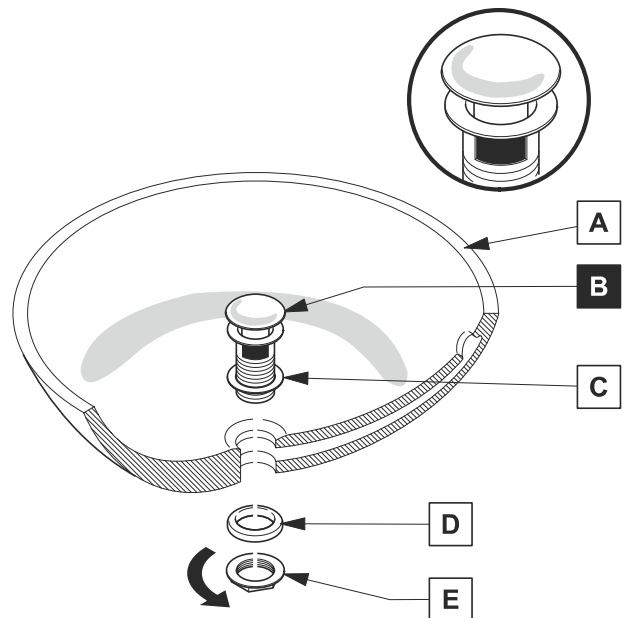

P-TRAP INSTALLATION

1 Install tail pipe (G)

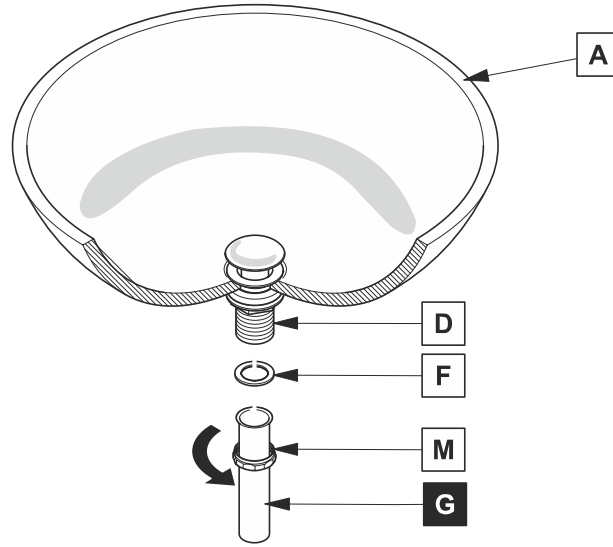

2 Install p-trap (J)

