

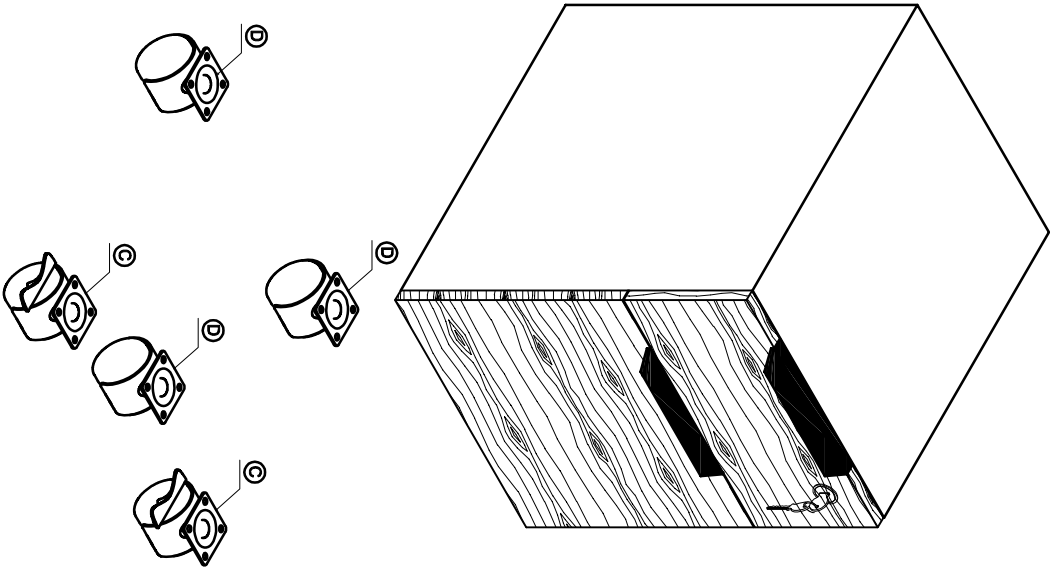




ASSEMBLY INSTRUCTION
BROOME - MOBILE CABINET

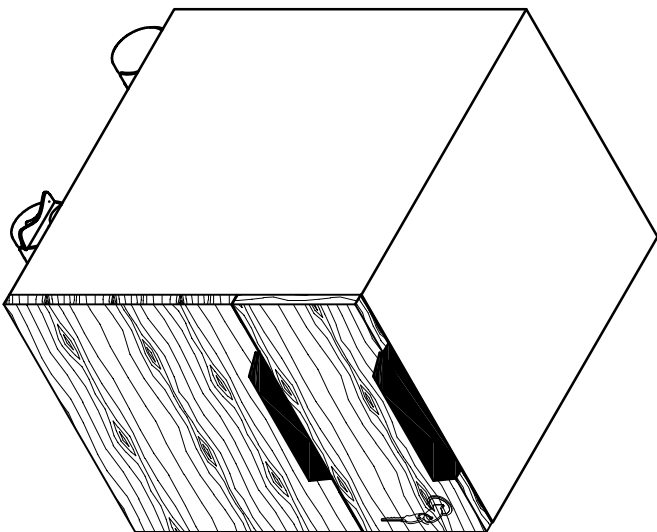


HARDWARE



TOOL

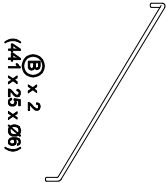

STEP 1

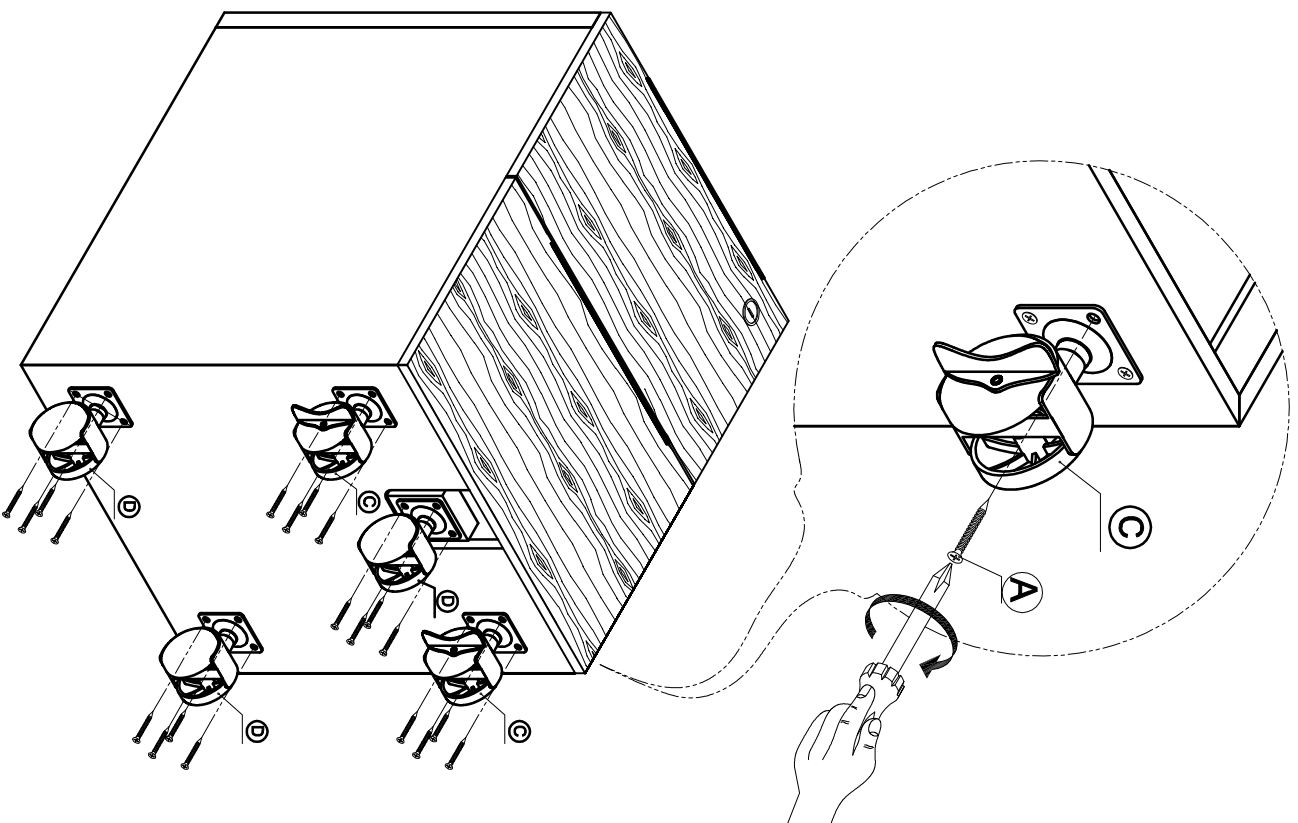

STEP 2

