

PARTS & ASSEMBLY SHEET

Fixture Name: Valencia 2049-SF FB

This fixture assembled PO: D	ate:
------------------------------	------

Notice: Please review the parts listing and check for all parts before assembling the fixture. If any parts are missing or damaged, please note on this sheet and contact the place of purchase to arrange for replacement parts.

	CT	Company Name:	Co. Account #	£:
PARTS LI	.51	to be filled out by retailer	o be filled out by retailer	
Canopy		Hex Nut (A)	Nipple (C)	
1ea 5.2"DIA*1.1"		2ea 3/8"*H3mm	1ea 3/8"*H45mm	
Chain		Threaded Ring (H)	Spring Washer (B)	
1 ea 6FT*⊕4.2mm		1ea Ф23-16T*H5mm	1ea Φ15*H3mm	
Chain Connector		Screw Collar Loop (F)	Junction Box Screw	(E)
			[
2 ea Φ4*H55mm		1ea 3/8"*H42.4mm	2 ea #8-32N*H32mr	n
Mounting Strap (D)		Green Ground Screw	Wire Connectors	
1 ea 3/4"*1"		1 ea #8-32N*H10mm	3 ea P3	
Top Loop (J)		Deco Nut (Round) (M)	Mounting Screw 2 ea 5/32"*H28mm	(
1 ea W42*H53mm		6ea 5/32"*H9mm	2 00 0, 02 112011111	
Crystal (K)	Ş	Glass (P)	Candle Sleeve (O)	
2 ea W21*63Lmm		4 ea W305*H145mm	4 ea W22xH105mm	
Part Needed			Quantity_	
Part Needed			Quantity	
Reason why Comments	(missing, scratch	ed, broken glass, bent, bad finish)		


FIXTURE ASSEMBLY INSTRUCTIONS

Read and review installation instruction sheet before assembling the fixture.

ASSEMBLING THE FIXTURE

1. Slide the glass panels (P) into the fixture cage (N), then secure with clips.

NOTE: INSTALL THE GLASS ASSEMBLY BEFORE THE FIXTURE IS HUNG.

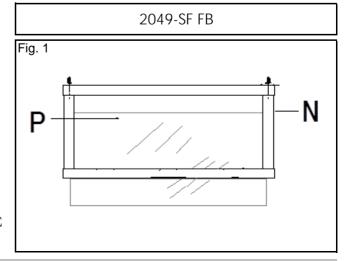

For Customer Service, contact the place of purchase to arrange for replacement parts.

PARTS & ASSEMBLY SHEET


Fixture Name: Valencia 2049-SF FB


ASSEMBLING THE FIXTURE as semi-flush (Fig. 2)

- 2. Slide the Candle sleeves (O) on threaded socket.
- 3. Install the light bulbs in accordance with the fixture's specifications.
- 4. Lower the fixture over the glass cage, use the round Deco nuts (K) to secure arms (M) to the cage (N).
- 5. Then hang the Crystals (L).

ASSEMBLING THE FIXTURE as pendant (Fig. 3)

- 2. Slide the Candle sleeves (O) on threaded socket.
- 3. Install the light bulbs in accordance with the fixture's specifications.
- 4. Remove Top Cap from fixture, then screw the Top loop (J) to the center column until tight.
- 5. Lower the fixture over the glass cage, use the round Deco nuts (K) to secure arms (M) to the cage (N).
- 6, Then hang the Crystals (K).
- 7. By measuring determine correct number of links needed for proper hanging height. Use a pair of pliers to open one link of the Chain then remove the excess Chain and discard it.
- 8. Use one chain connector to attach one end of the chain to the Top loop (J) and close the chain connector.
- 9. Feed the fixture wires through the Chain (every three links) and pull the wires until taut.
- 10. Slip Canopy loop collar over the chain, then do the same with the canopy.
- 11. When ready to complete the installation Use the other chain connector and attach the other end of the chain to the canopy loop and close the chain connector.
- 12. Make sure the weight of the chandelier is supported by the chain-not the electrical wire.
- *You may now hang the fixture DO NOT EXCEED MAXIMUM WATTAGE RATING!

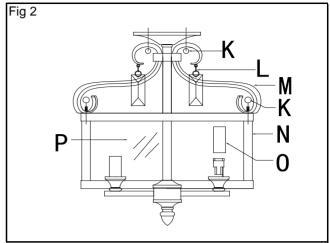

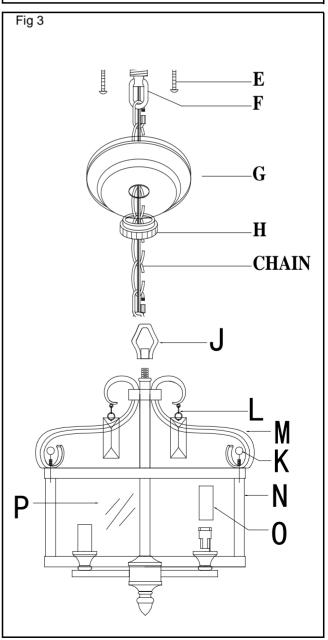



INSTALLATION INSTRUCTIONS

Fixture Name: Valencia 2049-SF FB

For Semi-flush Fixture

WARNING! SHUT OFF POWER AT FUSE OR CIRCUIT BREAKER.

HANGING THE FIXTURE (Fig. 1)

- 1. Carefully remove the new fixture from the carton and the yellow bag that holds all your parts. Check that all parts are included as shown in the illustration and parts list.
- 2. Shut off power at the circuit breaker and remove the old fixture from wall, including the old mounting strap.
- 3. Thread the two fixture Mounting Screws (A) into the predrilled holes in the Mounting Strap (B) spaced the same distance apart as the holes in the fixture Top cap (E). Secure in place with the Hex Nuts (D).
- 4. Take this mounting strap assembly and mount to ceiling junction box with Mounting screws (C). Tighten screws securely with screw driver.

CONNECTING THE WIRES (Fig. 2)

- 5. Attach the power supply wires to the fixture lead wires by connecting BLACK to BLACK (or SMOOTH) and WHITE to WHITE (or RIBBED).
- 6. Ground wire connection: Connect fixture ground wire to supply ground wire (usually with green insulation) with wire connector. If there is no supply ground wire at ceiling juction box then attach fixture ground wire securely onto green grounding screw located at mounting bar.


NOTE: Twist the wires together in the same direction you twist the wire connector onto the wires.


7. Tuck these wire connections neatly into the Junction Box.


FINISHING THE INSTALLATION (Fig. 3)

8. .Place the fixture's canopy over the Mounting Strap (B) and over the Mounting Screws (A), adjust the fixture Top cap (E) until the Mounting Screws (A) protrude out from the canopy (E) and secure the fixture against the ceiling by threading the decorative nuts (K) until tight.

YOUR INSTALLATION IS NOW COMPLETE.
RETURN POWER TO THE JUNCTION BOX AND TEST
THE FIXTURE.

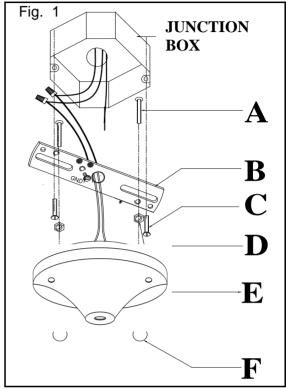

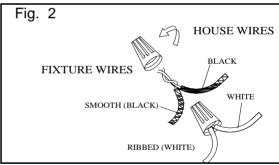

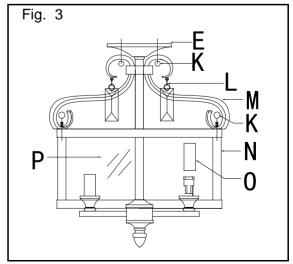

GOLDEN Elegan lighting for everyday living

INSTALLATION INSTRUCTIONS

Fixture Name: Valencia 2049-4P/6/9/M1L FB

For Pendant Light Fixture

WARNING! SHUT OFF POWER AT FUSE OR CIRCUIT BREAKER.

HANGING THE FIXTURE (Fig. 1)

- 1. Carefully remove the new fixture from the carton and the yellow bag that holds all parts. Check that all parts are included as shown in the illustration and parts list.
- 2. Shut off the power at the circuit breaker and remove old fixture from ceiling, including the old mounting strap.
- 3. Thread Nipple(C) into Canopy Loop (F) until snug.
- 4. Thread other end of the Nipple (C) with Canopy Loop attached into Mounting Strap (D).
- 5. Place Lock Washer (B) over end of Nipple (C) protruding through Mounting Strap (D) and thread Hex Nuts (A) onto Nipple until tight.
- 6. Take this mounting strap assembly and mount to ceiling junction box with Mounting screws (E). Tighten screw securely with screw driver.
- 7. Unscrew the Canopy loop collar(H) from the Canopy loop. Take the canopy and pass over the Canopy loop. approximately one half of the canopy loop exterior threads should be exposed. Adjust until desired height is reached. *the Canopy loop collar should fit snugly on the Canopy loop after the canopy is installed. Remove Canopy and Canopy lock collar.
- 8. Assemble the fixture and have an assistant or secure support hold the weight of the fixture while you complete the wiring connections.
- 9. Thread the fixture wires and ground wire of the assembled fixture through the canopy loop and nipple and into the outlet box.

CONNECTING THE WIRES (Fig 2)


- 10. Attach the power supply wires to the fixture lead wires by connecting BLACK to BLACK (or SMOOTH) and WHITE to WHITE (or RIBBED).
- 11. Attach the GROUND wire(GREEN or COPPER) from the Junction Box and the fixture Ground wire to the green Ground Screw on the Mounting Bracket (D) or connect both wires together using the correct size of wire connectors.


NOTE: Twist the wires together in the same direction you twist the wire connector onto the wires.

12. Tuck these wire connections neatly into the Junction Box.

FINISHING THE INSTALLATION

13. Raise the Canopy (G) to the ceiling. Secure in place by tightening the Canopy Loop Collar (H) onto the Canopy Loop (F).

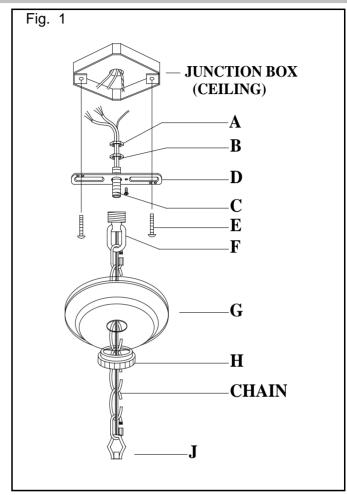

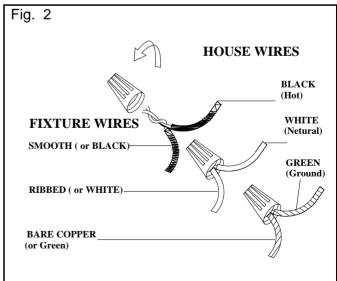

YOUR INSTALLATION IS NOW COMPLETE.
RETURN POWER TO THE JUNCTION BOX AND
TEST THE FIXTURE.