



Best Master Furniture™
The Imported Furniture Specialist


ASSEMBLY INSTRUCTION

BA221



A  x16 B  x16 C  x1

1.

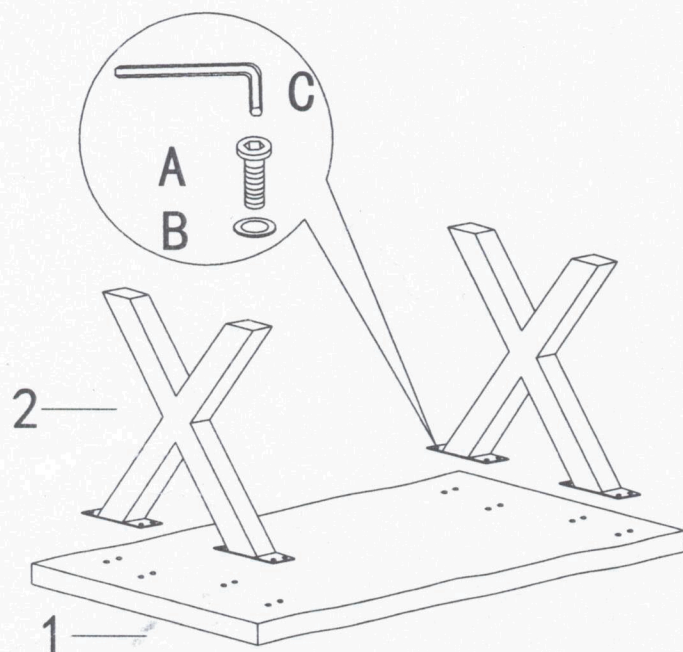

2.

