

JONATHAN ADLER

Delphine 6-Drawer Dresser


Assembly Instructions

- For ease of assembly two people are recommended.




Parts Included:

Box 1:

- (1pc) Credenza – A

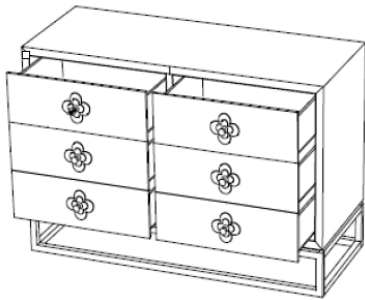


Hardware Enclosed :

B	 Knob	6pcs
C	 Screw	6pcs
D	 Flat Washer	6pcs

Assembly Instructions:

- Remove all the components from their boxes and place them on a carpeted or scratch-free surface.
- Align the Knobs (B) to the drawers of Credenza (A), secure Screws (C) and Flat Washers (D) with Screwdriver (not included.)

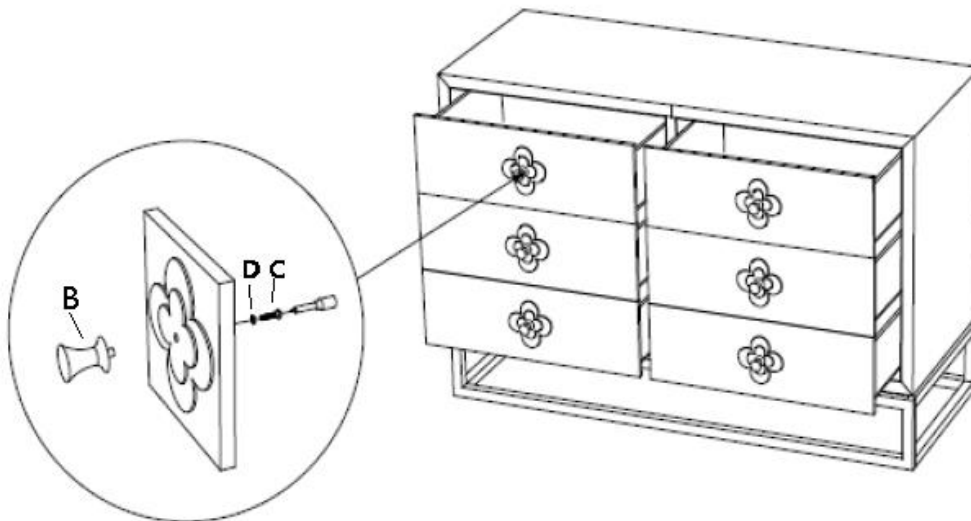

Ensure all bolts are fully tightened every three months to ensure stability.