



ASSEMBLY INSTRUCTION

24" Vanity

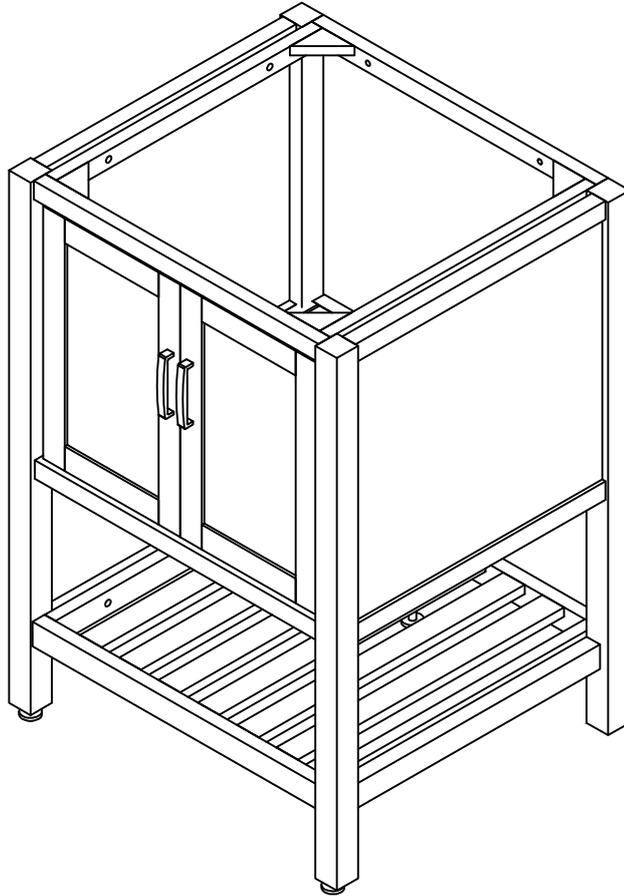


REPLACEMENT PARTS



Please do not contact the company purchased from as we can help you faster.
Order replacement parts and hardware at " www.boltonfurniture.com "

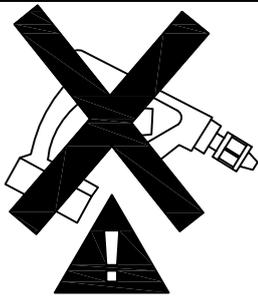

. Use of power tool to assemble this product will invalidate any claim and damage this product making it unsafe !!!
. Please assemble on a clean soft surface to avoid damage.

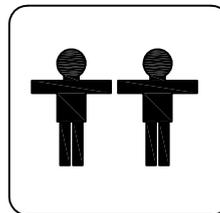


Tools Required

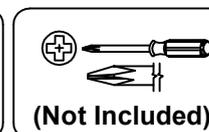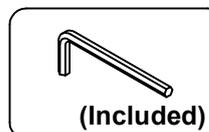


www.boltonfurniture.com

Part list - 24" Vanity

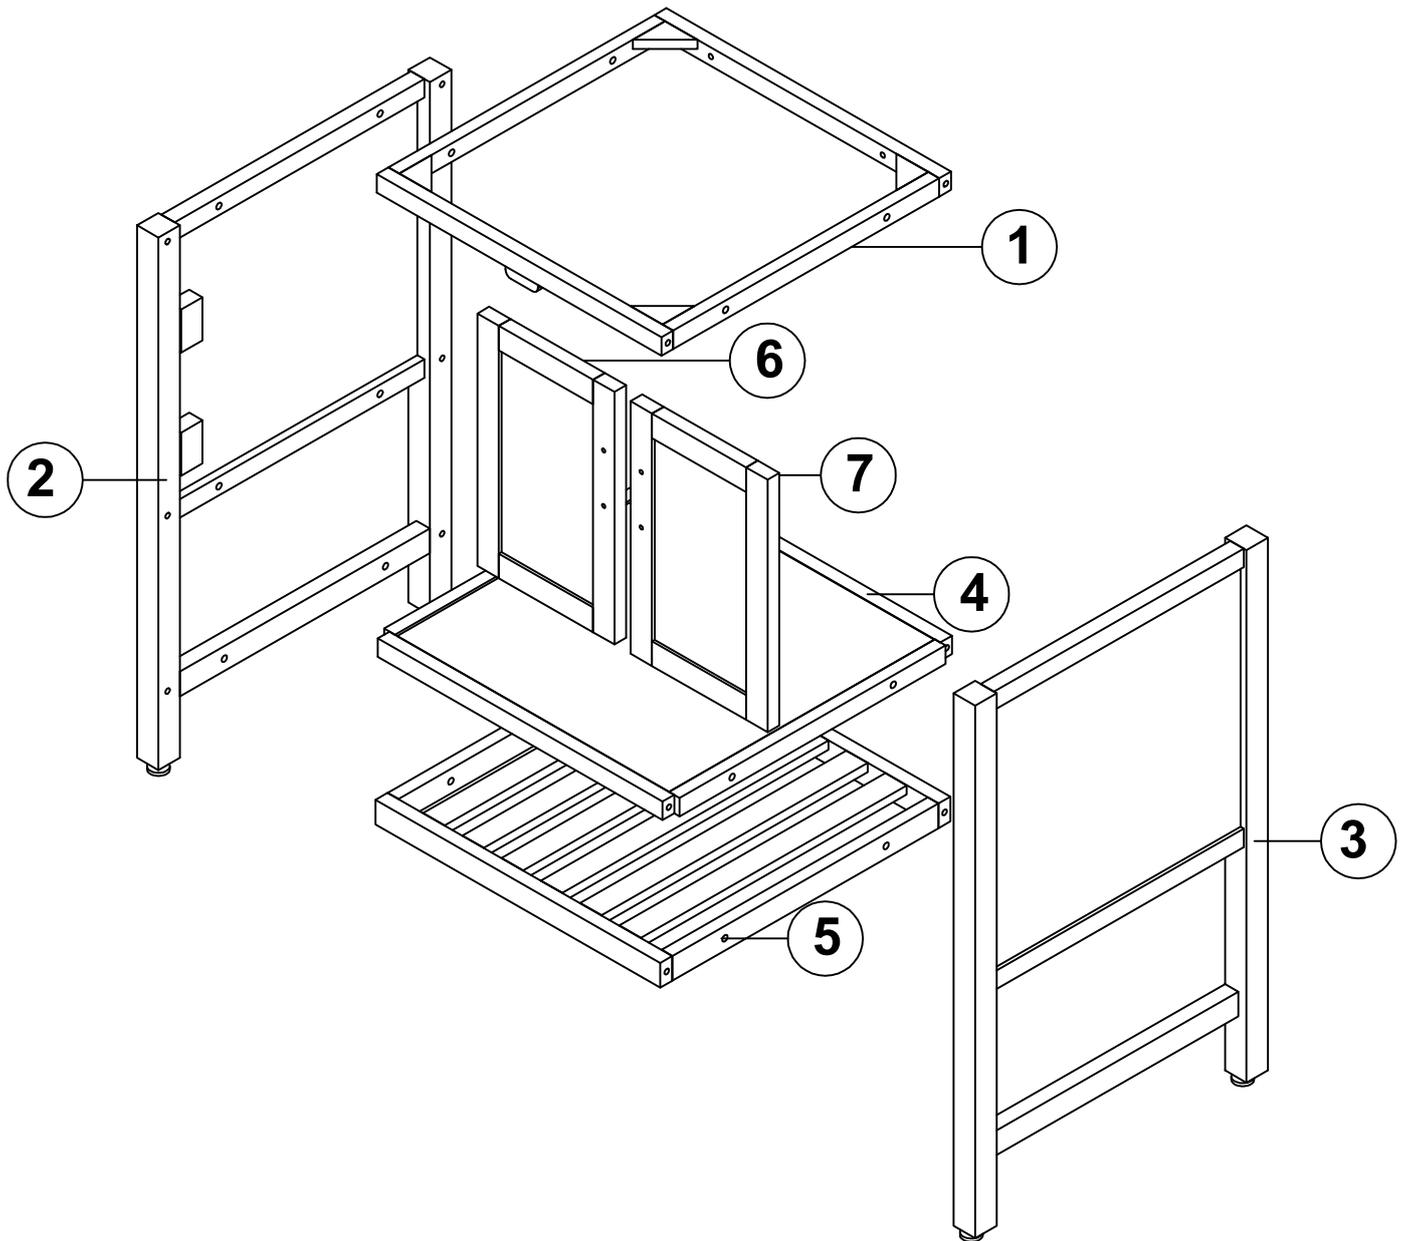

Identifying the hardware-Identify the hardware using the illustrations below


A  06 Ø8*30mm Wood Dowel	B  12 M6*45mm Bolt	C  12 Ø6*16mm Washer
D  04	E  24 3.5*15mm Screw	F  02
G  04 4*25mm Screw	H  04	I  02 4*50mm Screw
J  02 4*40mm Anchor	K  01	

www.boltonfurniture.com

Step 01

A  **06**
Ø8*30mm Wood Dowel

 **01**
(Not Included)

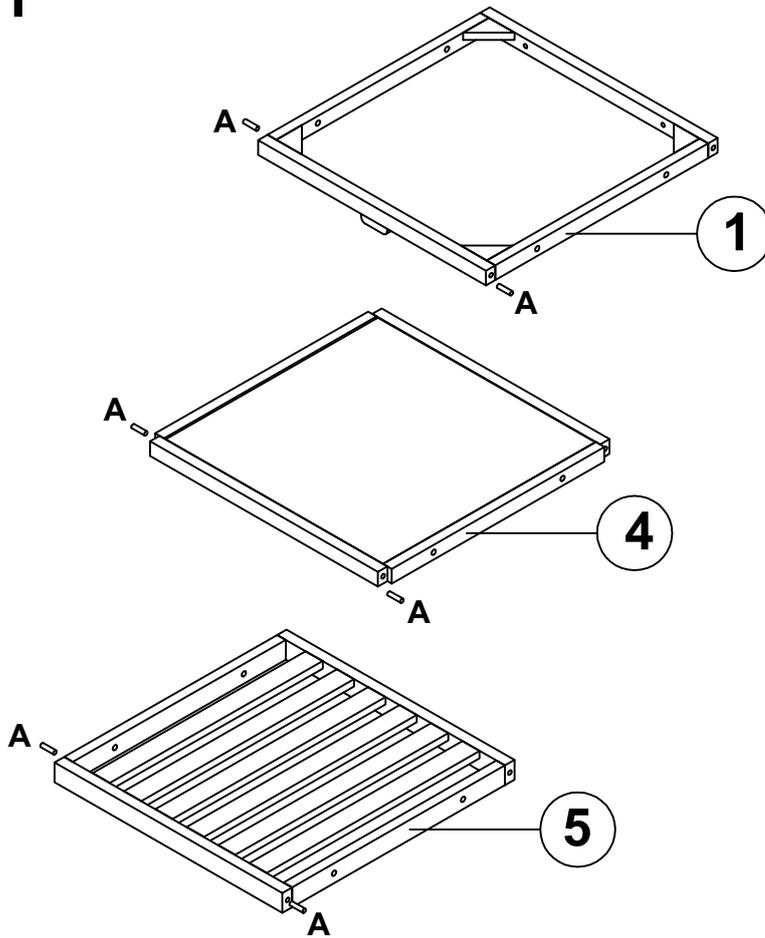


Step 02

B  **06**
M6*45mm Bolt

C  **06**
Ø6*16mm Washer

K  **01**

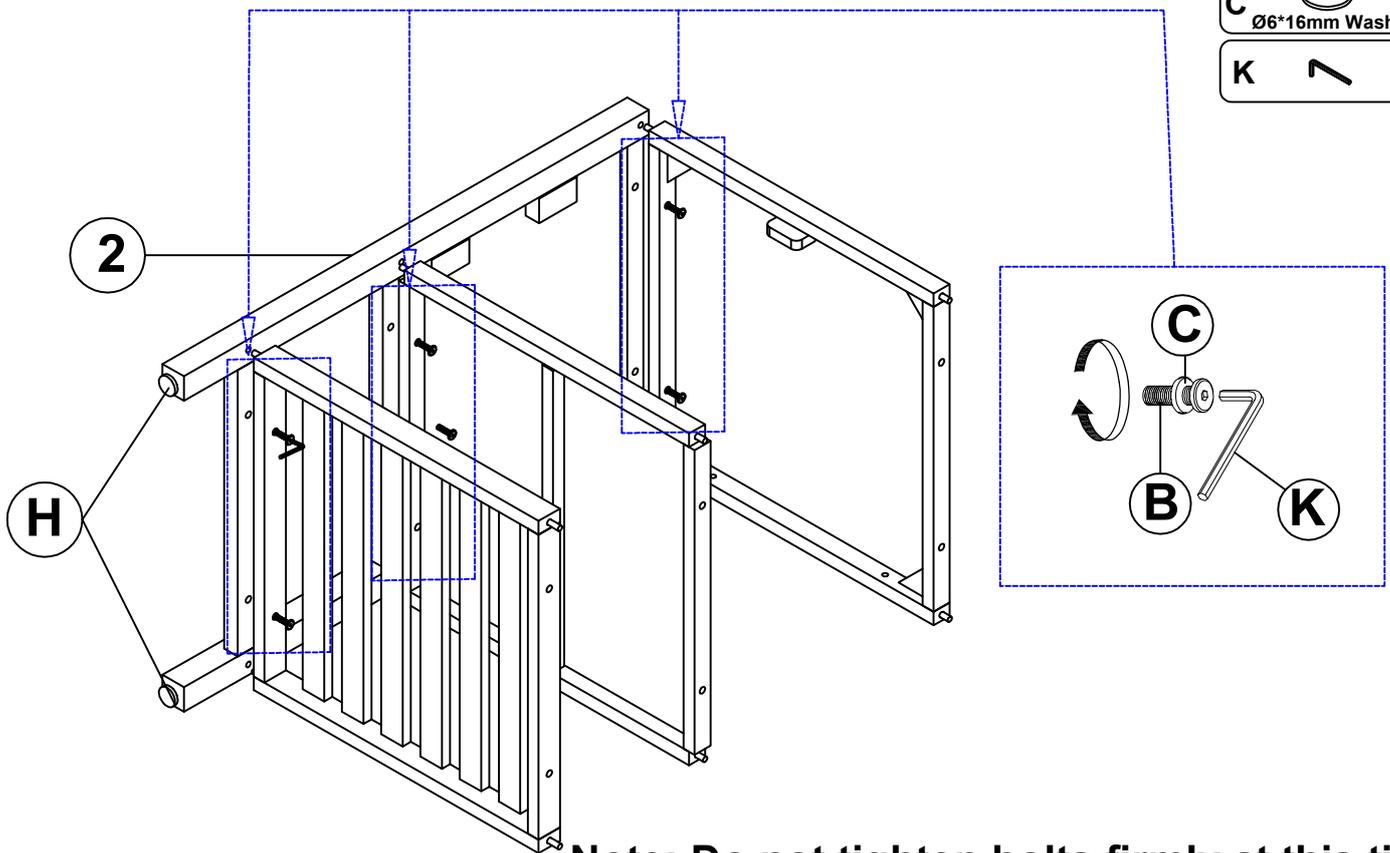



Note: Do not tighten bolts firmly at this time

Step 03

B  **06**
M6*45mm Bolt

C  **06**
Ø6*16mm Washer

K  **01**

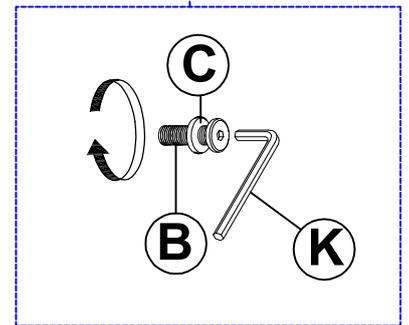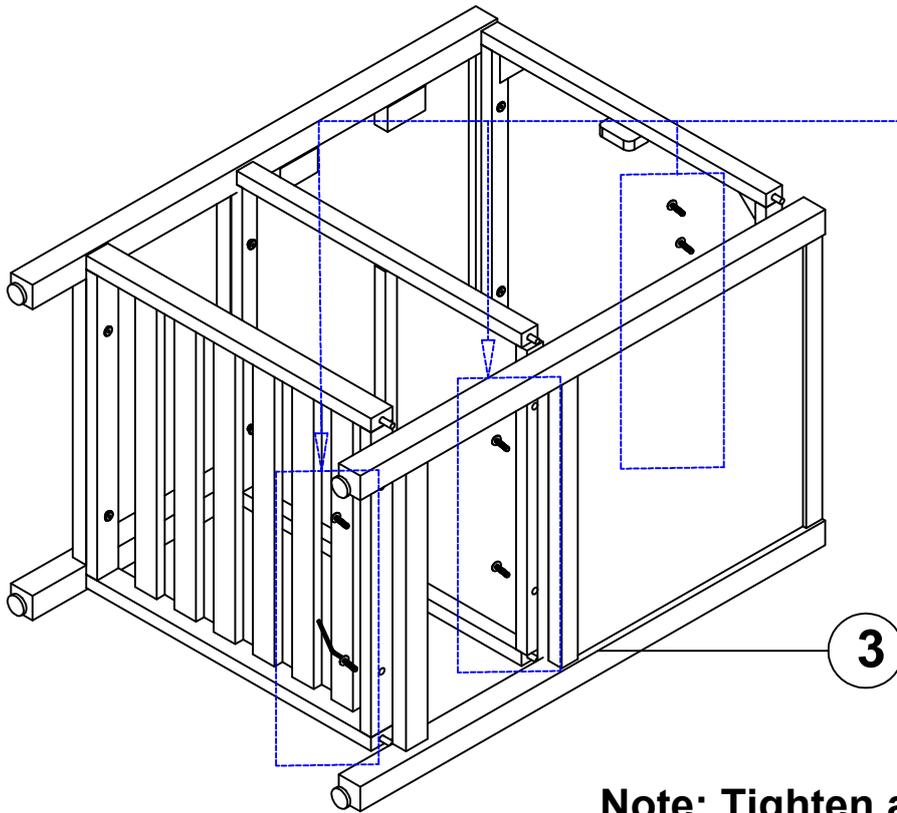



Note: Tighten all bolts at this time

Step 04

D  **04**

E  **08**
3.5*15mm Screw

 **01**

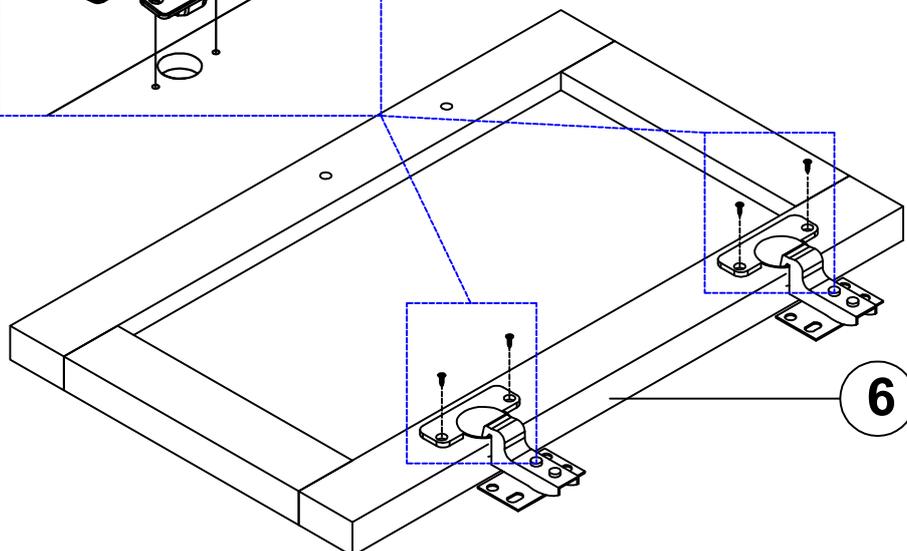
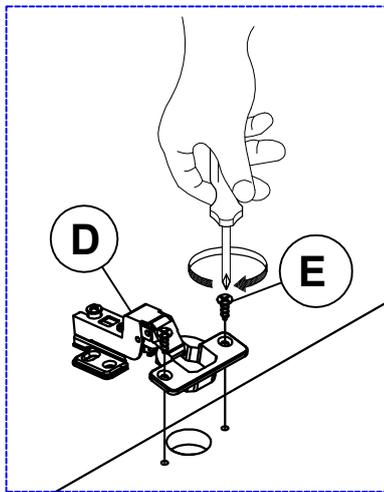


X2

Step 05

L 3.5*15mm Screw 16

01

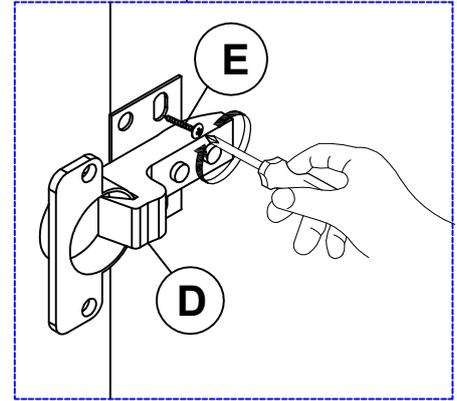
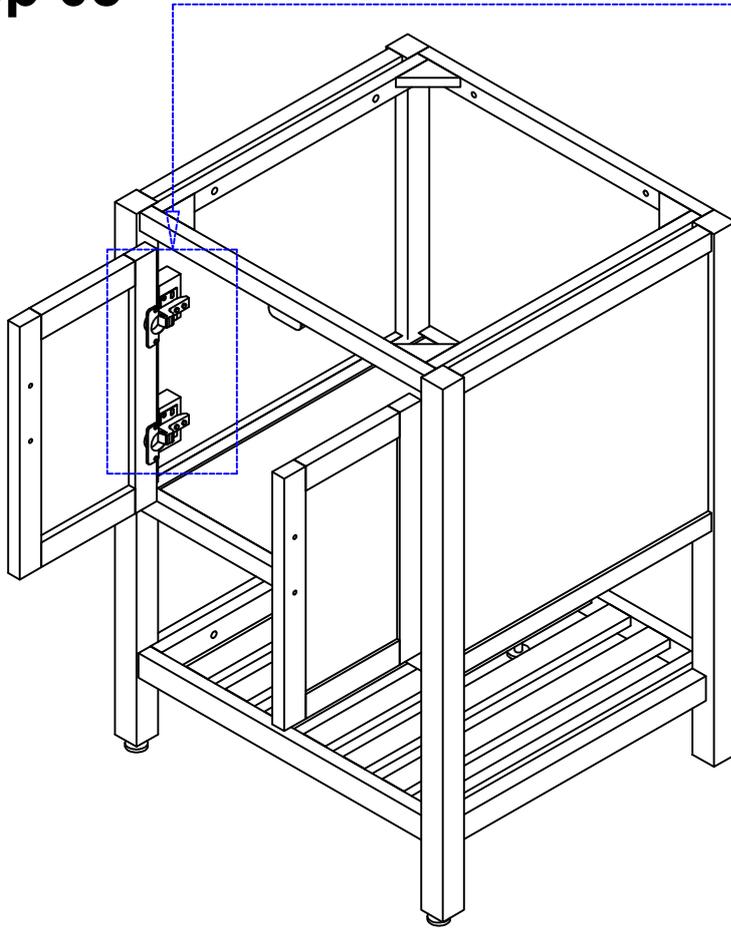


Step 06

F 02

G 4*25mm Screw 04

01

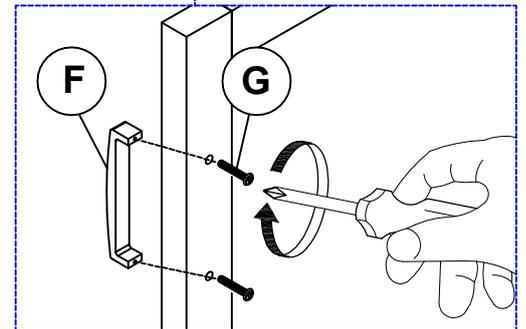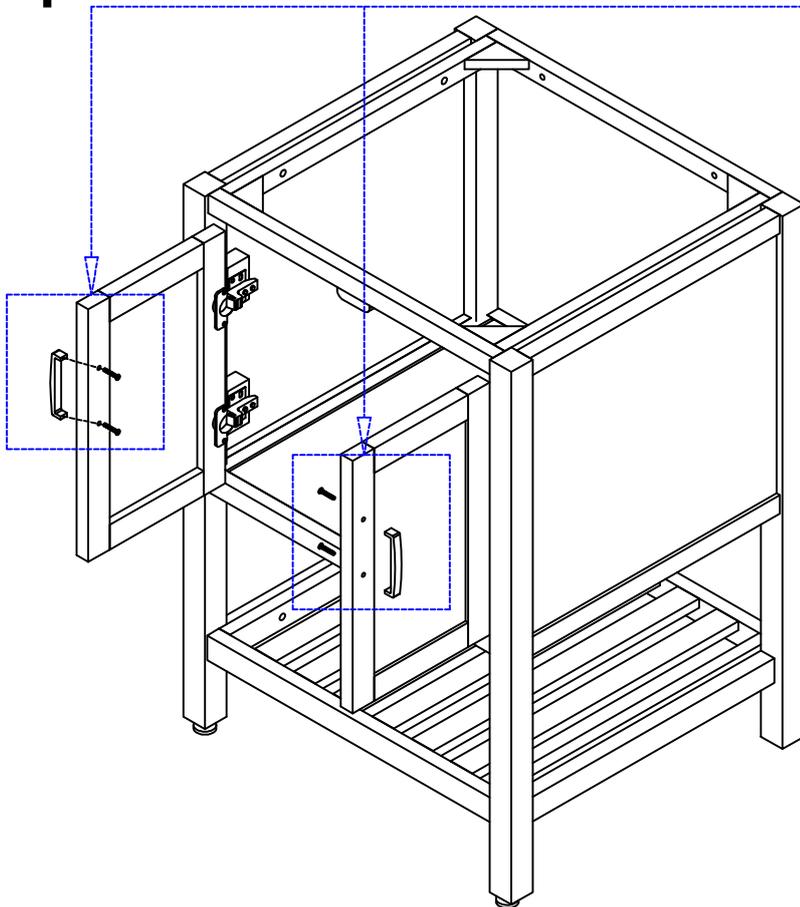

Step 07

- . Mark the location of the Studs in the wall on the stretcher rail.
- . Drill a 1/16" thru hole in the center of the Stretcher Rail at the location of the studs in the wall.

. Secure the Vanity to the wall using screws (I)

Make sure the screws align with the Stud in the wall.

. If hole locations do not align with stud in wall, install the EZ Anchor(J) in to drywall and then screwing the EZ Anchor in to the drywall.

a.Screw self-drilling EZ Anchor into drywall, using moderate pressure

b.Turn the drywall anchor in until the lip is flush with the wall

c.Secure the vanity to the wall by screwing into the EZ Anchor

Note: The vanity should be secured to at least 1 stud in the wall.

I		02
J		02
		01

