
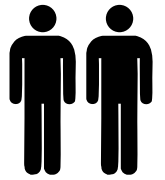


# Carmel NightStand

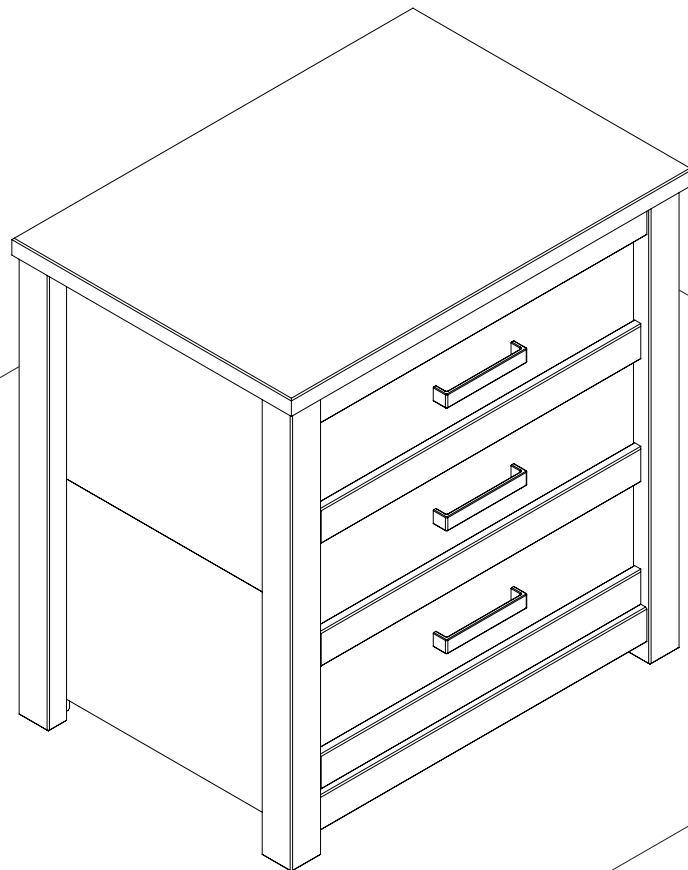


01:00 hour












## ATTENTION


- 1 - Read and observe carefully all the assembly instructions before beginning assembly.
- 2 - The assembly of the product must be done on a clean and flat surface. We suggest to use the packaging to cover the floor to avoid damages.
- 3 - The screws must be tightened periodically.
- 4 - Avoid contact with sharp objects.
- 5 - Avoid banging pieces together.

Parts and hardware list for assembly.  
Please confirm all parts available before assembly.

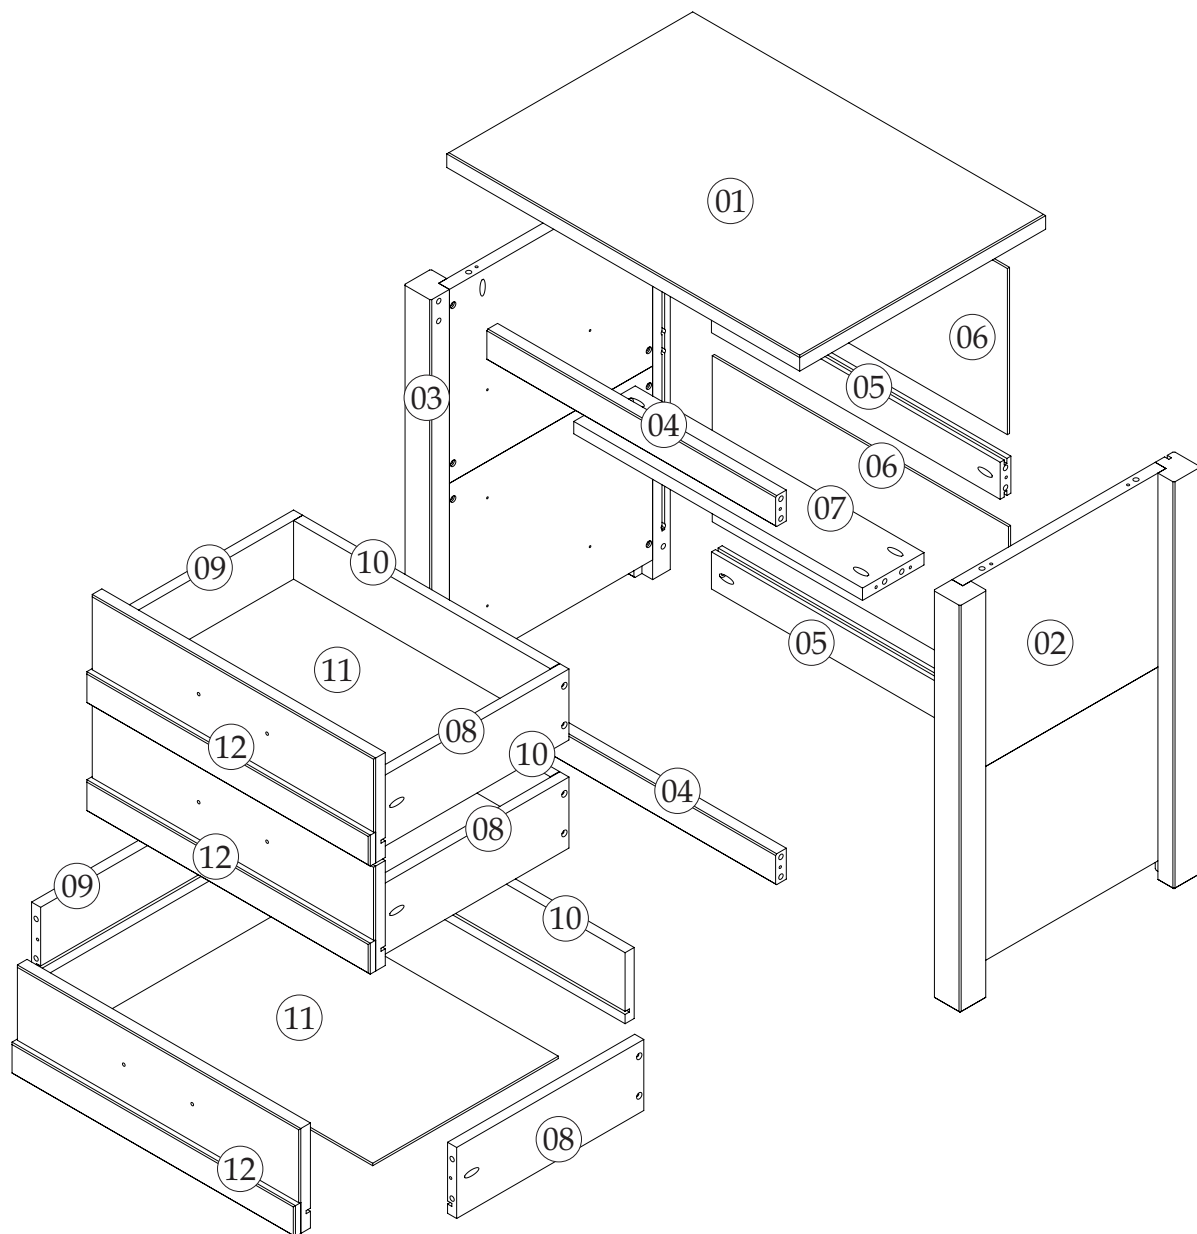


<b>Z</b> +2x spare 24x  $\varnothing 1/8" \times 5/8"$	<b>AP</b> +2x spare 34x  $\varnothing 1/8" \times 1 3/8"$	<b>BM</b> 03x  $13 3/4"$	<b>BN</b> 03x  $13 3/4"$
<b>BO</b> 03x  $13 3/4"$	<b>BP</b> 03x  $13 3/4"$	<b>BR</b> +2x spare 36x  $\varnothing 5/16" \times 1 1/4"$	<b>BT</b> 06x  $M4 \times 1"$
<b>BX</b> 03x 			



**Step 01** - Place wood dowels part “BR” into holes of wood cross bars (**Parts 04, 05 & 07**).

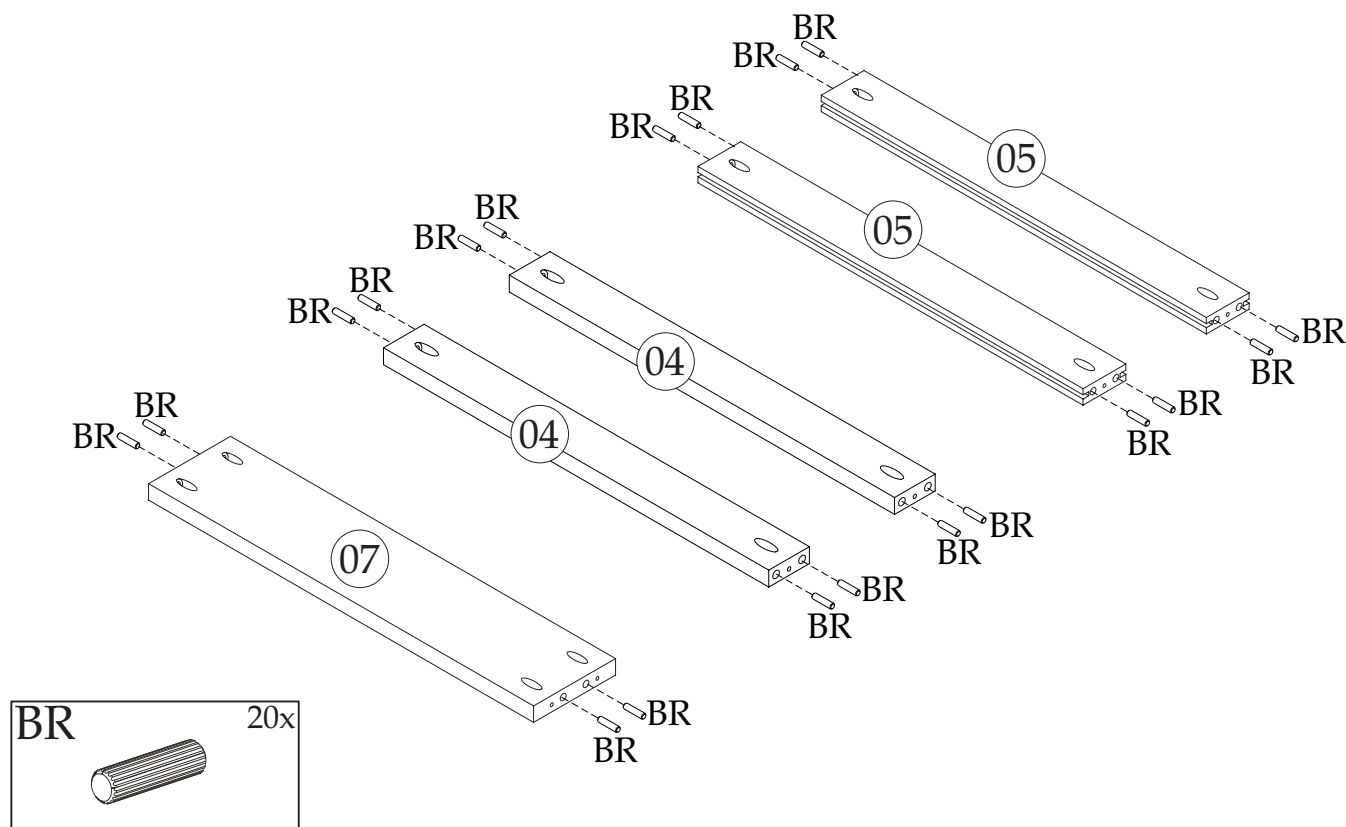


**Step 02** - Attach inner metal drawer glides (**Parts “BN” & “BR”**) to cabinet sides (**Parts 02 & 03**) using 12 x screws “Z”. Be sure and line up screw holes of metal glides to the pilot screw holes indicated on cabinet sides.

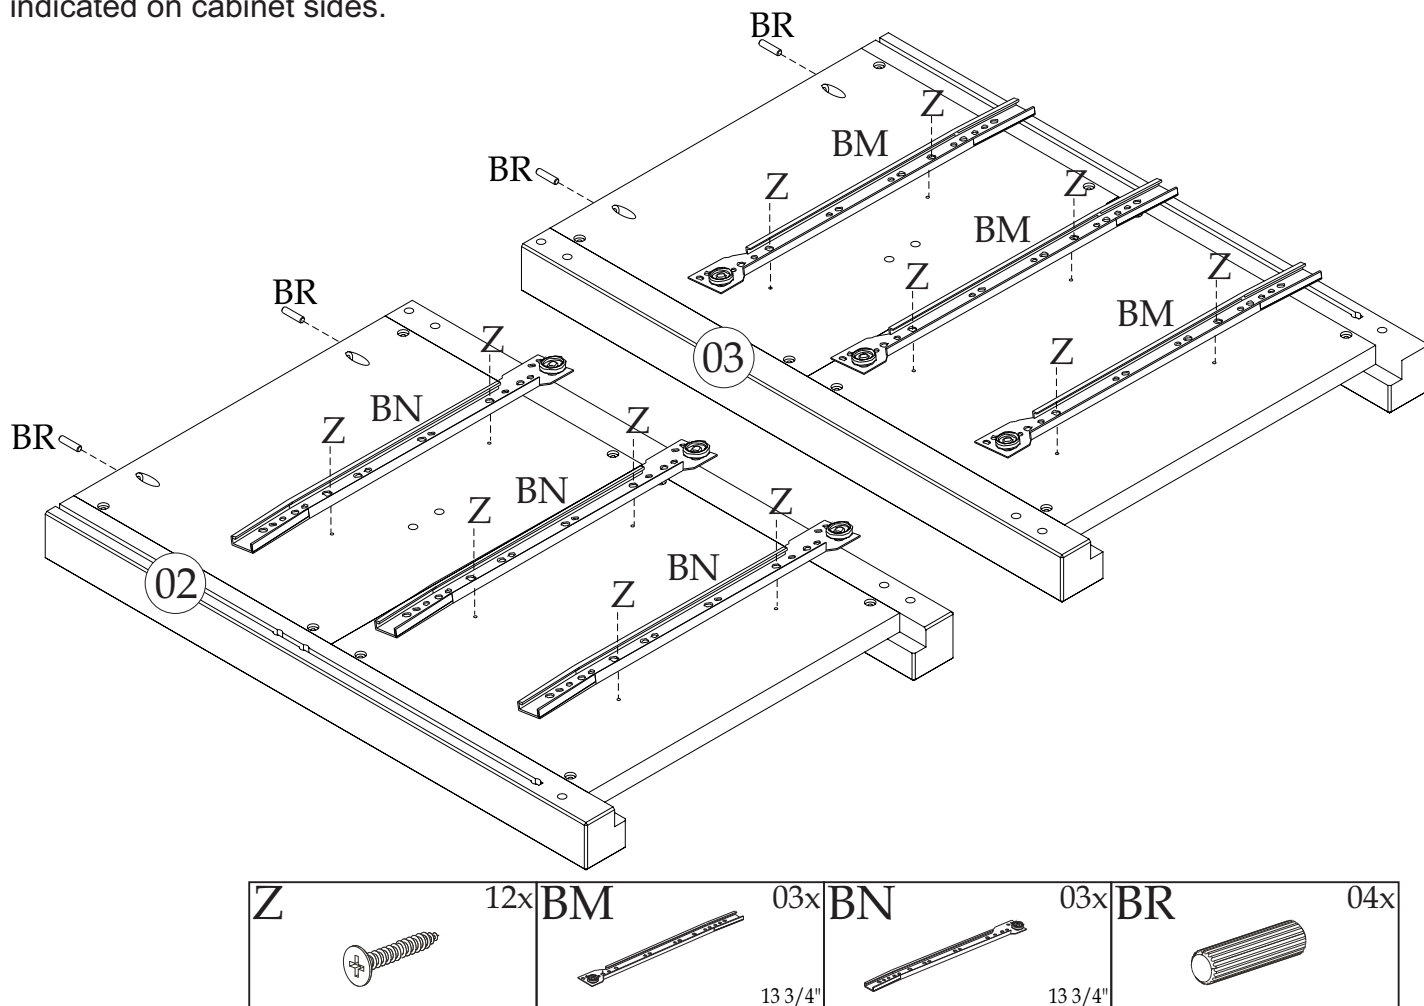



**Step 03** - Attach wood cross bars (**Parts 04, 05 & 07**) to cabinet side No. **"02"** using screws **"AP"**.

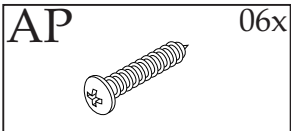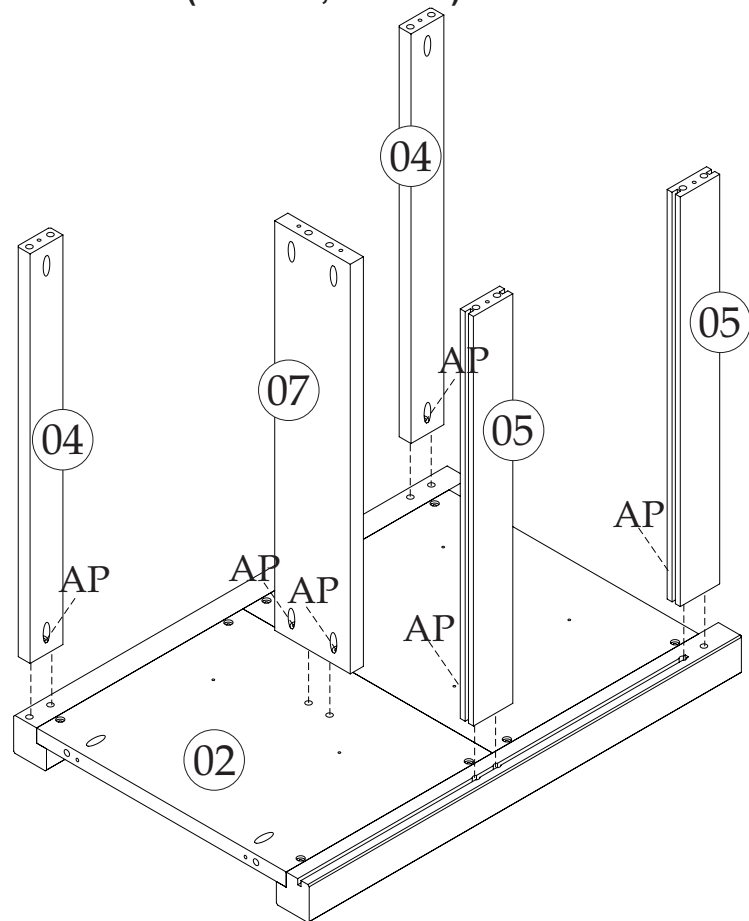


**Step 04** - Slide back panel No. **"06"** in wood channels of already attached Parts **"05"** as shown in diagram.

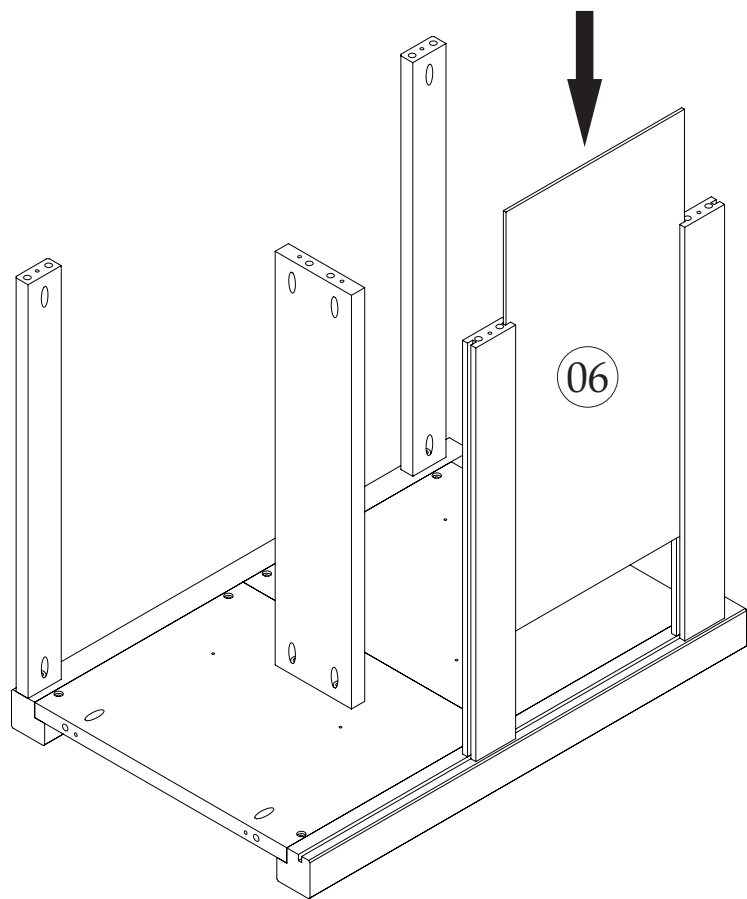



**Step 05** - Attach Cabinet side No. "03" to cabinet side No. "02" using screws "AP" as shown in diagram.

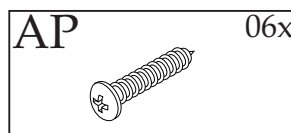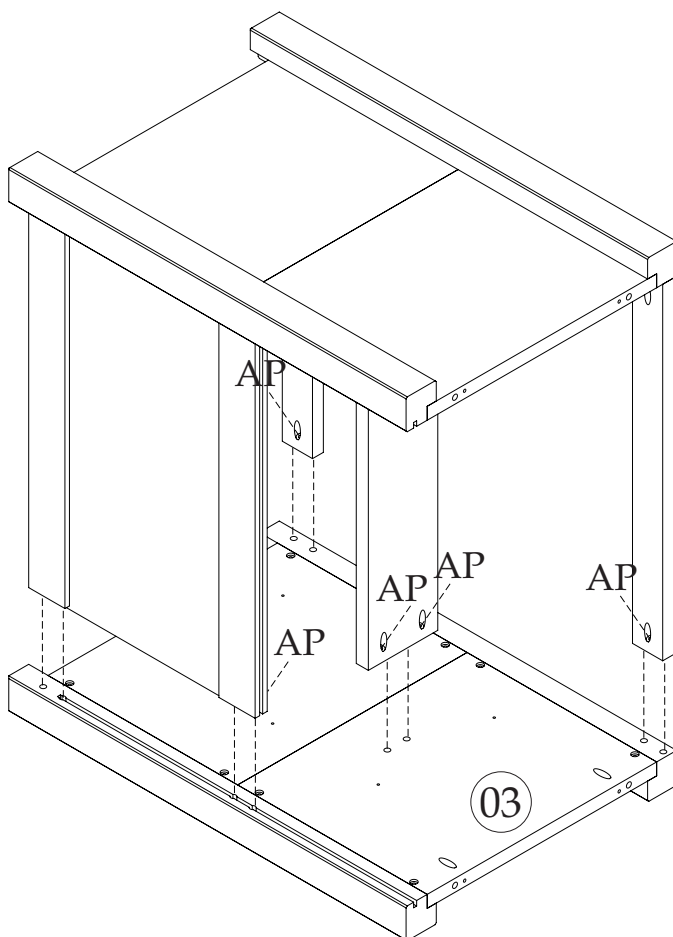

**Step 06** - Slide back panel No. "06" into upper part of already attached parts "05" as shown in diagram.

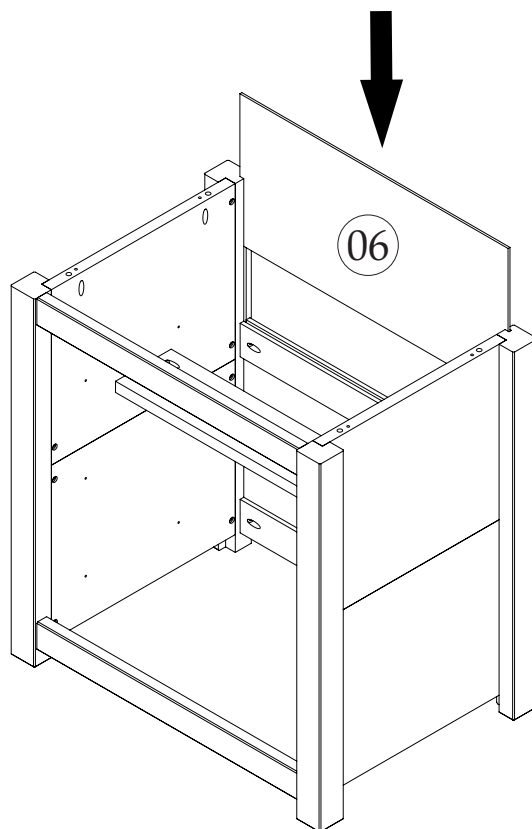



**Step 07** - Attach top of cabinet (**Part No. 01**) using screws "**AP**" as shown in diagram.

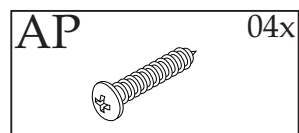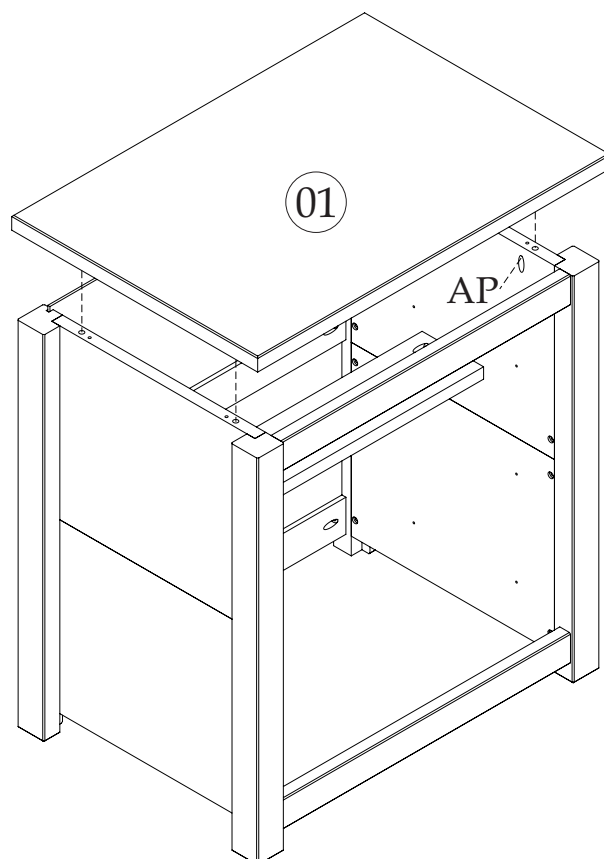



**The body of your Night Stand is now complete!**

**Instructions for Drawer Assembly:**


**Step 08** - Place wood dowels Part "**BR**" into holes of drawer side fronts (**Part "09"**), as shown.

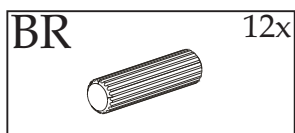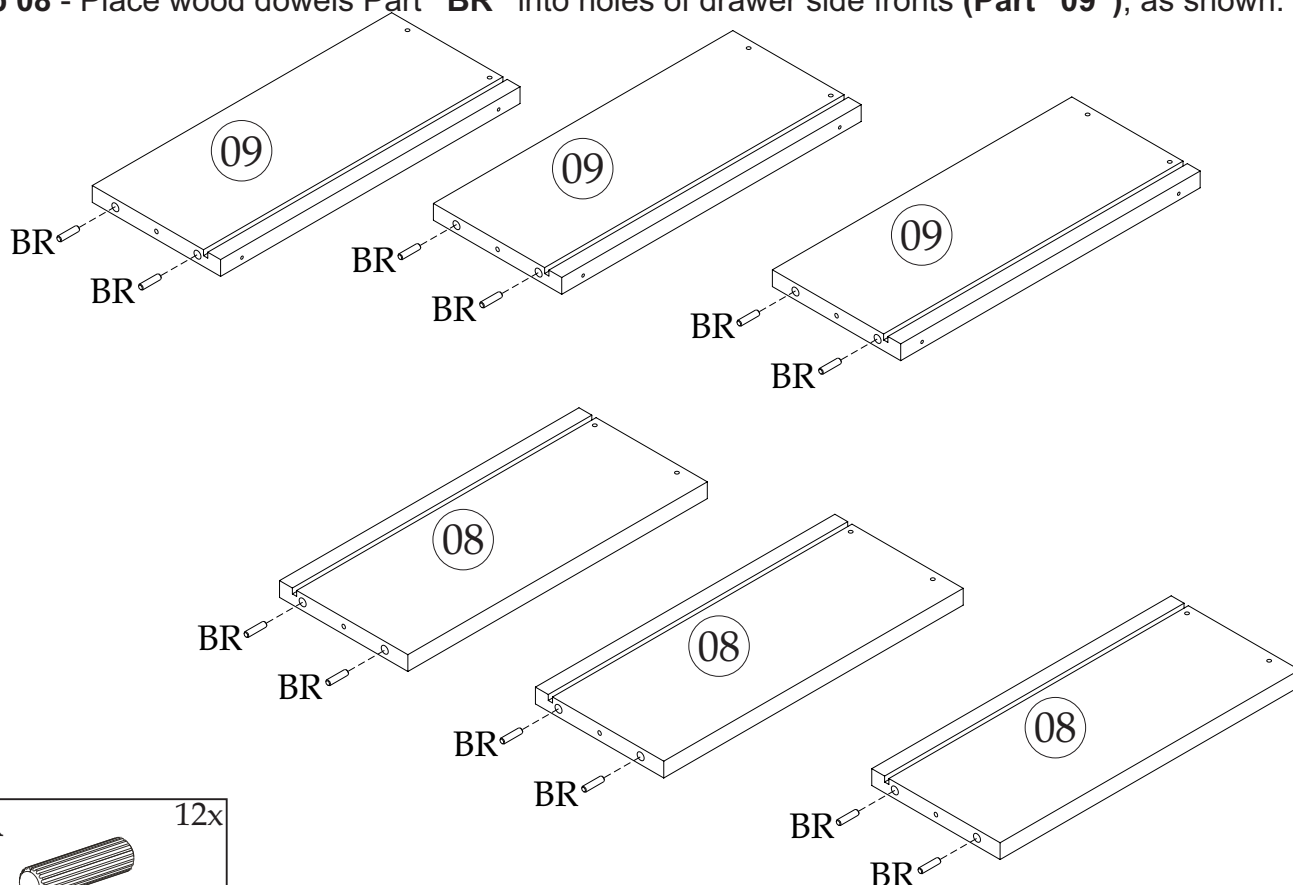


**Step 09** - Attach drawer sides (**Part “09”**) to drawer fronts (**Parts No. “12”**) using screws **“AP”**, as shown.

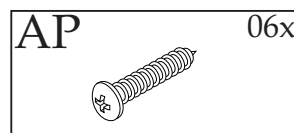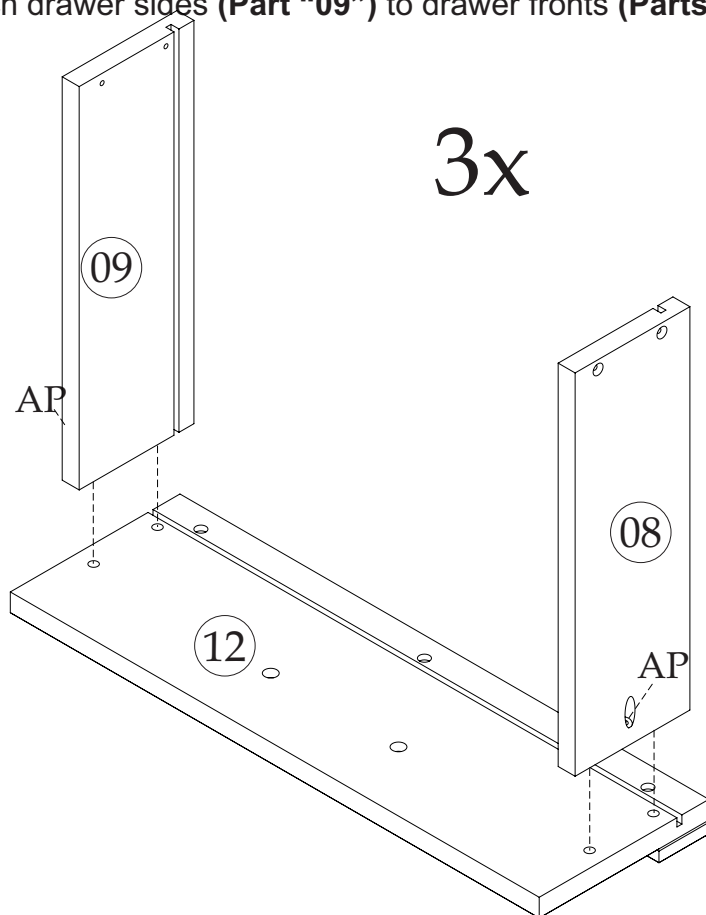


**Step 10** - Slide drawer bottom panel (**Part 11**) into drawer side channels as indicated.

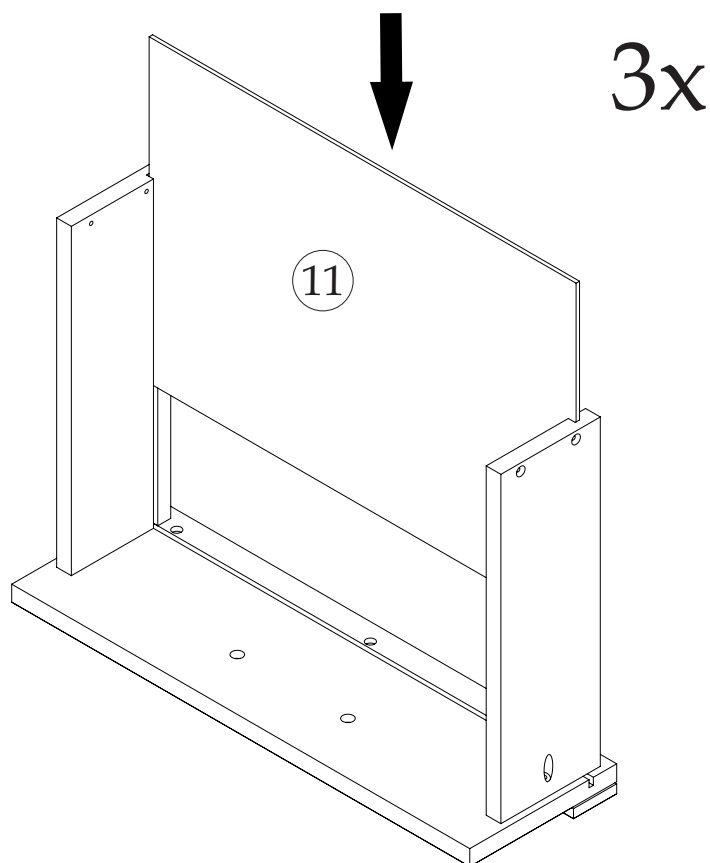

**Step 11** - Attach drawer side back (**Part 10**) to drawer sides (**Parts 08 & 09**) as shown.

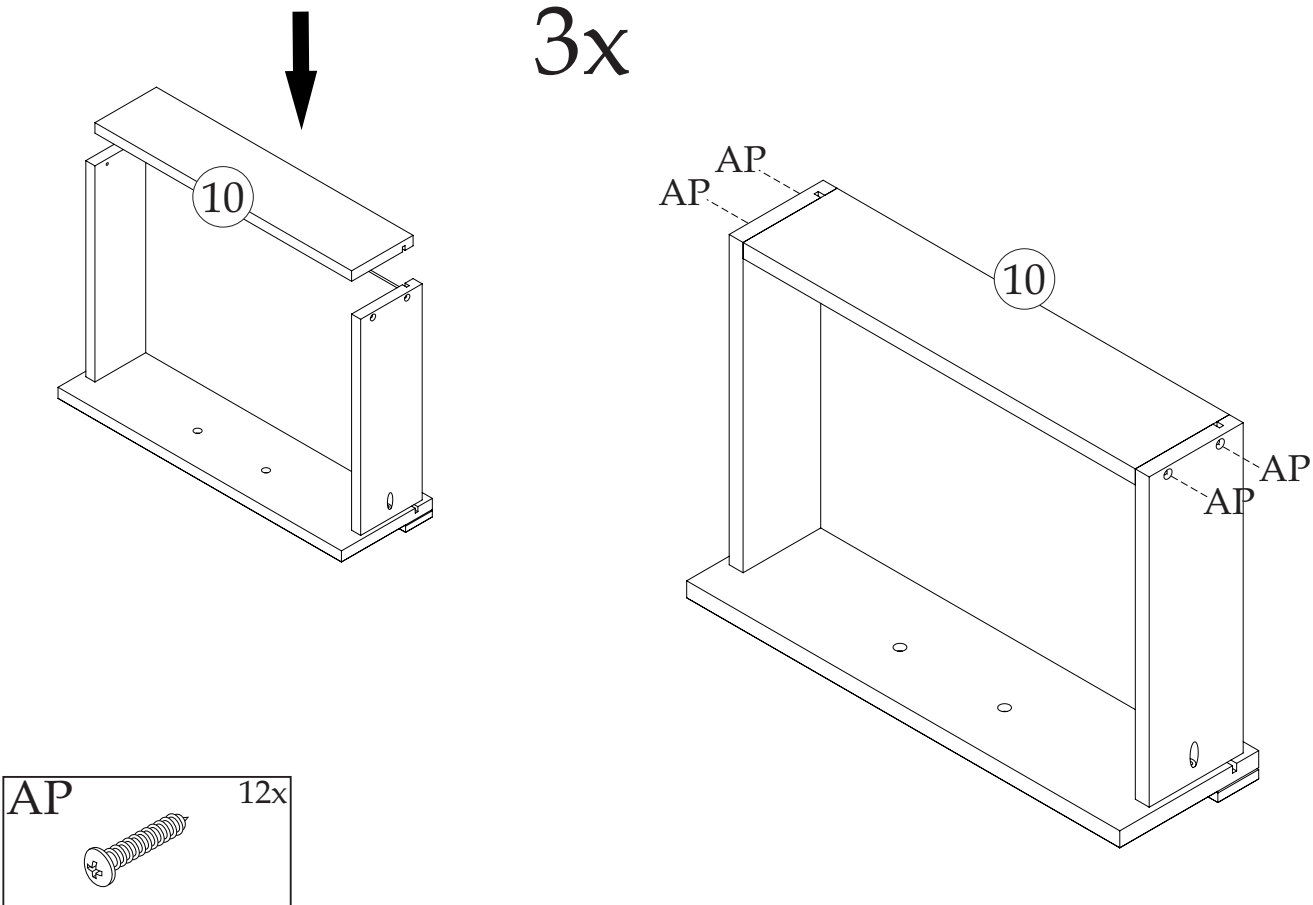


**Step 12** - Attach outer metal drawer glides (**Parts “BO” & “BP”**) to bottom of drawer sides, using screws “Z”, as indicated. Be sure to line up the screws with the pilot screw holes indicated on drawer side bottoms.

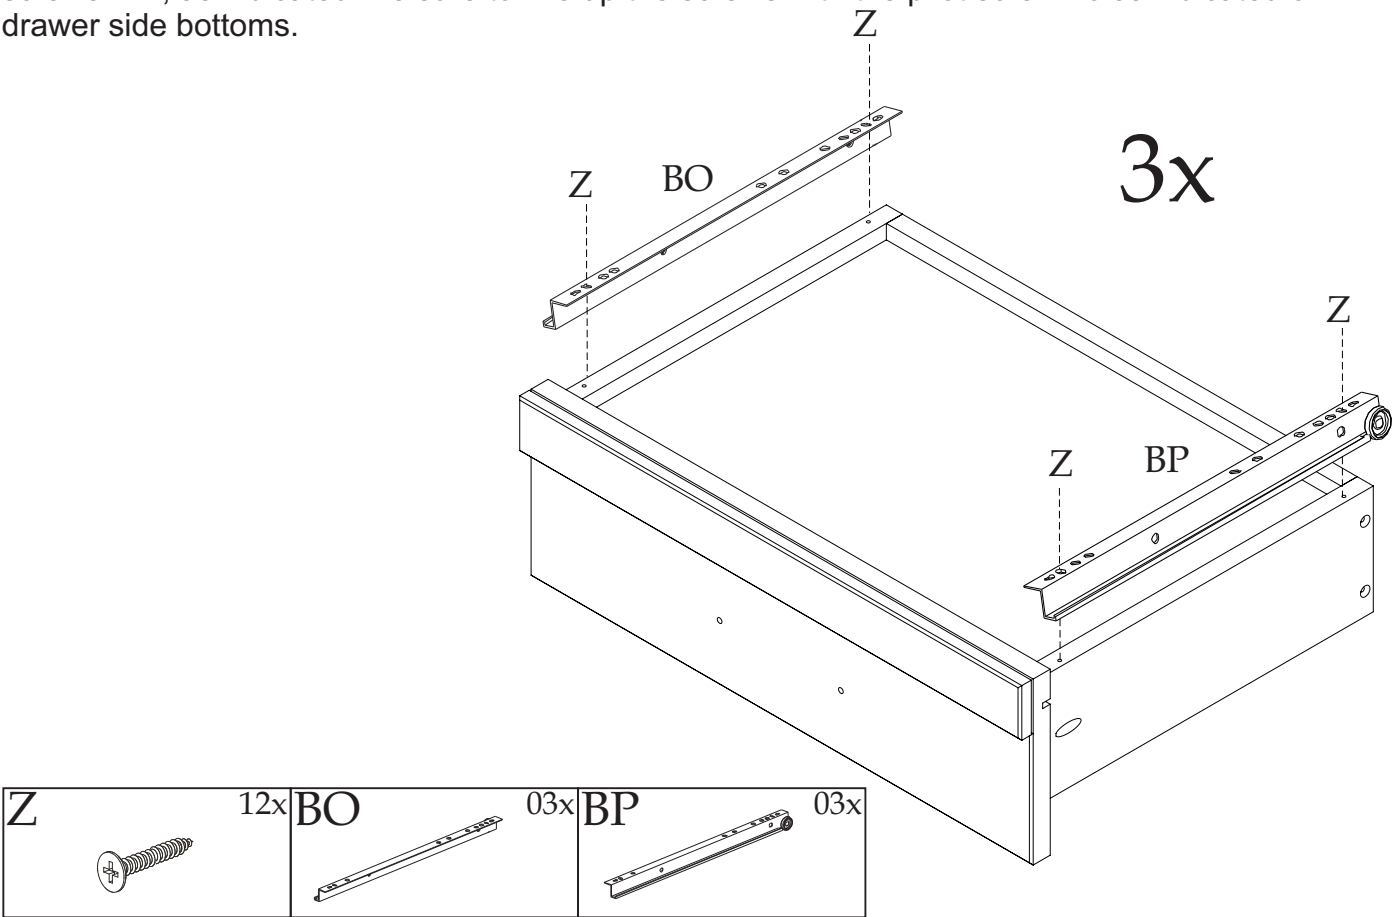



**Step 13 - Attach drawer pulls (Part “BX”) to the drawer fronts using screws “BT” as shown in diagram.**

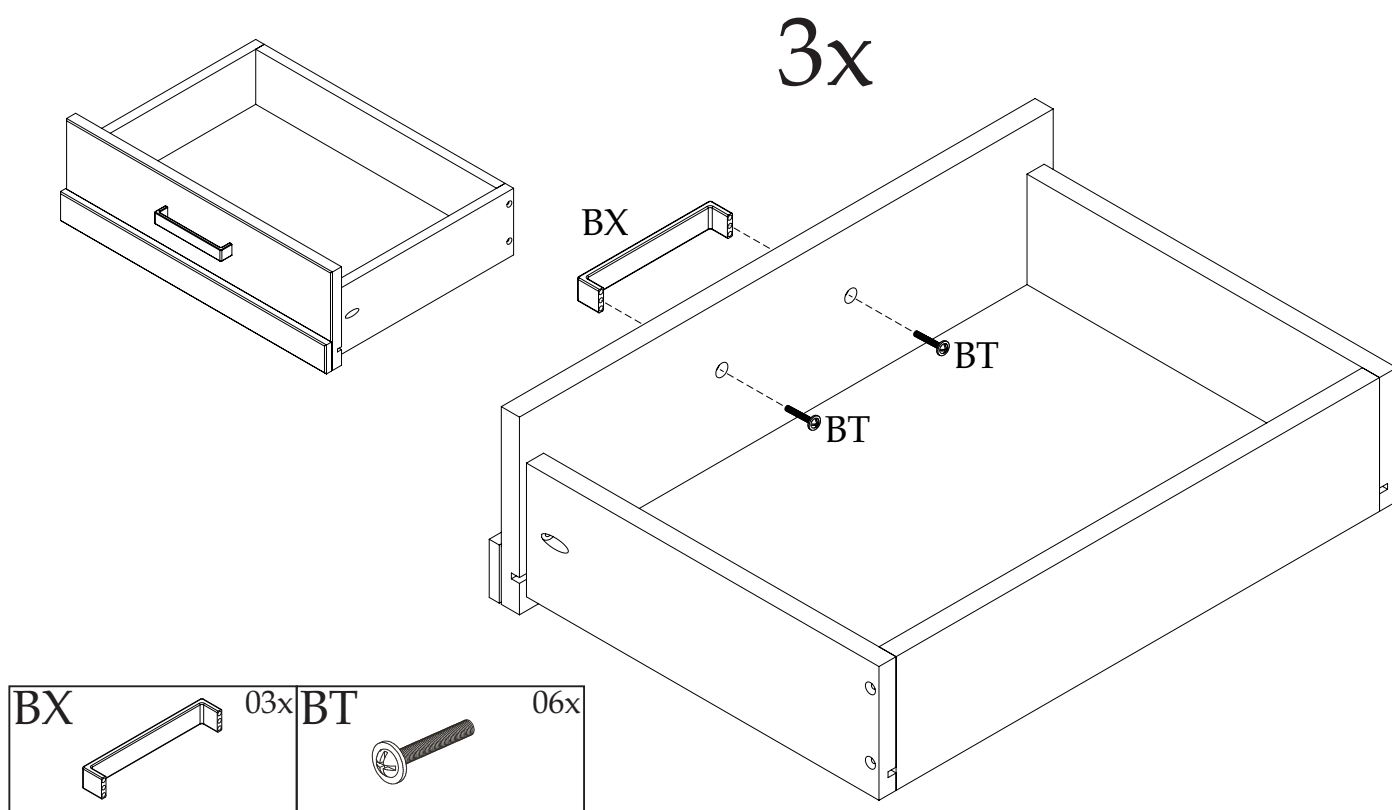

**The drawers are now complete and ready to place inside your new Night Stand!**

**Step - 14**

