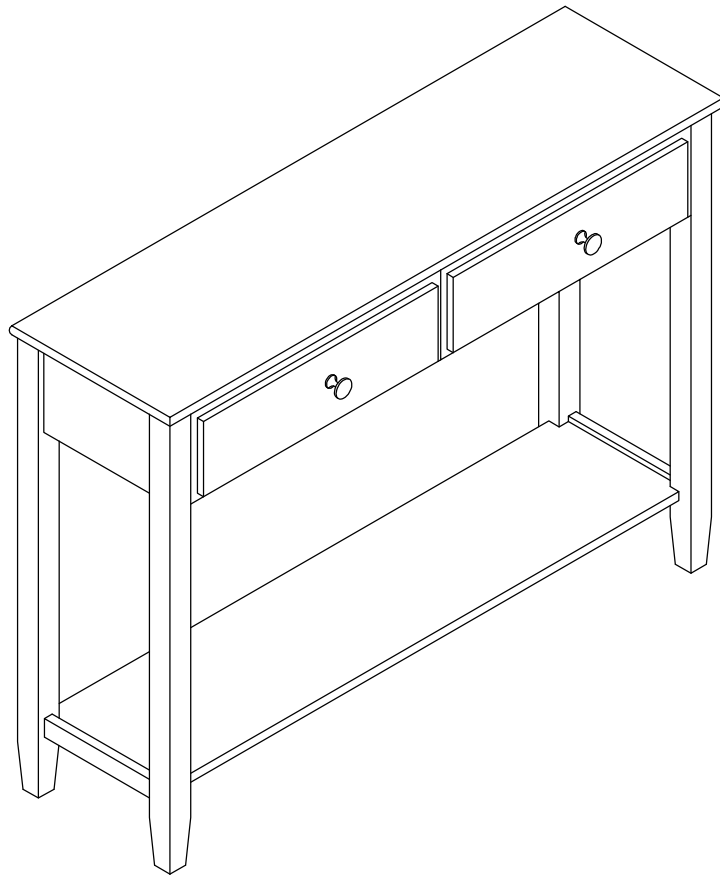




ASSEMBLY INSTRUCTIONS



NOTE TO CUSTOMERS:



- For ease and speed of assembly we recommend that before you commence each step of the assembly that you identify all the parts required to complete that step.
- We recommend that where possible you allow sufficient space to assemble the item as close as possible to the place where it will be once assembled.
- For the protection of your furniture we recommend that the product is placed on protected surfaces during assembly to prevent any damage.
- During assembly do not over tighten, as this may damage the product.
- Please ensure you retain all the product packaging until the item is completely assembled.
- Please periodically check all fittings and re-tighten as necessary.
- Please never allow any liquids to remain on your furniture as absorption can cause the wood to warp or finish to de-laminate.
- It is recommended that this item should be assembled by two adults.

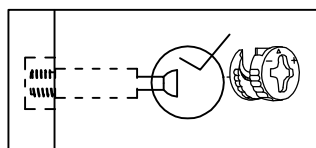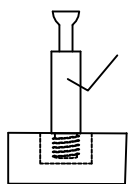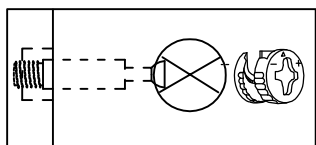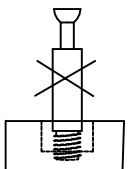To use a cam lock: (Please read below instructions before assembling)




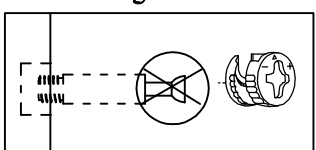
1. Insert cam screw into hole as shown in diagram A .

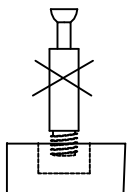Diagram B




Make sure not to insert the cam screw:
Too deep as shown in figure B as this will cause the
cam screw to be misaligned and unable to
interlock properly.


Diagram C



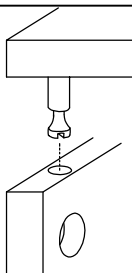Also avoid inserting the cam screw too close to the
surface of the hole as shown in figure C, as this will
cause the cam lock to be too loose, and not interlock
properly.



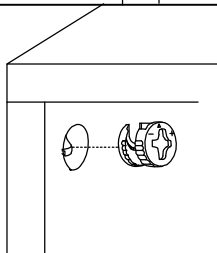
2. Connect the panels together.



ARROW SIGN



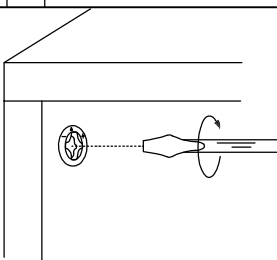3. When inserting the cam lock make sure the arrow
of the cam lock faces the cam screw.
















4. To tighten the cam lock turn the cam lock clockwise
90-180 degree or until the arrow is facing opposite
the place cam lock was inserted.

**NOTE: DO NOT USE AN AUTOMATIC
SCREWDRIVER TO TIGHTEN CAM LOCKS.**







Note:

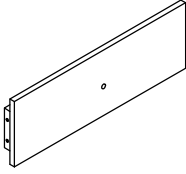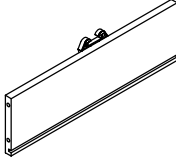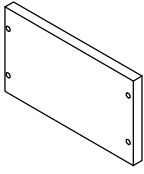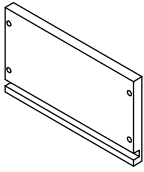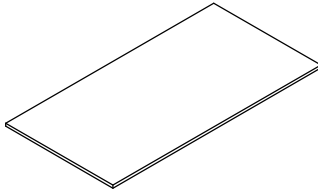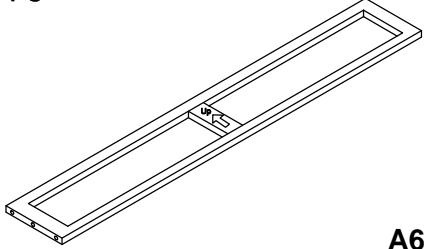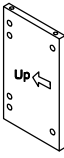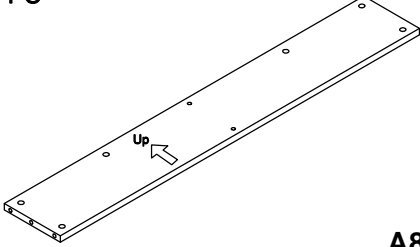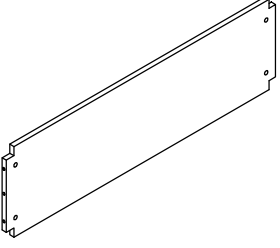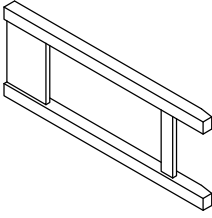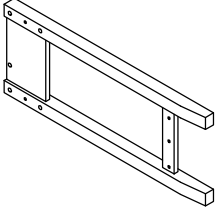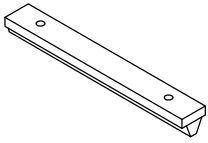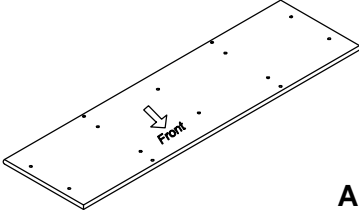- Read these instructions carefully before assembling.
- Tools required : Phillips screwdriver, flat screwdriver.
- Find a clean, smooth area on which to work , such as a carpet, in order to avoid scratching the wood surfaces.
- Wait to dispose of the packing material until assembly is complete and all parts and hardware are accounted for.
- Two or more people might be required for assembly.

PARTS LIST


DRAWER FRONT PANEL 2 PCS  A1 (L&R)	DRAWER BACK PANEL 2 PCS  A2	DRAWER LEFT SIDE PANEL 2 PCS  A3
DRAWER RIGHT SIDE PANEL 2 PCS  A4	DRAWER BOTTOM PANEL 2 PCS  A5	FRONT FRAME 1 PC  A6
MIDDLE PANEL 1 PC  A7	BACK PANEL 1 PC  A8	BOTTOM PANEL 1 PC  A9
LEFT SIDE FRAME 1 PC  A10	RIGHT SIDE FRAME 1 PC  A11	DRAWER GLIDE 2 PCS  A12
TOP PANEL 1 PC  A13		

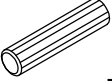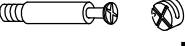HARDWARE LIST

WOOD DOWEL 6 PCS  B1	CAM-BOLT CAM-LOCK 24 SETS  B2	KNOB BOLT 2 SETS  B3	FLAT HEAD SCREW 16 PCS  B4	WOOD DOWEL 2 PCS  B5	SCREW 4 PCS  B6
--------------------------------------------------------------------------------------------------------------------------------	---------------------------------------------------------------------------------------------------------------------------------------------------	------------------------------------------------------------------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------------------------------------------	----------------------------------------------------------------------------------------------------------------------------------	-----------------------------------------------------------------------------------------------------------------------------

STEP 1: ASSEMBLE DRAWER

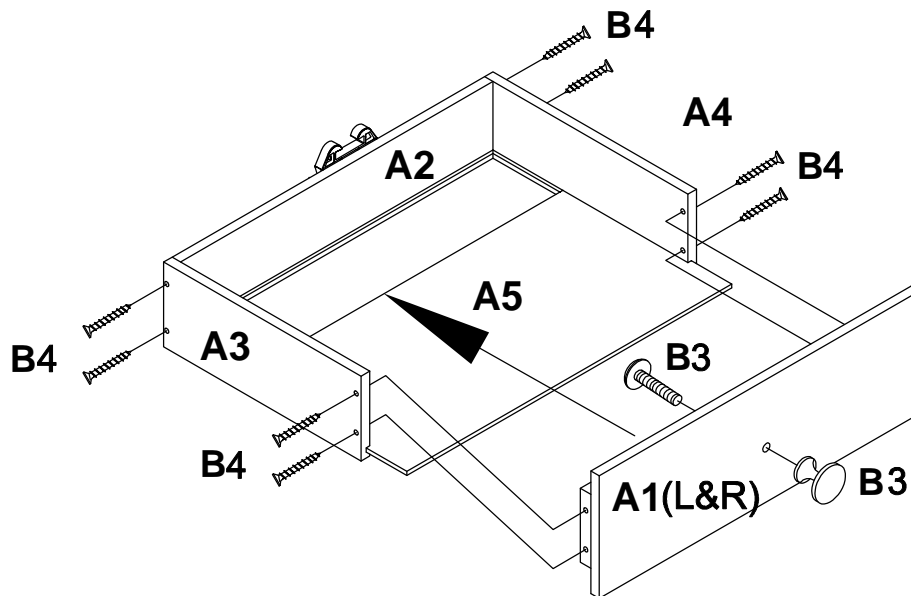
- Use screws (B4) to attach drawer side panels (A3&A4) and back panel (A2) together.
- Insert drawer bottom panel (A5) into the grooves of side panels (A3&A4).
- use screws (B4) to attach drawer side panels (A3&A4) and drawer front panels (A1L&A1R) together.
- Use bolts (B3) to attach knobs (B3) onto drawer front panels (A1L&A1R).




B4		16pcs
B3		2sets

STEP 2: ASSEMBLE FRONT FRAME(A6), MIDDLE PANEL(A7) AND BACK PANEL(A8)

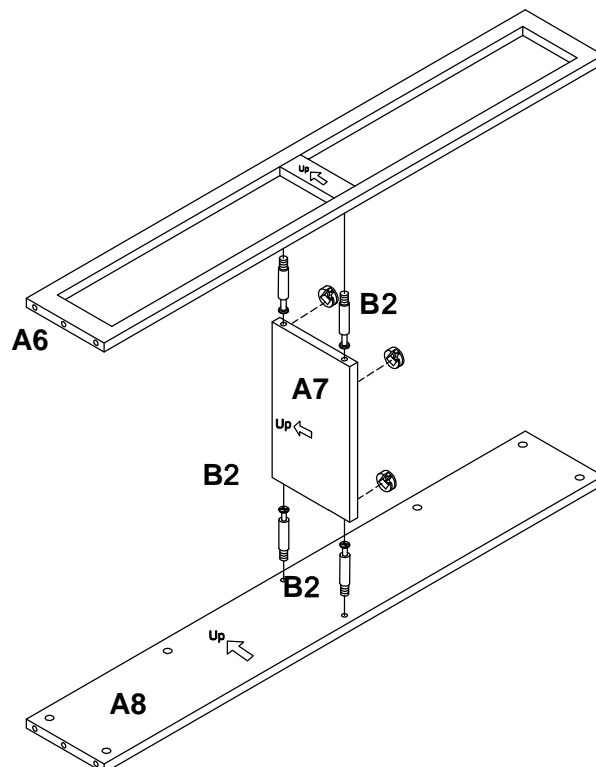
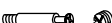
- Use cam-bolts & cam-locks (B2) to assemble front frame (A6), middle panel (A7) and back panel (A8) together.



B2		4sets
----	---------------------------------------------------------------------------------------	-------




STEP 3: ASSEMBLE SIDE FRAME (A10&A11)AND BOTTOM PANEL(A9)

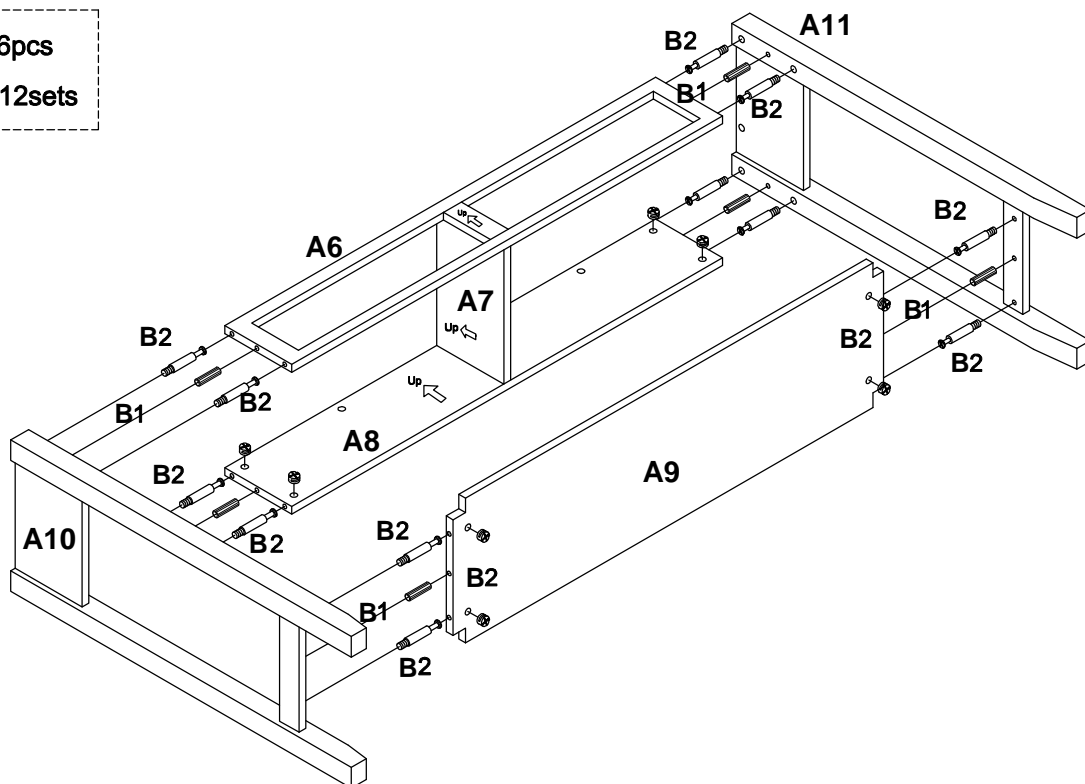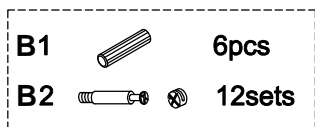- Use wood dowels (B1) and cam-bolts & cam-locks (B2) to assemble side frames (A10&A11), back panel (A8), front frame (A6), and bottom panel (A9) together.




STEP 4: ASSEMBLE TOP PANEL (A13) AND DRAWER GLIDE (A12)

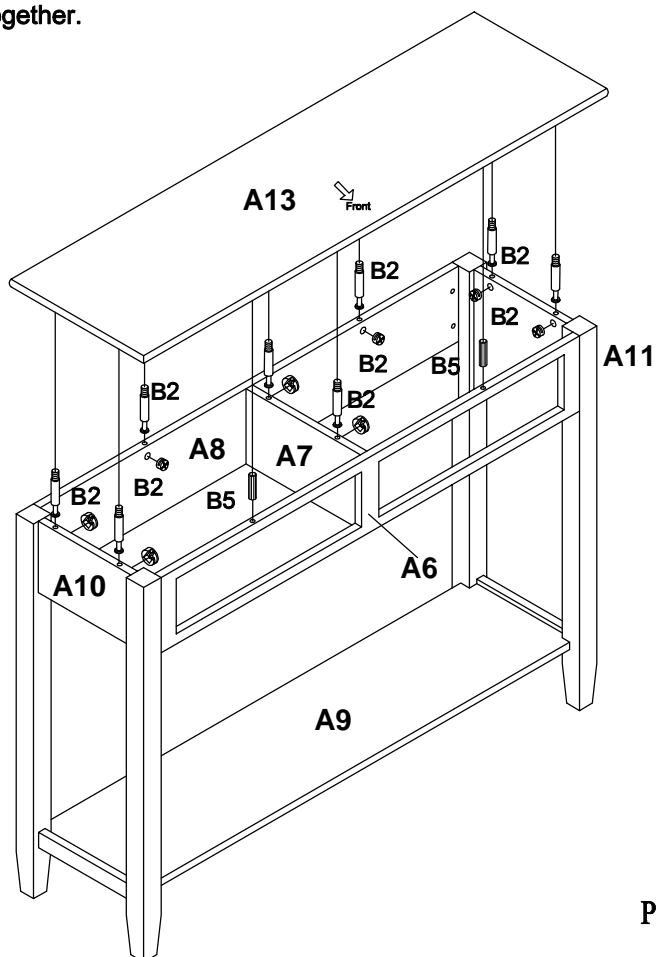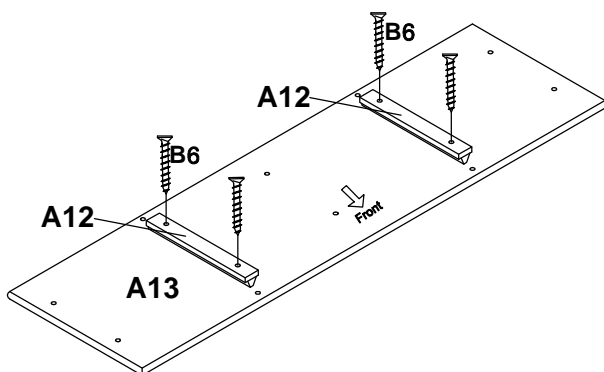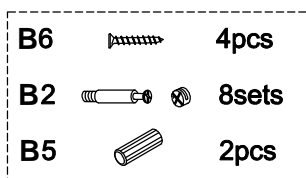- Use screws (B6) to attach drawer glide (A12) and top panel (A13) together.
- Use wood dowels(B5)cam-bolts & cam-locks (B2) to assemble top panel (A13), side frames (A10&A11), middle panel (A7), back panel (A8) and front frame (A6) together.










STEP 5: PLACE DRAWER

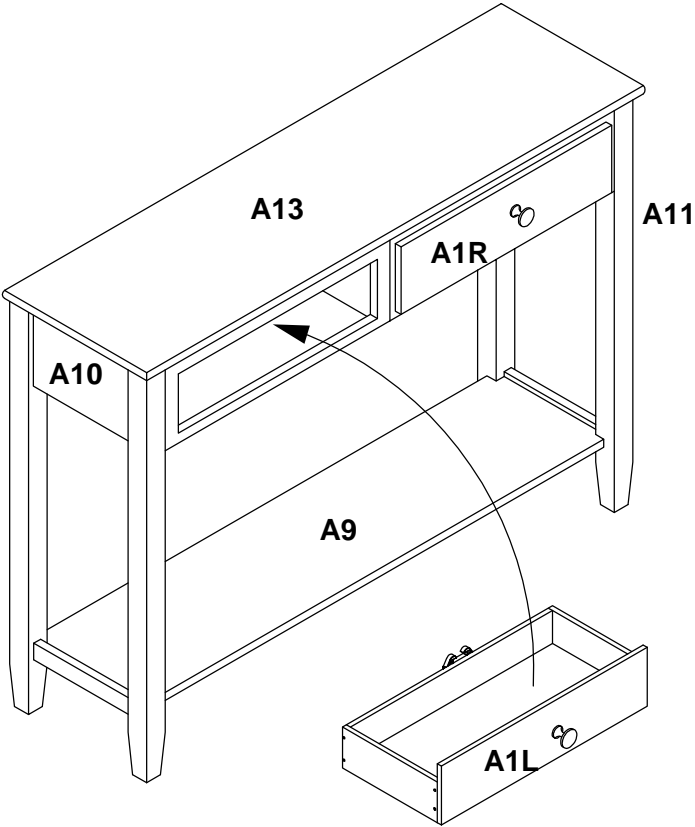- Insert the 2 pre-assembled drawers into the product body .Please make sure to slightly incline the drawer so that the plastic guide should catch the wood glide.



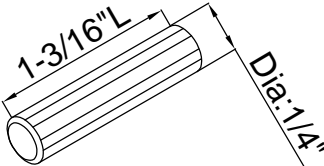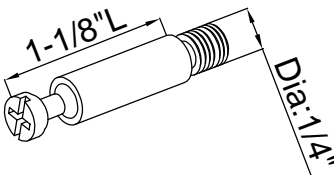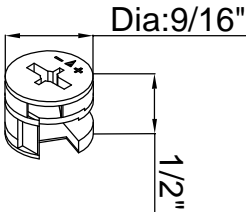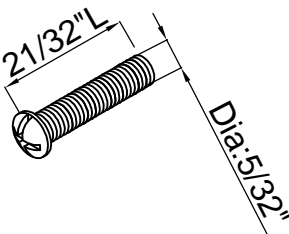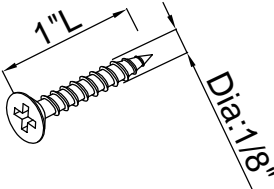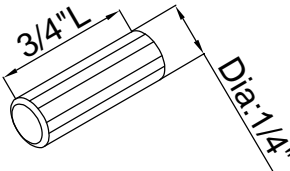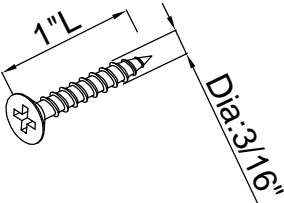APPENDIX: Dimension of Hardwares in this AI.

<div><div>B1</div><div></div><div>Wood Dowel</div></div>	<div><div>B2</div><div></div><div>Cam-bolt</div></div>	<div><div>B2</div><div></div><div>Cam-nut</div></div>	
<div><div>B3</div><div></div><div>Bolt for Knob</div></div>	<div><div>B4</div><div></div><div>Screw</div></div>	<div><div>B5</div><div></div><div>Wood Dowel</div></div>	<div><div>B6</div><div></div><div>Screw</div></div>