
MIRRORS BY DW

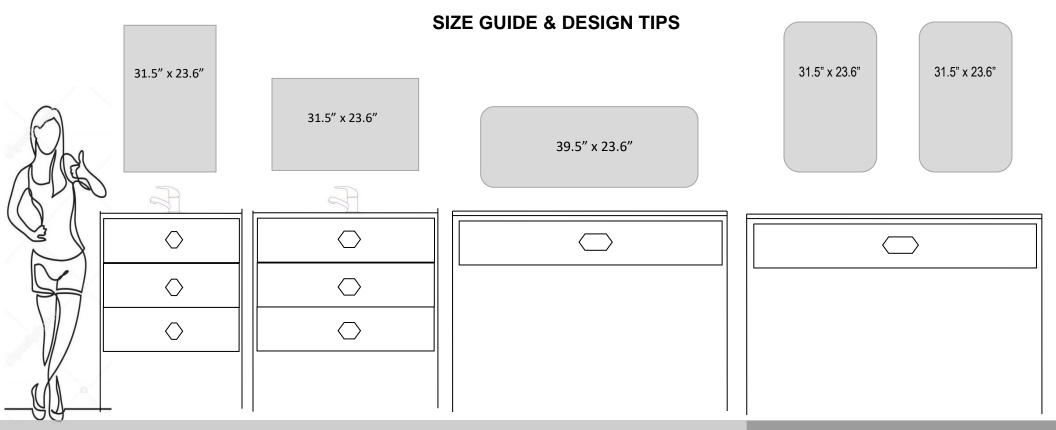

INTERIOR DESIGNER TIPS

- When placing a mirror above a vanity, console table, arm chair or fire place hang your mirror 6'' 8'' above the visual line. In bathrooms this will protect your mirror from water splashes
- 4 Choose a mirror that is 1"-2" shorter than the width of the countertop of your bathroom vanity
- Make sure the mirror is tall enough so your head doesn't get cut off when you look into it
- 4 When hanging above a nightstand, center the mirror above the night stand
- When hanging on a blank wall, place it so the vertical center is at eye level- usually 60" from the floor
- 4 Hang mirrors with a friend so you can 'eyeball' your placement
- 4 ADA COMPLIANT MIRRORS Just make the bottom edge of the reflective surface is no higher than 40" off the ground
- 4 All rectangular mirrors featured can be hung horizontally and vertically unless otherwise noted

FEATURED RECTANGLES MIRRORS:

4 Measures 31.5" X 23.6":

| SSM1058 | Scallop Edge |
|---------|--------------|
| SSM1102 | Double Bevel |
| SSM1125 | V-Groove |
| SSM114 | Shelf |
| SSM1140 | U Groove |
| SSM216 | 1" Bevel |
| SSM222 | 0.5" Bevel |
| SSM3001 | Scallop Edge |
| | |

4 Measures 39.5" X 23"

SSM2436 1" Bevel

4 Measures 39.5" x 13.75": SSM1067 Polished Edge