





MANHATTAN  
COMFORT

---

**103GMC**

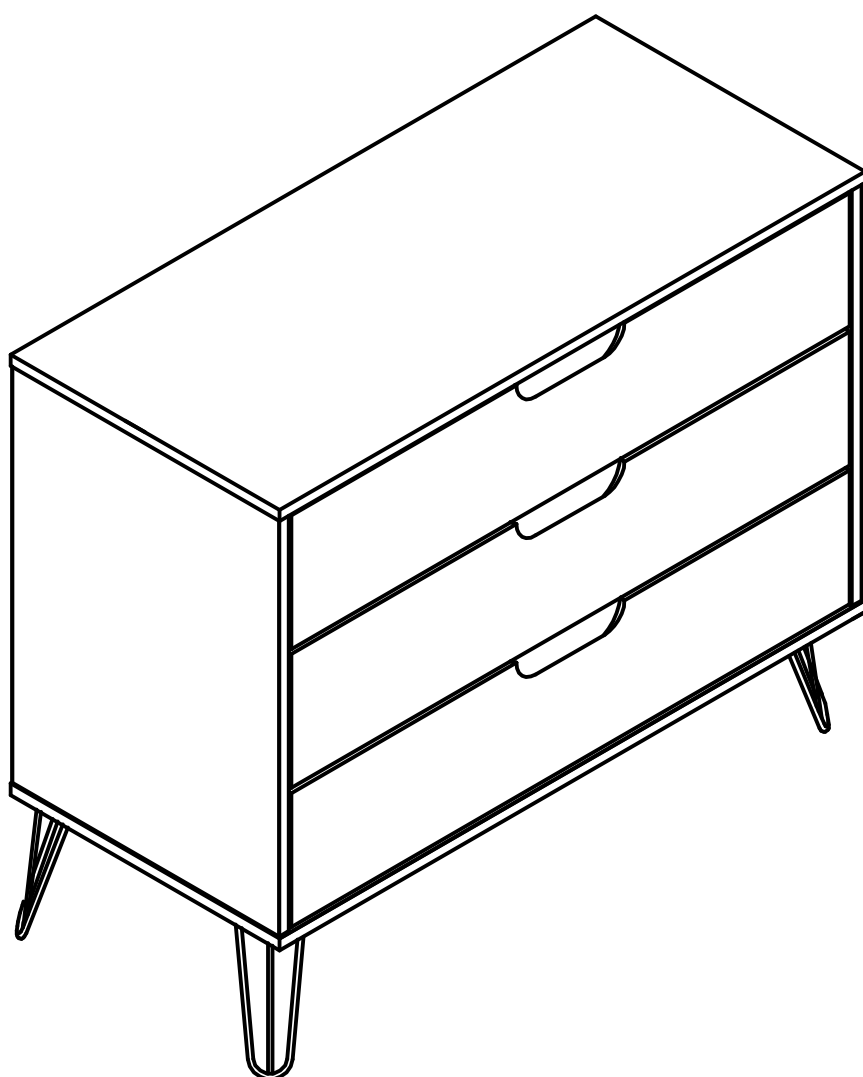

V.01092023

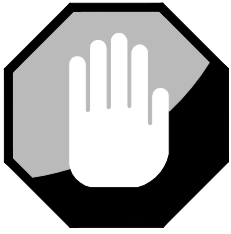


# STOP!

Before beginning the assembly process,  
ensure all boxes and parts have been delivered.


**ATTENTION: BEFORE START ASSEMBLING TAKE A PICTURE OF THE LABELS ON THE PACKAGES, THIS WILL BE REQUIRED IN CASE THE PRODUCT HAS ANY ASSISTANCE DEMAND.**

## FOR BEST RESULTS:

- Do not throw away packaging materials until assembly is complete.
- Assemble item on a soft surface, such as cardboard or carpet, to protect finish.
- Proper assembly requires two people.

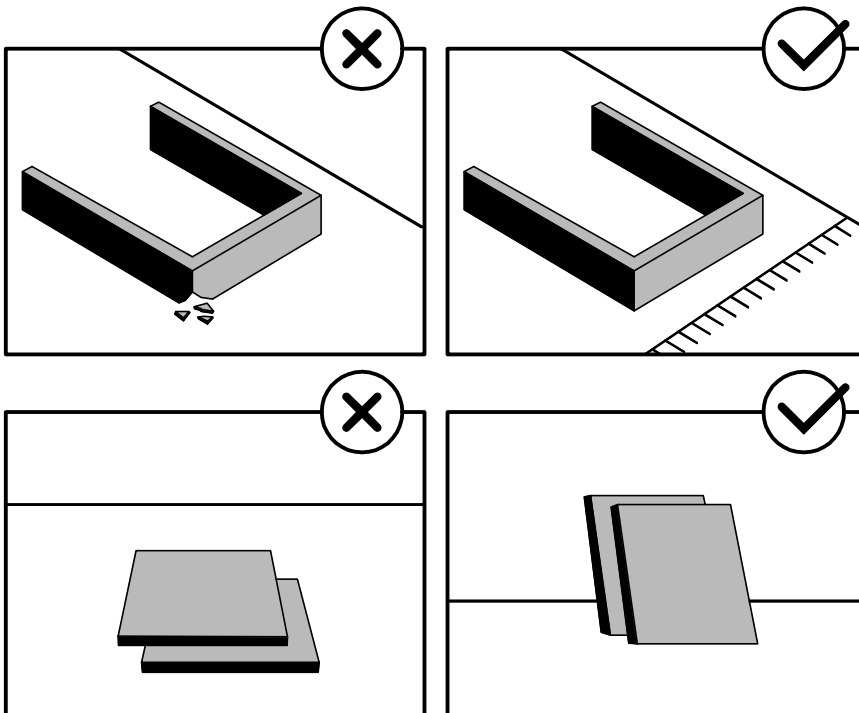

## TOOLS REQUIRED

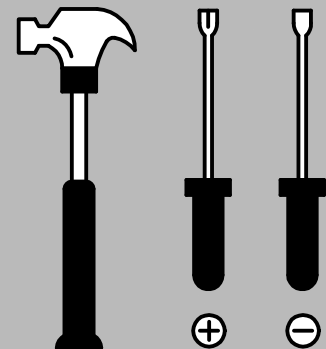

## SUPPORT SITE




View our assembly video online  
**WWW.MANHATTANCOMFORT.COM**





Stuck? Question? We are here to help.  
tel: **908-888-0818**  
e-mail: **help@manhattancomfort.com**






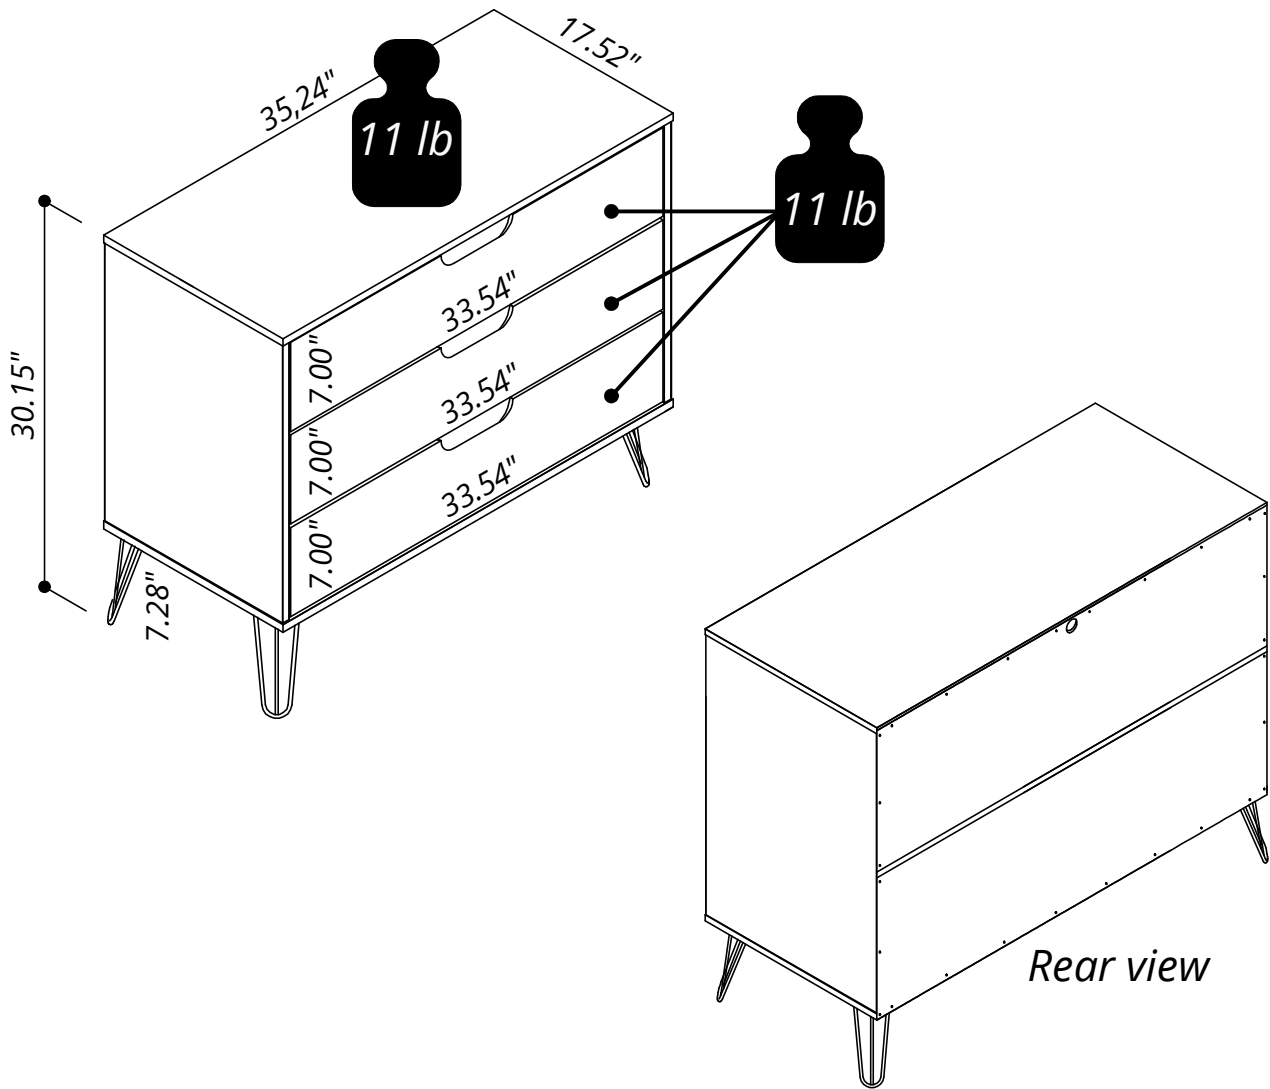


Prepare the room before starting the assembly, leaving it completely clean and the area in good condition to start the work.  
Use the cardboard of the packaging to separate and support the parts removed from the boxes.

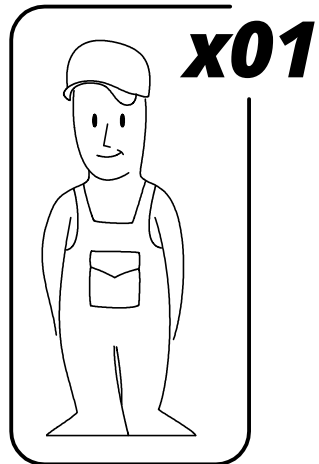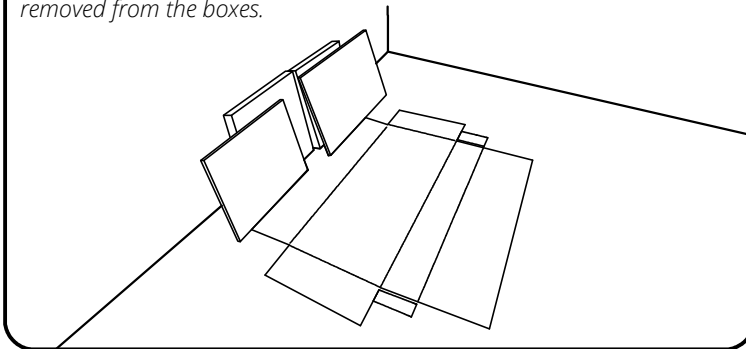

Recommended tools (not included)














## Parts

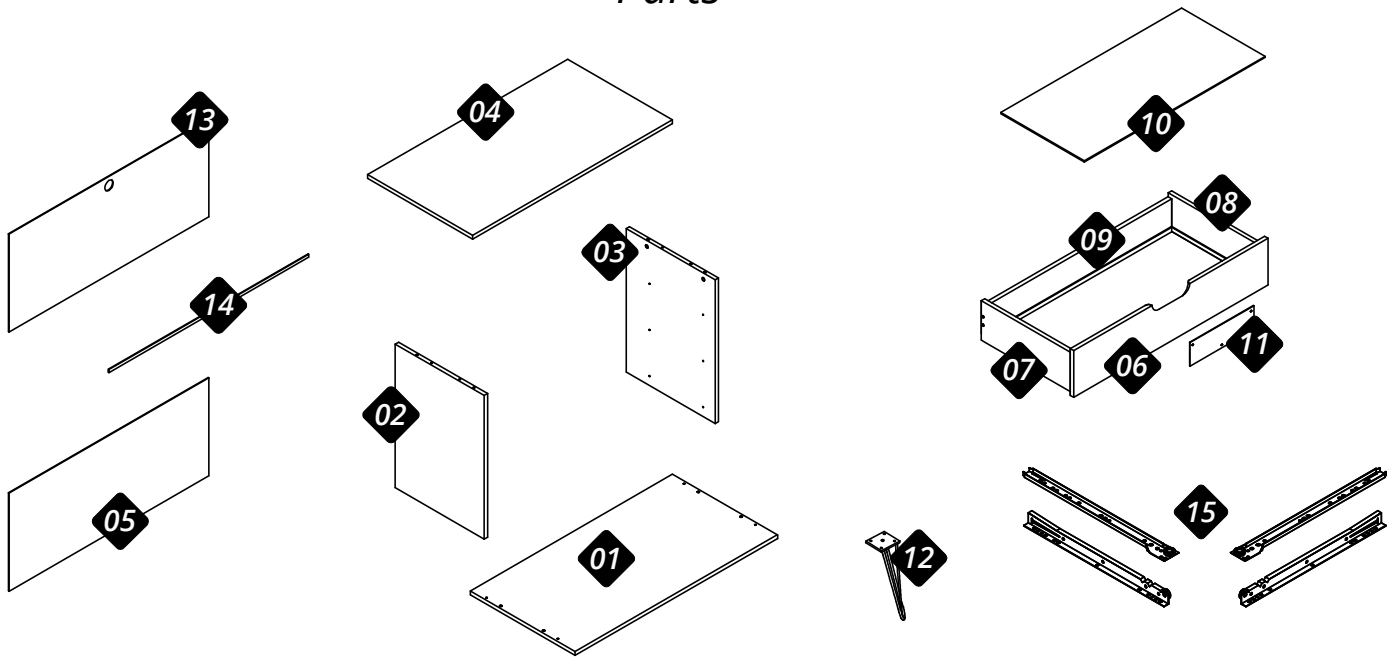


N°	Description	Qty.
01	Base	01
02	Left side panel	01
03	Right side panel	01
04	Top panel	01
05	Lower back panel	01
06	Front of the drawer	03
07	Left side panel of the drawer	03
08	Right side panel of the drawer	03
09	Rear panel of the drawer	03
10	Base of the drawer	03
11	Decorative apply	03
12	Feet	04
13	Upper back panel (hole)	01
14	Plastic union profile	01
15	Slides	03


## Hardware

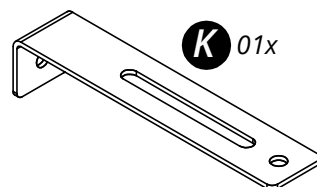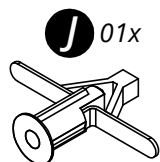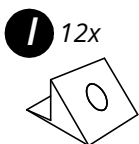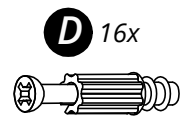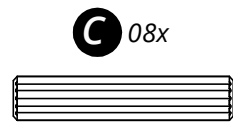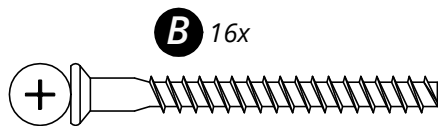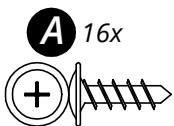

# HOW TO IDENTIFY THE SLIDES?

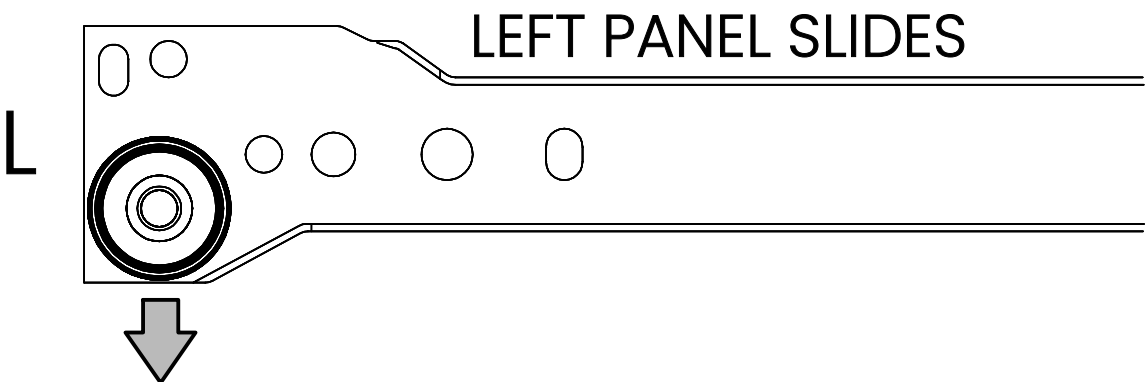


\*plastic wheel always pointed to the ground.



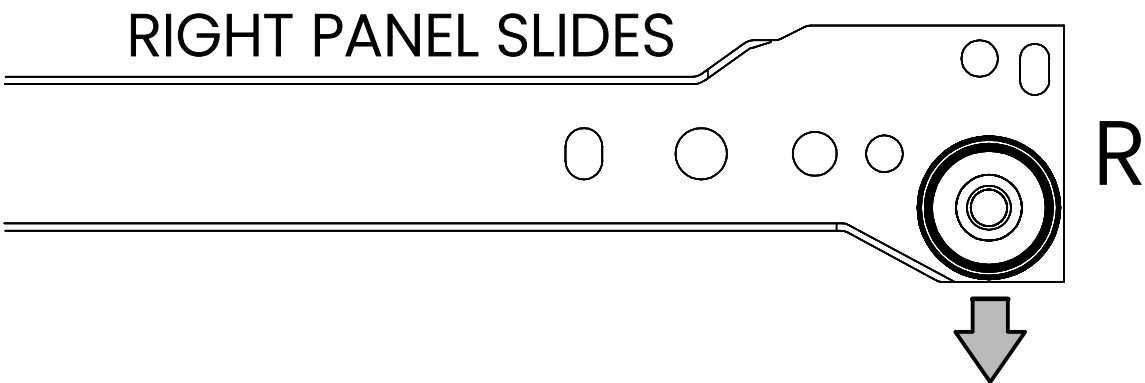


\*plastic wheel always pointed to the ground.

## WICH HOLES TO ATTACH THE SCREWS?

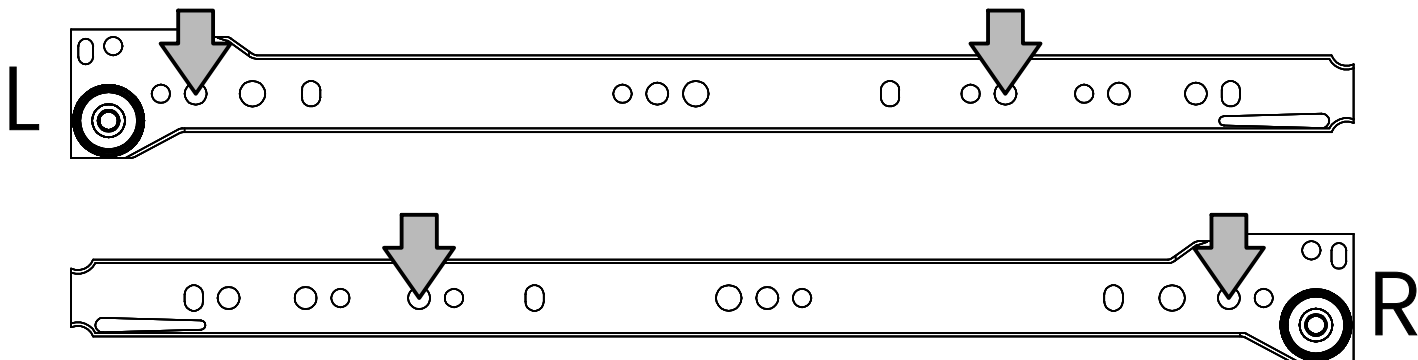


## Step 01

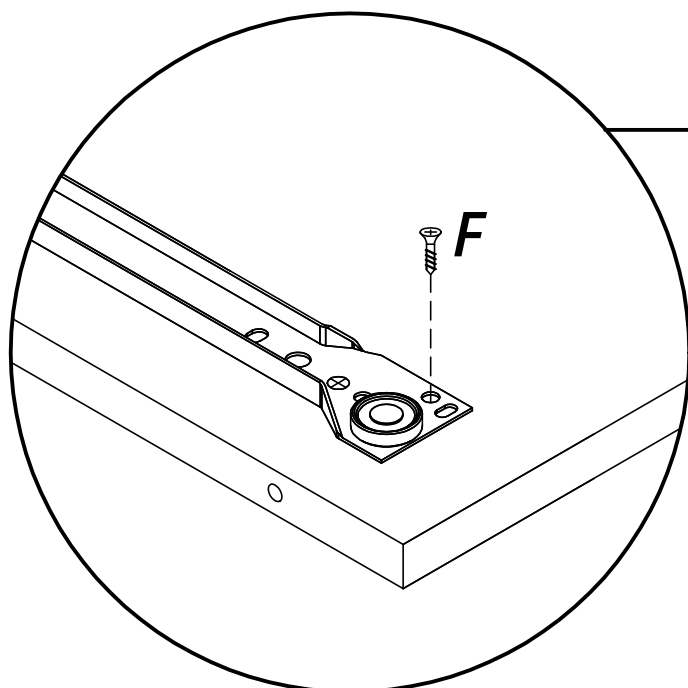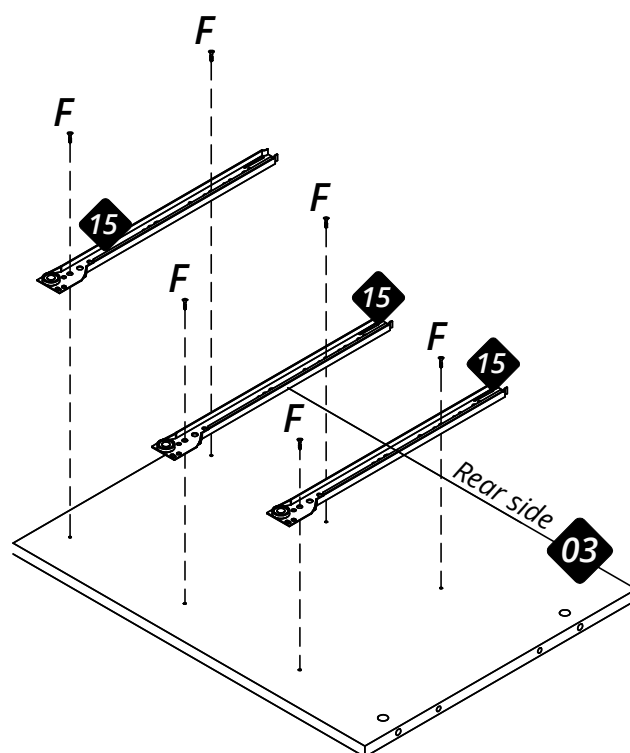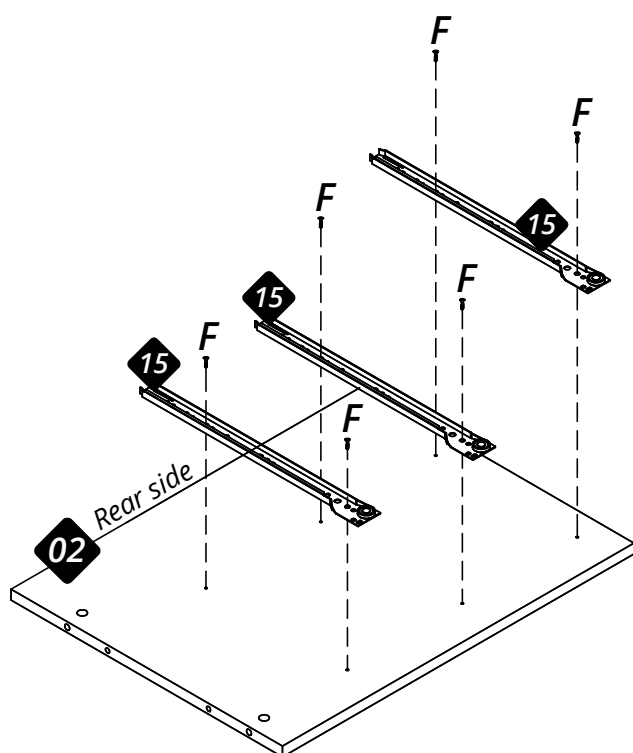 $F = 18x$ **ATTENTION!**

It is mandatory to apply the screw (F), observe there is no hole at this position.



**Attention, all the assemblage must be done on the cardboard box or the Styrofoam boards to avoid damage to the parts.**

### Step 02




C = 08x

Insert the hardware (C) into the parts 02 and 03.

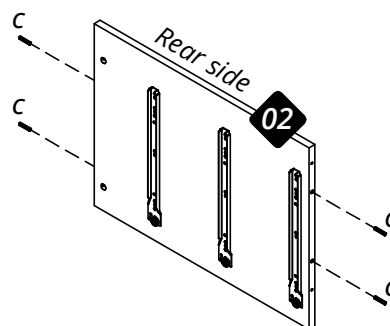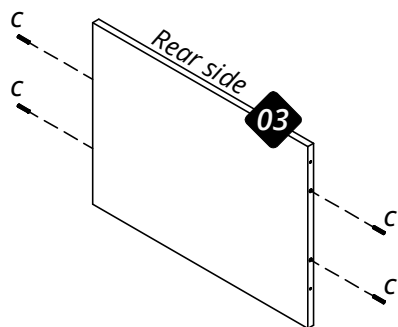



### Step 03




B = 02x

Connect the part 02 onto the part 01 with the hardware (B).


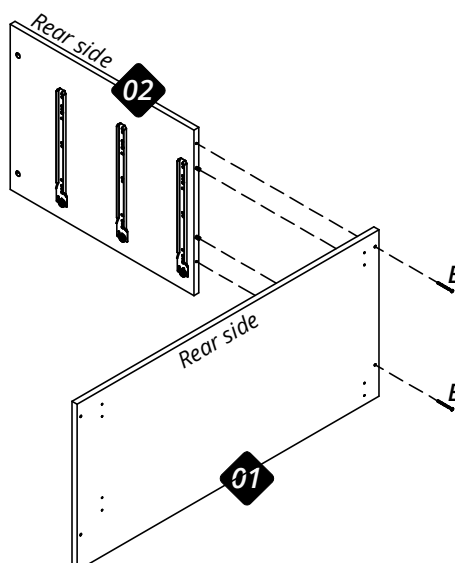


**Step 04** $B = 02x$ 

Connect the part 03 onto the part 01 with the hardware (B).

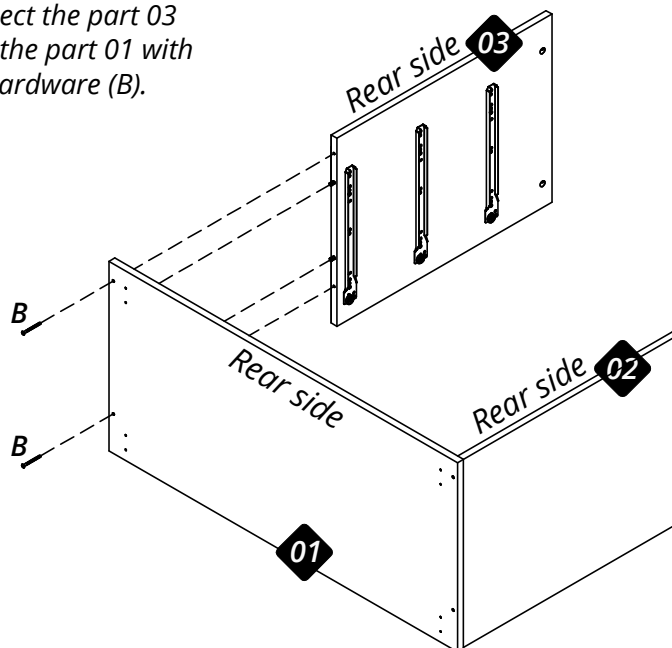**Step 05** $D = 04x$ 

Apply the hardware (D) into the part 04.

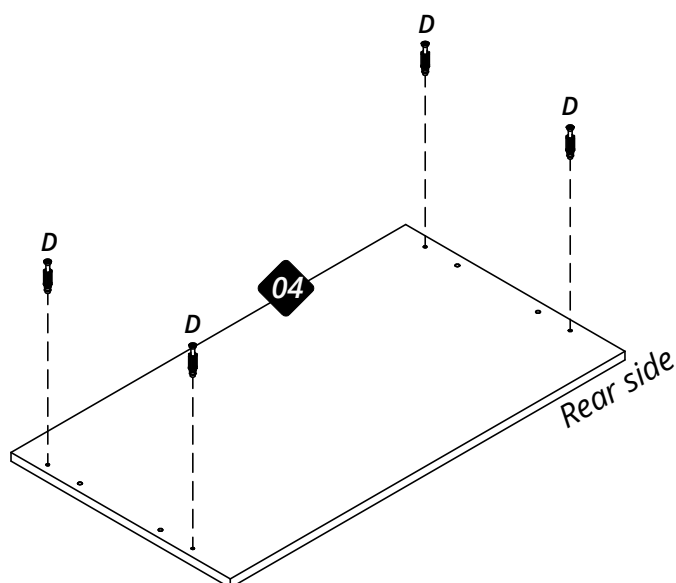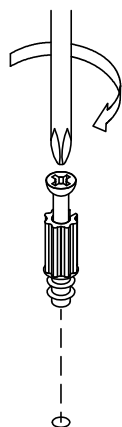



## Step 06





$E = 04x$



$L = 04x$



Connect the part 04 onto the parts 02 and 03 with the hardware E.

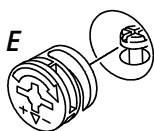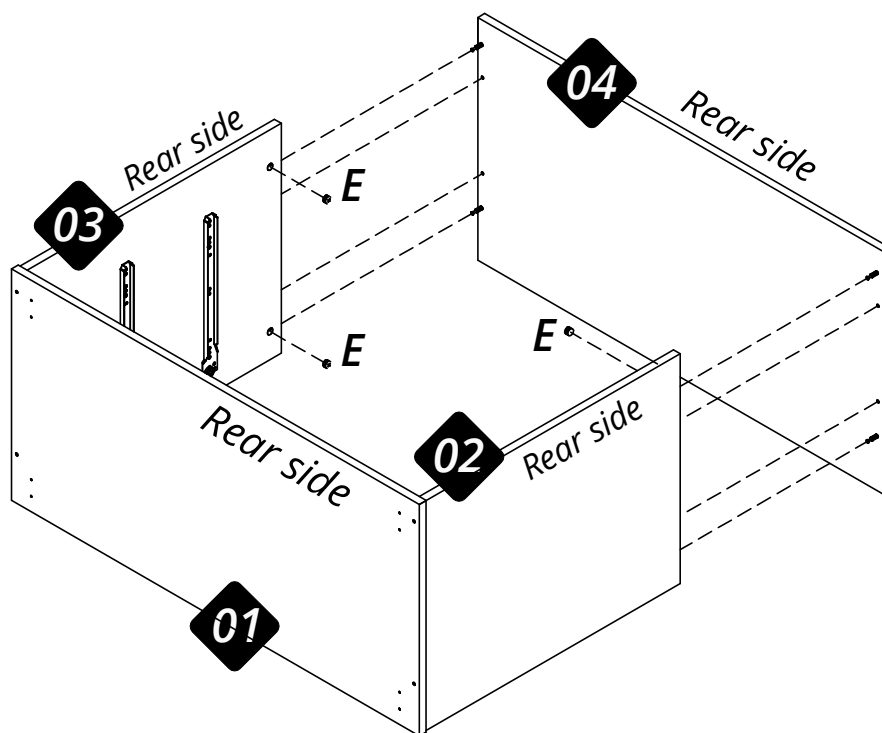

Apply the hardware (L) onto the hardware (E).


## Step 07

Pay attention to the correct position of the feet.  
The arrows refers to the correct hole to align the feet.

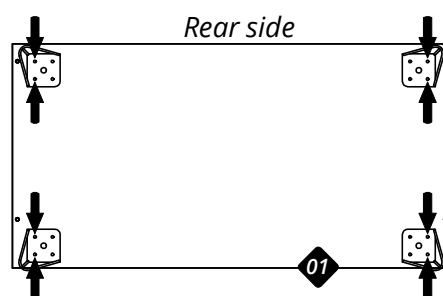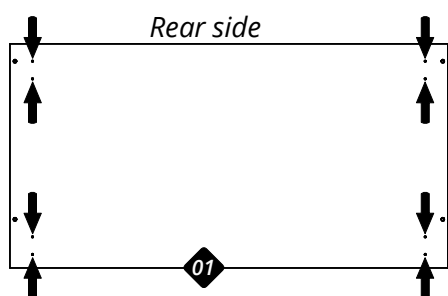


A = 16x

Use some pieces of Styrofoam boards (package part)  
to avoid contact of the feet (part 12) with the floor.  
Connect the parts 12 onto the part 01 with the hardware (A).

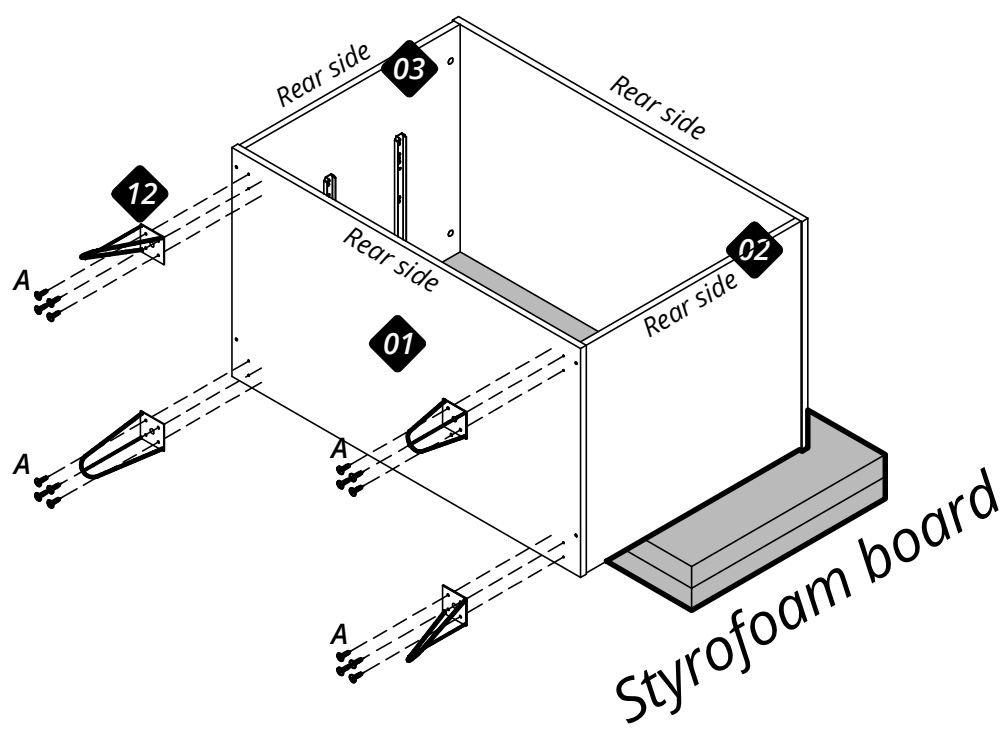


## Step 08

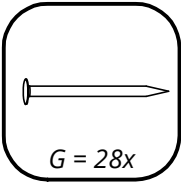


*Attention, all the parts must be connected on the rear side!*

*Use a try square to align the dresser before start nailing the part 05 with the hardware (G).*

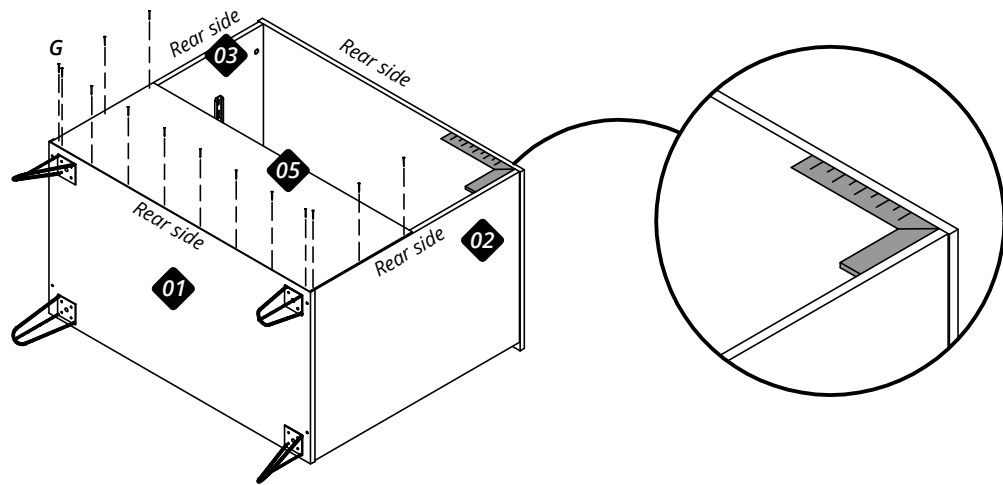

*Connect the part 14 onto the part 05, and connect the part 13 into the part 14. And then, connect the part 13 using the hardware (G).*

*Attention to the position of the part 13.*

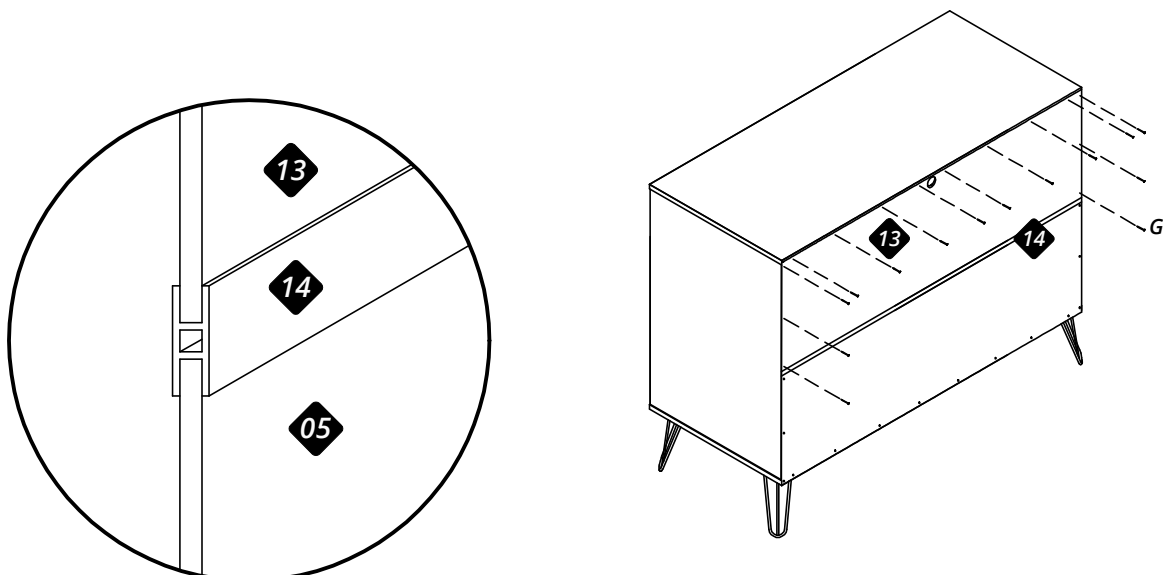

## Step 09



$D = 12x$


Apply the hardware (D) into the part 06.



$F = 09x$

Before applying the part 11, observe if your product has the option of matching colors with the front of the drawer (part 06).

Connect the part 11 onto the part 06 with the hardware (F).

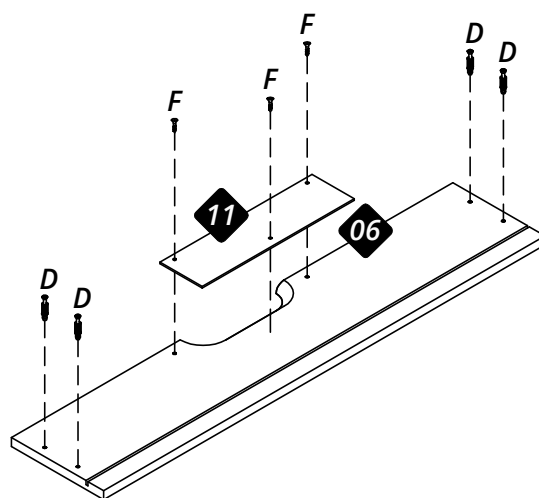

## Step 10





$E = 12x$

Connect the parts 07, 08 onto the part 06 with the hardware E.






$L = 12x$

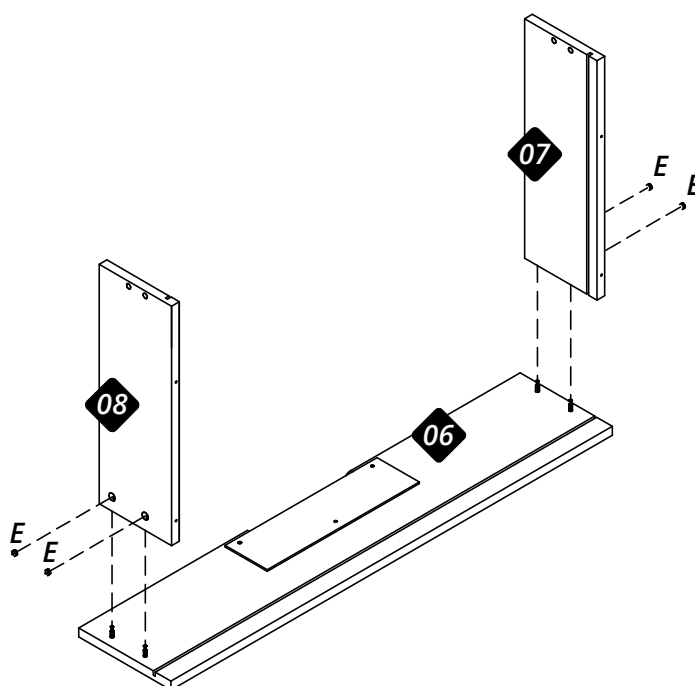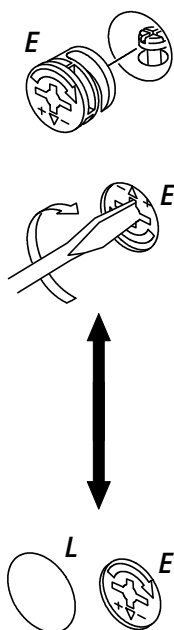

Apply the hardware (L) onto the hardware (E).


**Step 11**


Apply the part 10 in the groove of the parts 07, 08 until the groove of the part 06.

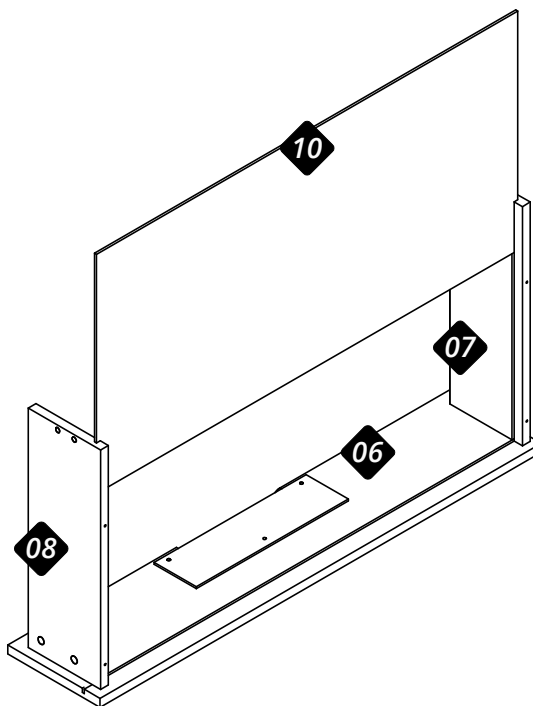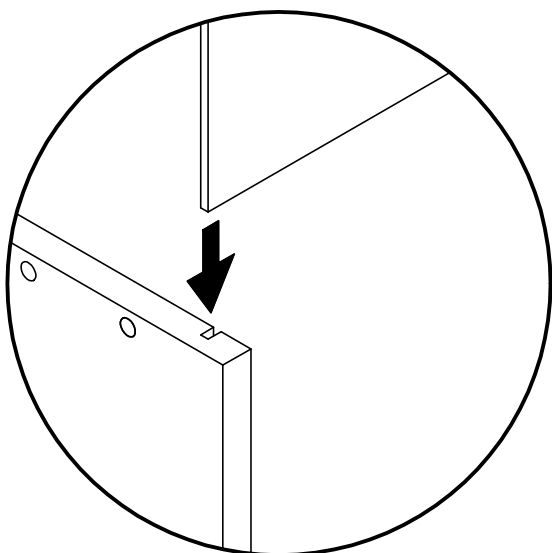**Step 12**




$B = 12x$

Connect the part 09 onto the parts 07, 08 with the hardware (B).


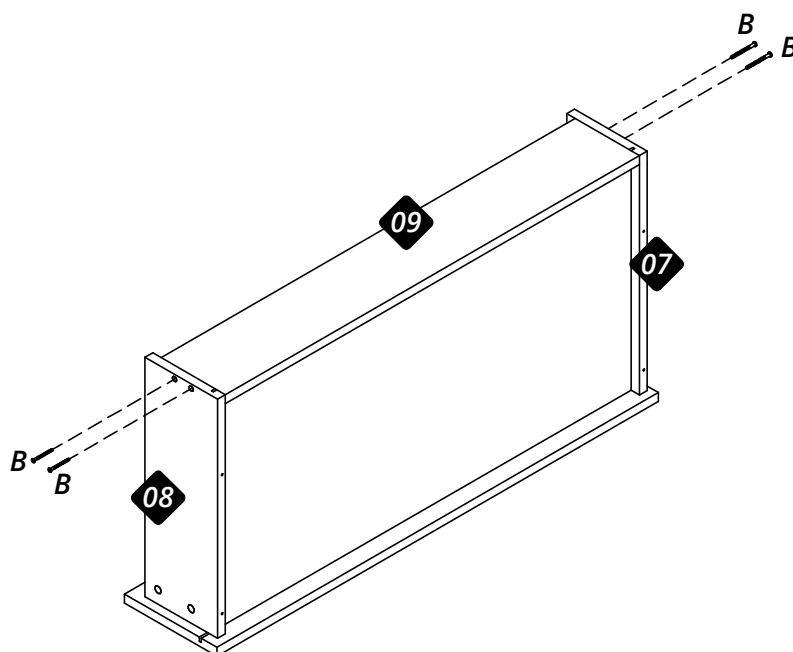


**Step 13** $I = 06x$  $F = 06x$ 

Apply the hardware (I + F) into the groove of the part 06 as shown on detail.

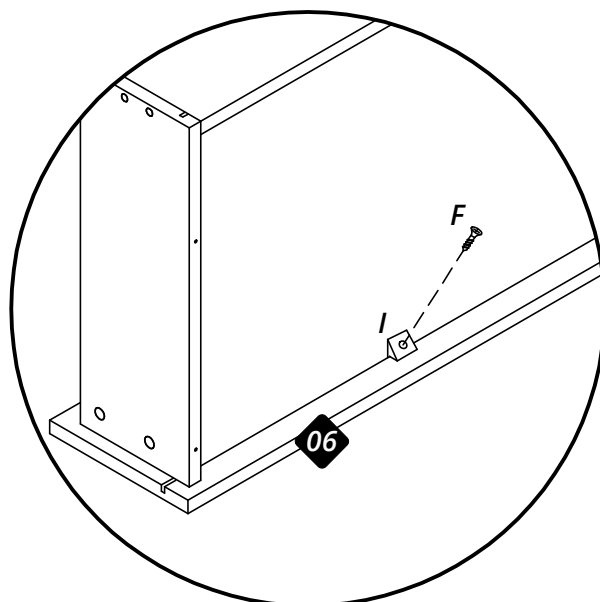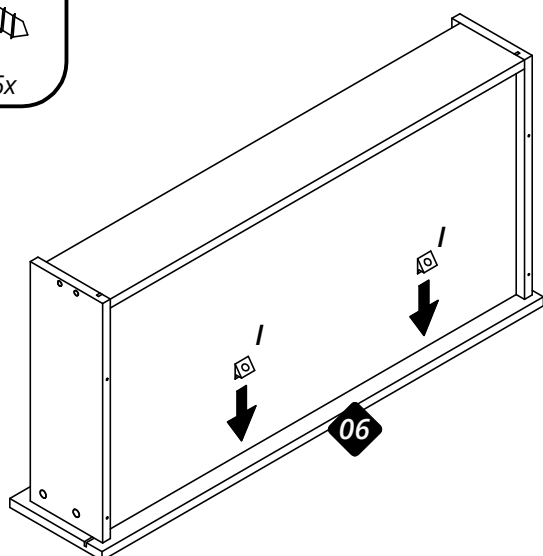

**Step 14** $I = 06x$  $F = 06x$ 

Apply the hardware (I + F) into the groove of the part 09 as shown on detail.

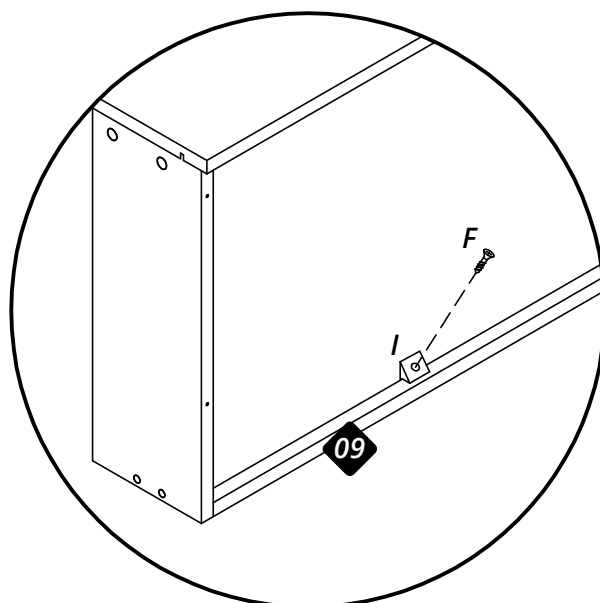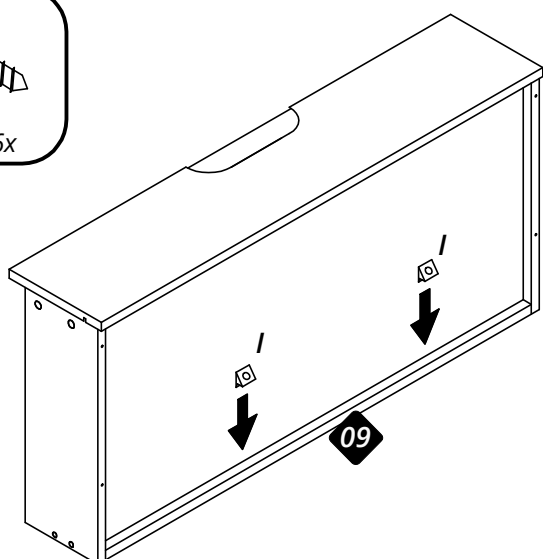


## Step 15

You must apply the screws  
on the holes  
indicated by the arrows.

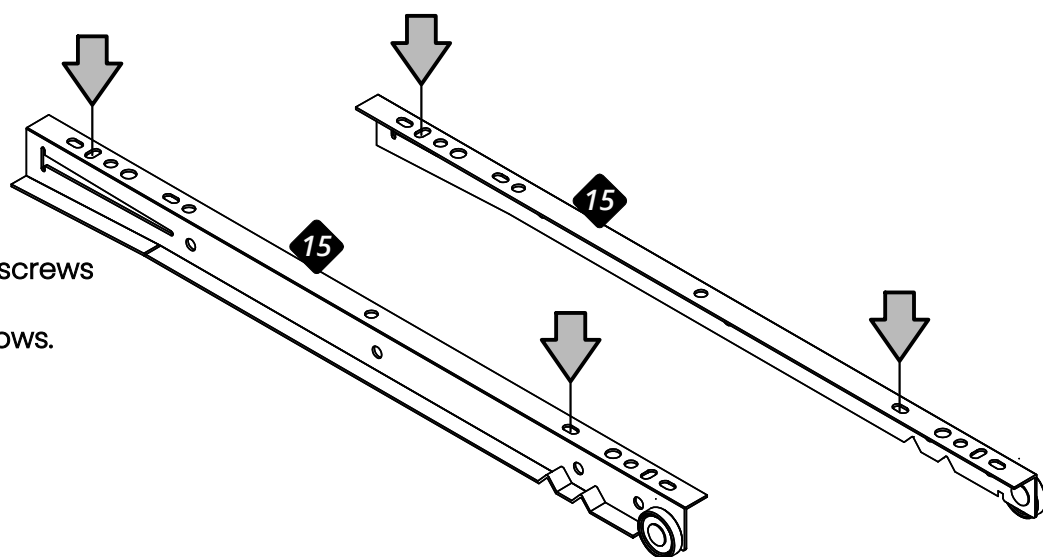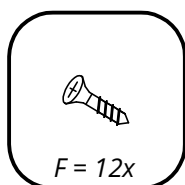

\*plastic wheel always pointed  
to the rear panel of the drawer  
part 09.

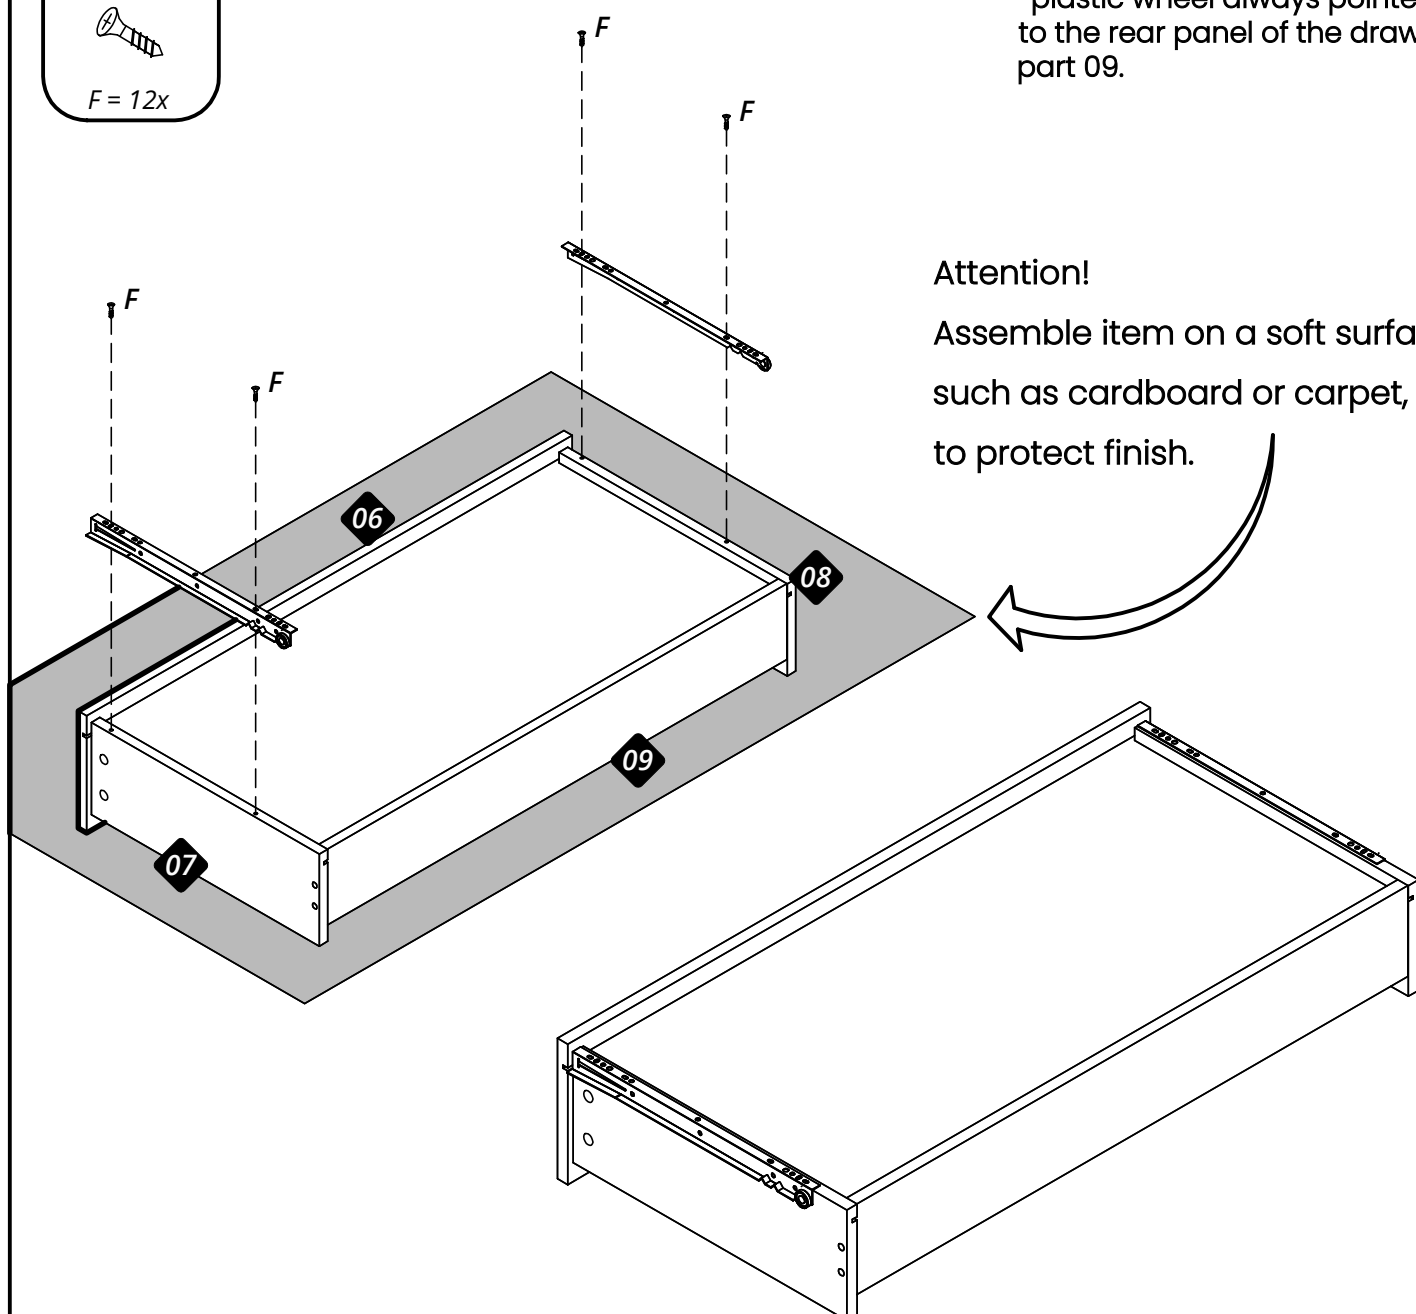




Attention!

Assemble item on a soft surface,  
such as cardboard or carpet,  
to protect finish.

## Step 16

**Attention! Tipover system.**

*First, approach the furniture as close as possible to the wall.*

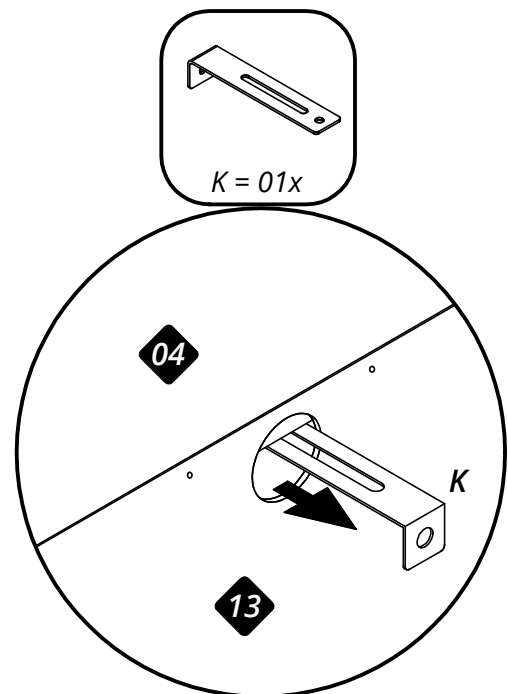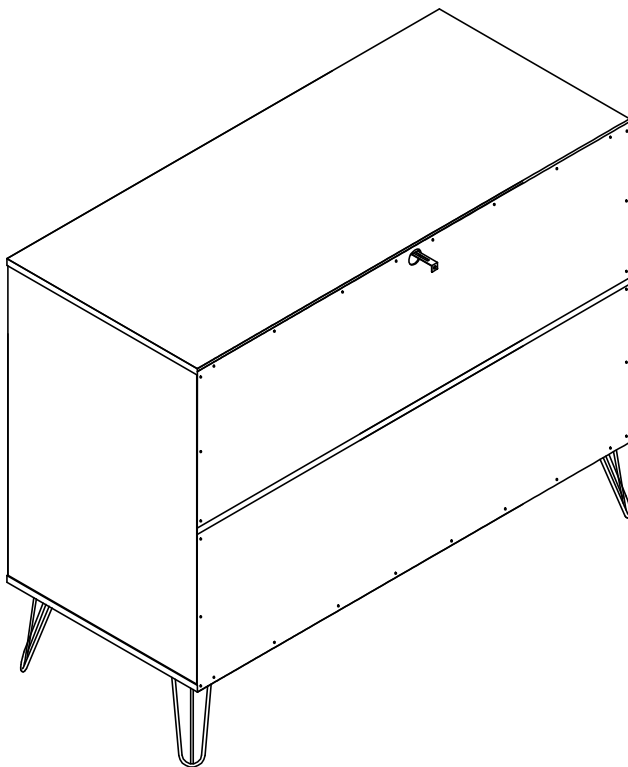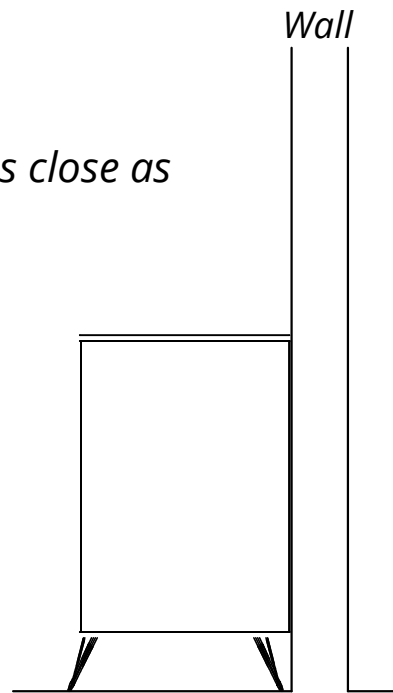


*Then, pass the hardware (K) through the hole of the part (13) from inside to the outside as shown in the figure above until it reaches the wall.*




## Step 17

**Attention! Tipover system.**


*You will need a pencil to mark where you should drill the wall with a 3/8" drill bit to put in the hardware (J).*

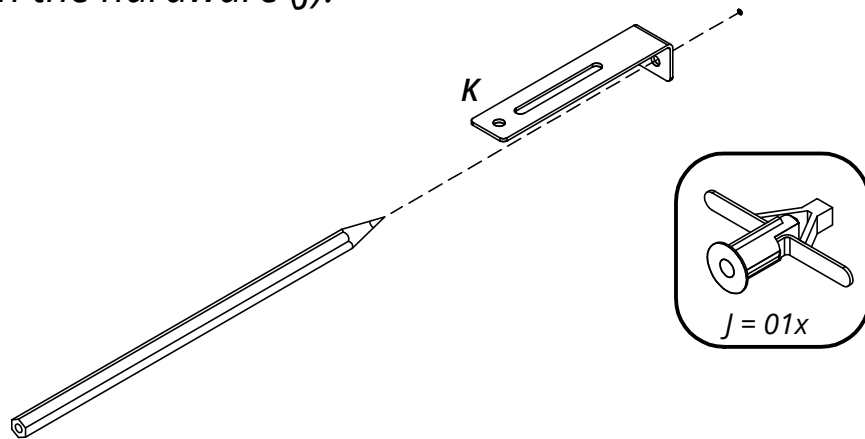


*Use the 3/8" drill bit to drill the wall.*


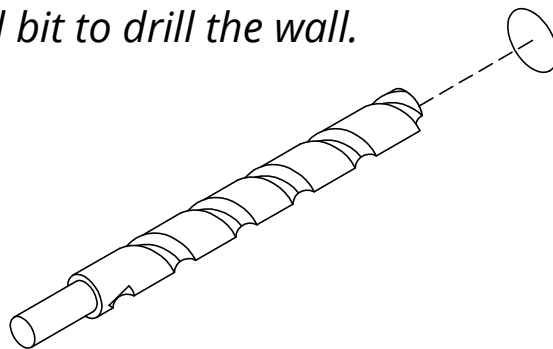


*Press the wings of the hardware (J) and put it in to the hole that you drilled on the wall.*

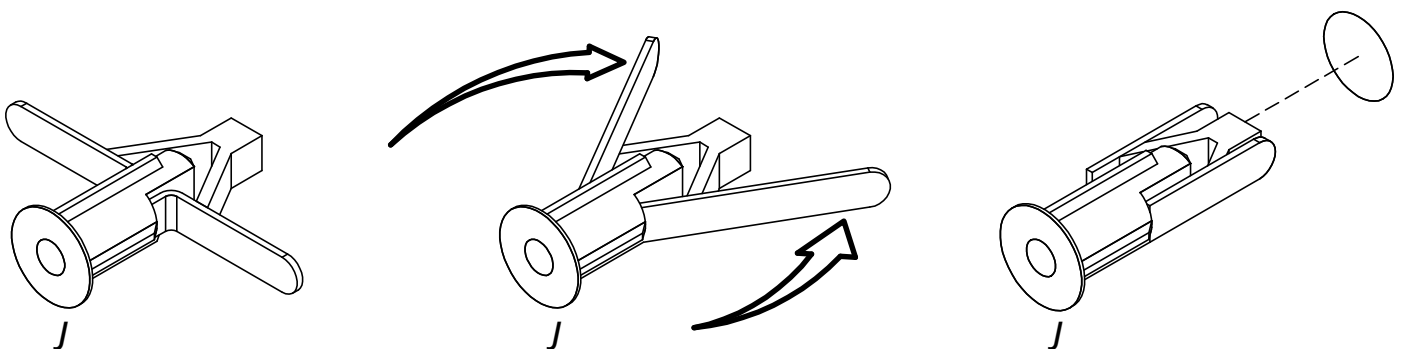


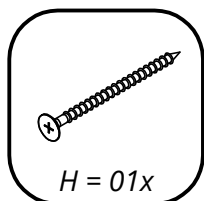**Step 18****Attention! Tipover system.**

Connect the hardware (K) on the wall, using the hardware (H).

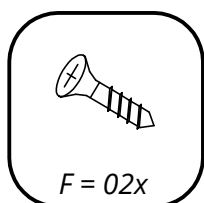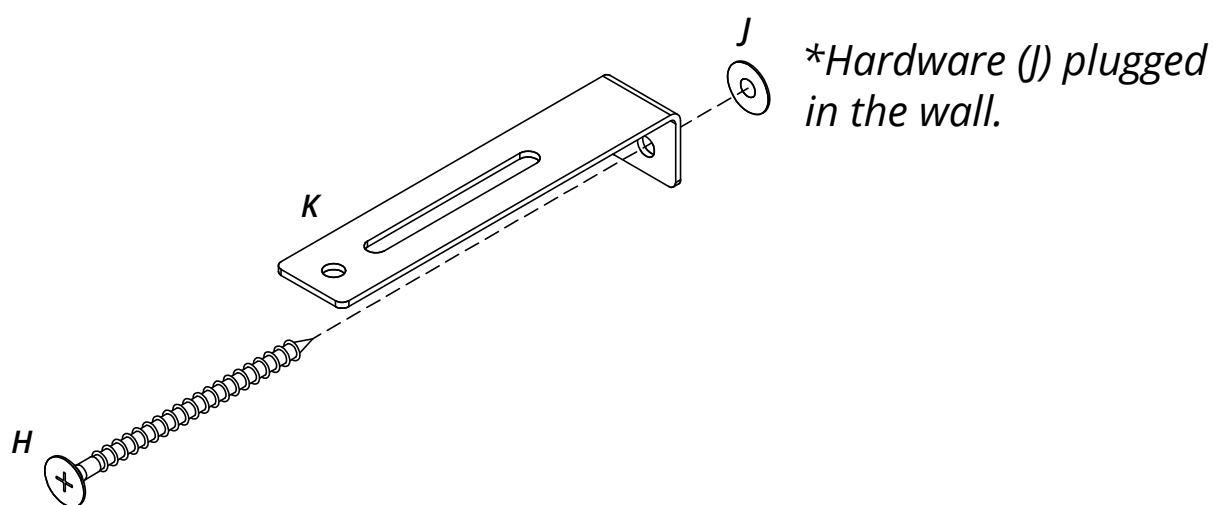


Connect the hardware (K), under the part 04 with the hardware (F).

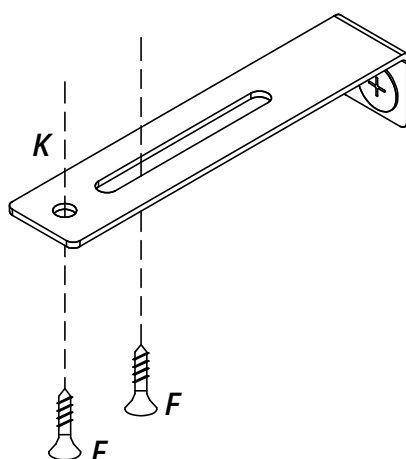

**Step 19**

*Install the drawers fitting them into the slides fixed on the parts 02,03.*

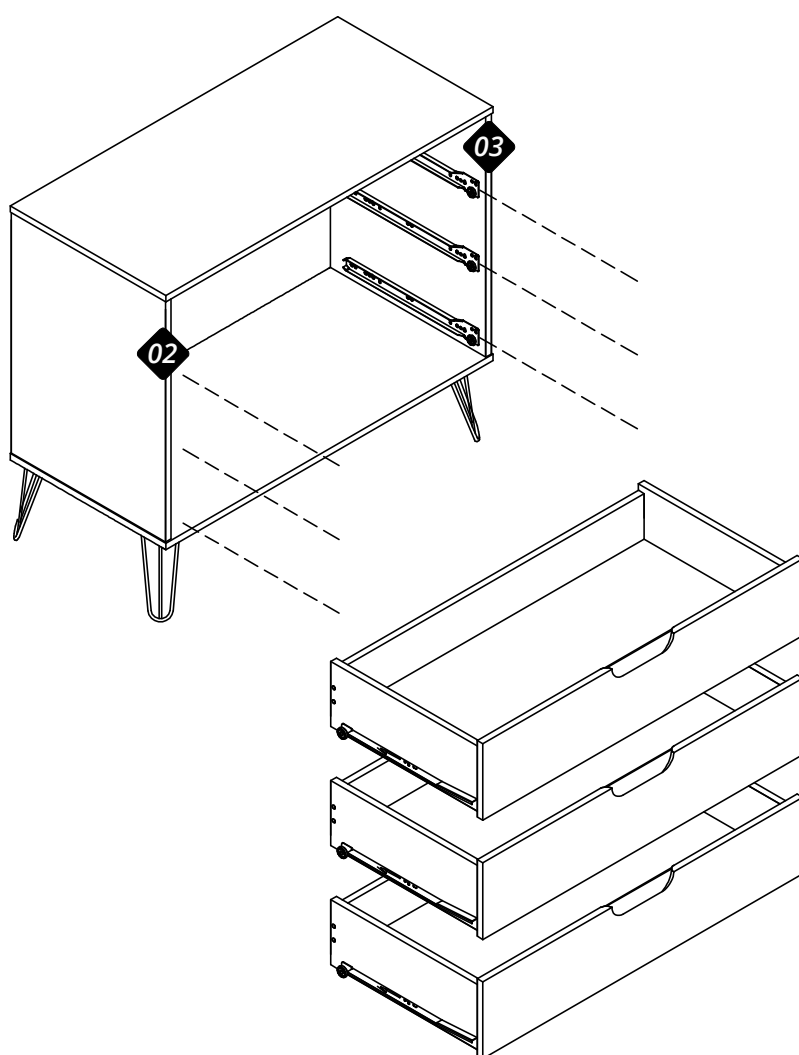



## **WARRANTY POLICY**

*All Manhattan Comfort furniture products are warranted, to the original purchaser at the time of purchase and for a period of 30 days thereafter.*

*Our warranty is limited to new products purchased in factory sealed cartons. This warranty is valid in the United States of America and Canada.*

*In order to provide you with timely assistance, please thoroughly inspect your furniture for missing or defective parts immediately after opening the carton.*

*Manhattan Comfort offers a 30-day parts replacement warranty on all items.*

*Our furniture products are not intended for outdoor use.*

## **THE WARRANTY DOES NOT COVER:**

- Defects/damages by improper assembly or disassembly.*
- Defects/damages caused by shipping. Claims for damage during transit should be placed immediately to the transportation company.*
- Defects/damages caused by inappropriate use of the furniture.*



319 Ridge Rd. Dayton, NJ 08810  
908-888-0818