







# Assembly Instruction Sheet #IS-5535P10 For Style 5535P10

**Total Requirement:** Flathead screwdriver, Philips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.  
**Light Source:** (2) 30 Watt Bulb, 40W Maximum (Not Included)  
**Estimated Assembly Time:** 15-30 minutes  
**Preparation:** Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.

## ⚠ Warnings and Cautions

Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt. These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation. Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal.

## Package Contents

-  Fixture Body x1
-  Middle Rod
-  Crystal X1
-  Crystal X10PCS
-  Crystal X10PCS
-  Crystal X1

PART	DESCRIPTION	QUANTITY
BB	Wire nut	2pcs
CC	Outlet Box Screw	2pcs



## STEP 1 - Release Mounting bracket from Ceiling Canopy.

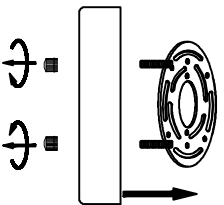


Figure 1

## STEP 2 - Install Middle Rod Ceiling Canopy to Fixture Body.

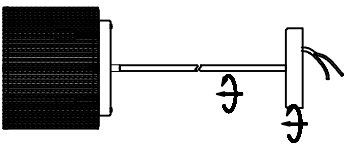


Figure 2

## STEP 3 - Attach Mounting bracket to Outlet Box

Align the supply wires through the Mounting bracket (EE), Attach the Mounting bracket (EE) to the Outlet Box with the head of the Green Ground Screw (CC) being you. Secure it with Outlet Box Screws. Tighten until snug.

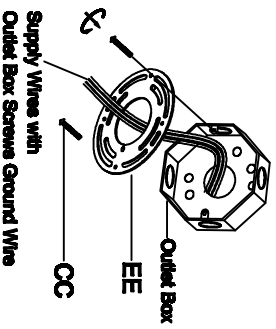


Figure 3

## STEP 5 - Install Ceiling Canopy to Ceiling

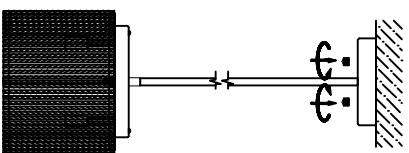


Figure 5

## STEP 6 - Install bulb and Crystal.

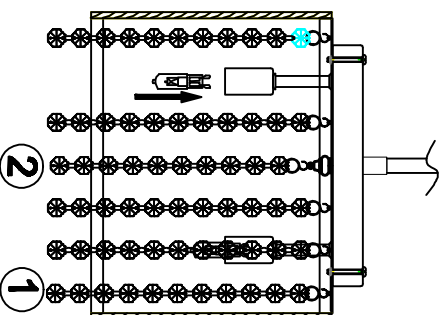


Figure 6

**STEP 4 - Wire Connections**  
 Allow standard wire connectors to make all wire connections. Twist connectors until wires are tightly joined together. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box.

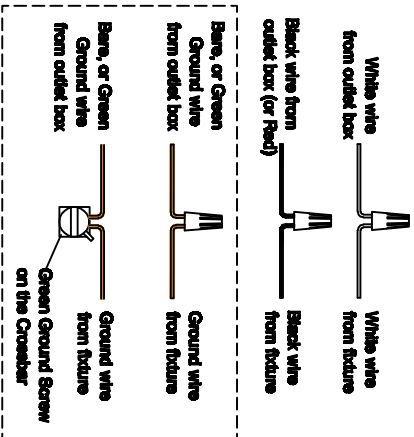


Figure 4