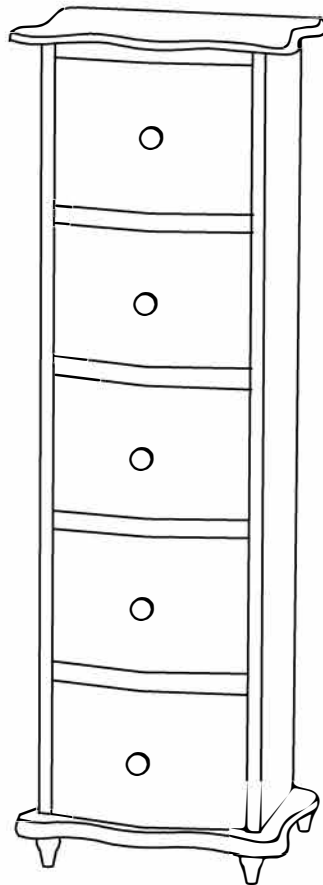



ASSEMBLY INSTRUCTIONS




NOTE TO CUSTOMERS:

- For ease and speed of assembly we recommend that before you commence each step of the assembly that you identify all the parts required to complete that step.
- We recommend that where possible you allow sufficient space to assemble the item as close as possible to the place where it will be once assembled.
- For the protection of your furniture we recommend that the product is placed on protected surfaces during assembly to prevent any damage.
- During assembly do not over tighten, as this may damage the product.
- Please ensure you retain all the product packaging until the item completely assembled.
- Please periodically check all fittings and re-tighten as necessary.
- Never allow any liquids to remain on your furniture as absorption can cause the wood to warp or the finish to de-laminate.
- It is recommended that this item should be assembled by two adults.

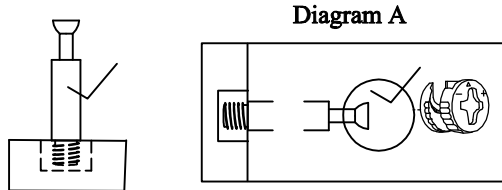
To insert a cam lock: (Please read below instructions before assembling)



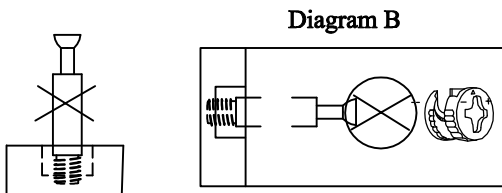
1. Insert cam screw into hole as shown in diagram A .



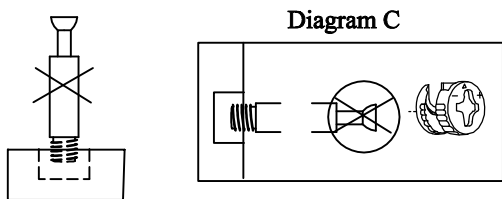
Make sure not to insert the cam screw:
Too deep as shown in figure B as this will cause the
cam screw to be misaligned and unable to
interlock properly.



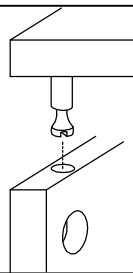
Also avoid inserting the cam screw too close to the
surface of the hole as shown in figure C, as this will
cause the cam lock to be too loose, and not interlock
properly.



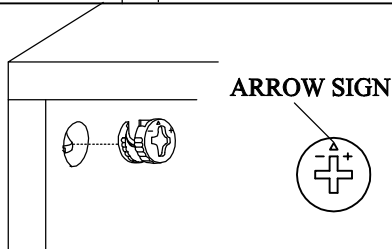2. Connect the panels together.



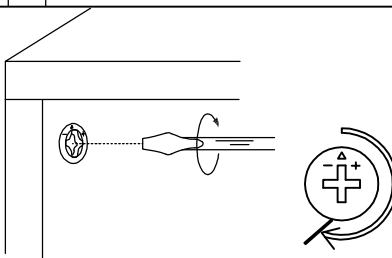3. When inserting the cam lock make sure the arrow
of the cam lock faces the cam screw.















4. To tighten the cam lock turn the cam lock clockwise
90-180 degree or until the arrow is facing opposite
the place cam lock was inserted.

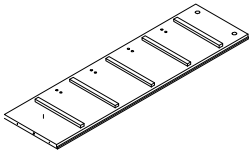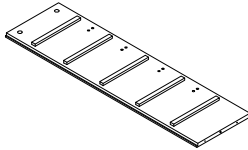**NOTE: DO NOT USE AN AUTOMATIC
SCREWDRIVER TO TIGHTEN CAM LOCKS.**








Note:

- Read these instructions carefully before assembling.
- Tools required : Phillips screwdriver, flat screwdriver.
- Find a clean, smooth area on which to work , such as a carpet, in order to avoid scratching the wood surfaces.
- Wait to dispose of the packing material until assembly is complete and all parts and hardware are accounted for.
- Two or more people might be required for assembly.

Part List


A1  Top Panel A5  Divider A9  Drawer Side Panel	Quantity of 1 A2  Side Panel (Left) A6  Top Divider A10  Drawer Back Panel	Quantity of 1 A3  Side Panel (Right) A7  Back Panel A11  Drawer Bottom Panel	Quantity of 1 A4  Bottom Panel A8  Drawer Front Panel A12  Leg
Quantity of 4	Quantity of 1	Quantity of 1	Quantity of 5
Quantity of 10	Quantity of 5	Quantity of 5	Quantity of 4

Hardware List

B1  Wood Dowel B5  Screw	Quantity of 12 B2  Cam-bolt B6  Bolt and Knob	Quantity of 41 B3  Screw B7  Wood Dowel	Quantity of 4 B4  Screw
Quantity of 8	Quantity of 5	Quantity of 2	

Assembly instruction

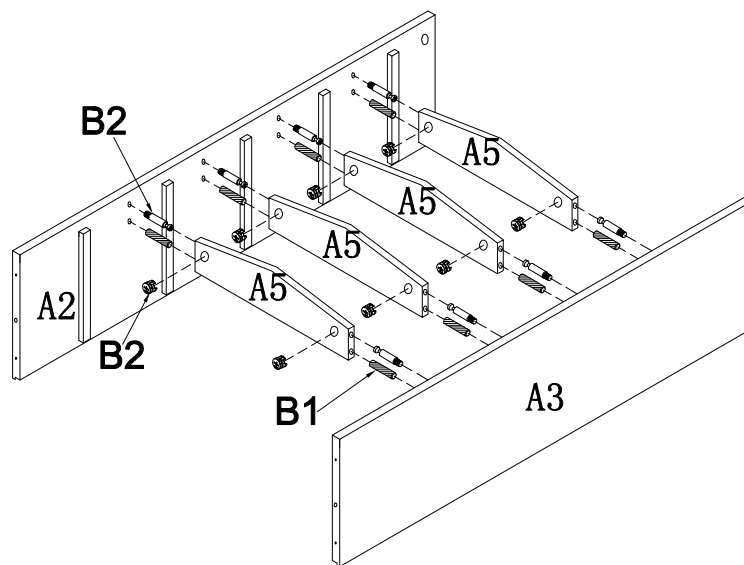
Step :1



B1  8pcs
B2   8sets

Assemble Dividers (A5) to Side Panels (A2&A3) using Wood Dowels (B1), Cam-bolts (B2) and Cam-locks (B2).

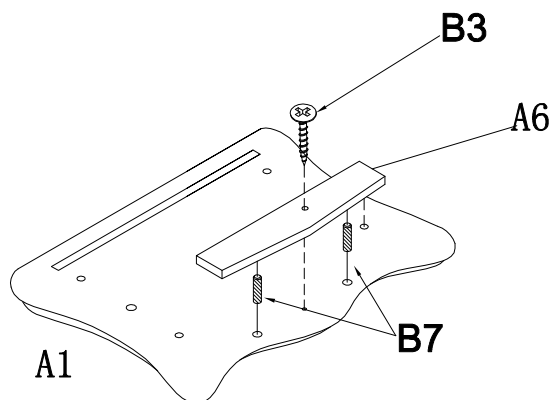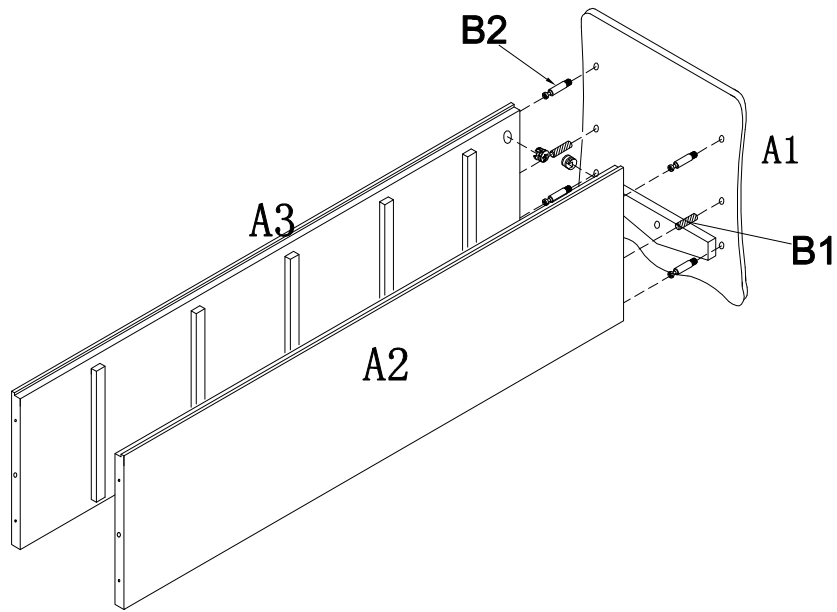
Step :2





B3  1pcs
B7  2pcs

Assemble Top Divider (A6) to Top Panel (A1) using Wood Dowels (B7) and Screws (B3).

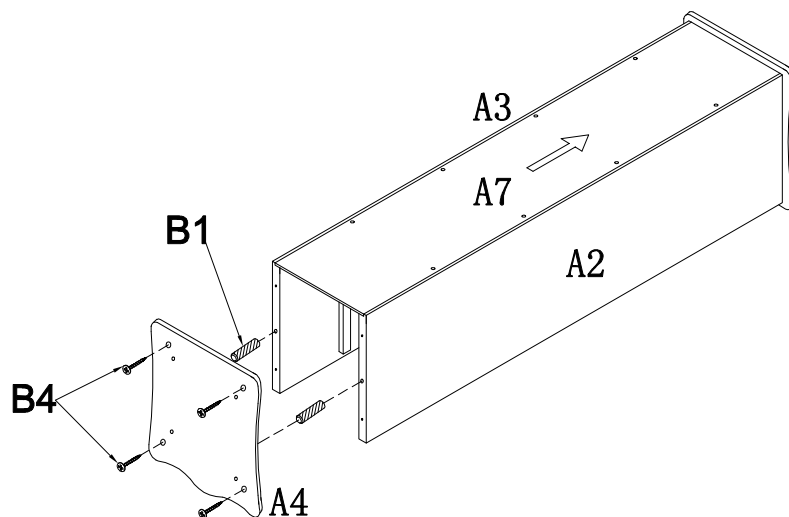
Step :3



B1  2pcs
B2  4pcs

Assemble Top Panel (A1) to Side Panels (A2&A3) using Cam-Bolts (B2) and Cam-Locks(B2), Wood Dowels (B1).

Step :4




B1  2pcs
B4  4pcs

Insert Back Panel (A7) into grooves on back of Side Panels (A2&A3) and Top Panel (A1).
Then assemble Bottom Panel (A4) to Side Panels (A2&A3) using Wood Dowels (B1) and Screws (B4).



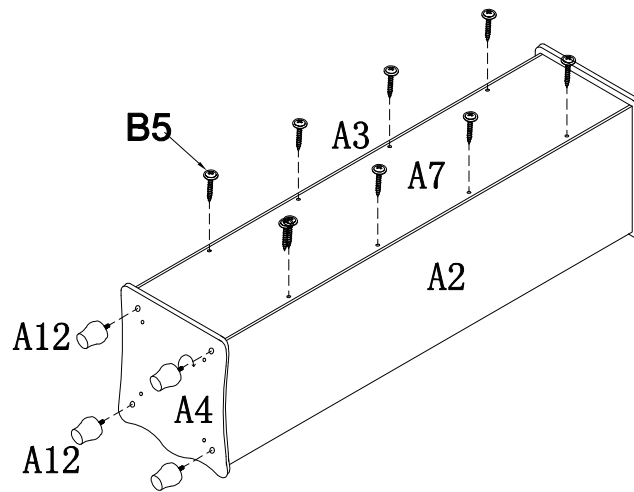Step :5


B5  8pcs



Tighten Back Panel (A7) to Side Panels (A2&A3) using Screws (B5).
Attach Legs (A12) to the bottom of Bottom Panel (A4).

Step :6

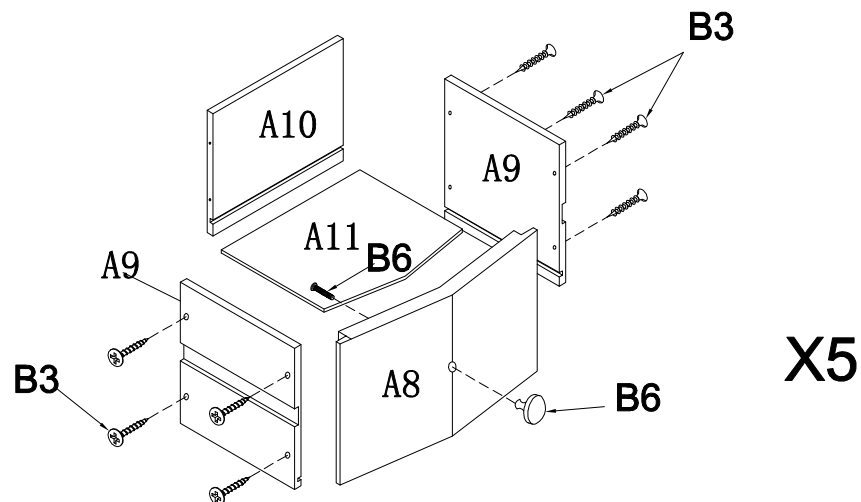
B3  40pcs
B6  5sets



X5

- 1). Assemble Drawer Side Panels (A9) to Drawer Back Panel (A10) using Screws (B3).
- 2). Insert Drawer Bottom Panel (A11) into the grooves on Drawer Side Panels (A9) and Drawer Back Panel (A10).
- 3). Attach Knob (B6) to Drawer Front Panel (A8) with included bolt.
- 4). Attach Drawer Front Panel (A8) to Drawer Side Panels (A9) using Screws (B3).

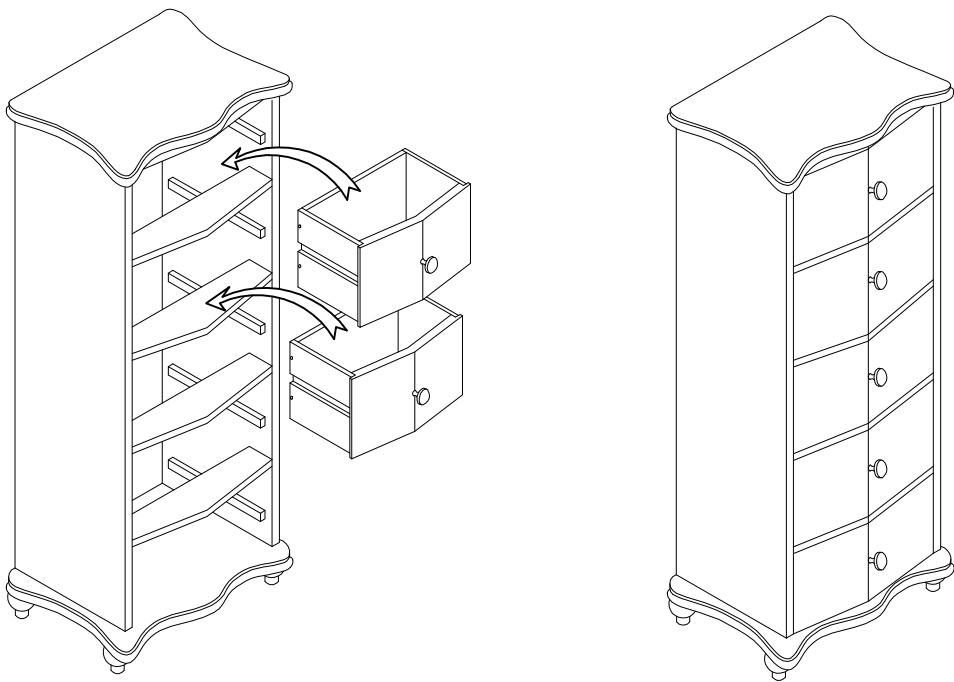Step :7



Insert drawers into this unit.

APPENDIX: Dimension of Hardwares in this AI.

<div>B1</div> <div></div> <div>Wood Dowel</div>	<div>B2</div> <div></div> <div>Cam-bolt</div>	<div>B3</div> <div></div> <div>Cam-Lock</div>	<div>B3</div> <div></div> <div>Screw</div>
<div>B4</div> <div></div> <div>Screw</div>	<div>B5</div> <div></div> <div>Screw</div>	<div>B6</div> <div></div> <div>Bolt</div>	<div>B7</div> <div></div> <div>Wood Dowel</div>