




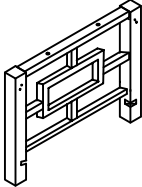
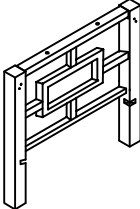
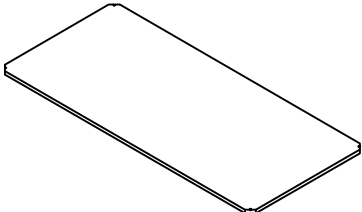
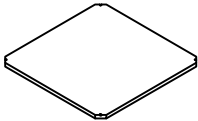
ASSEMBLY INSTRUCTIONS

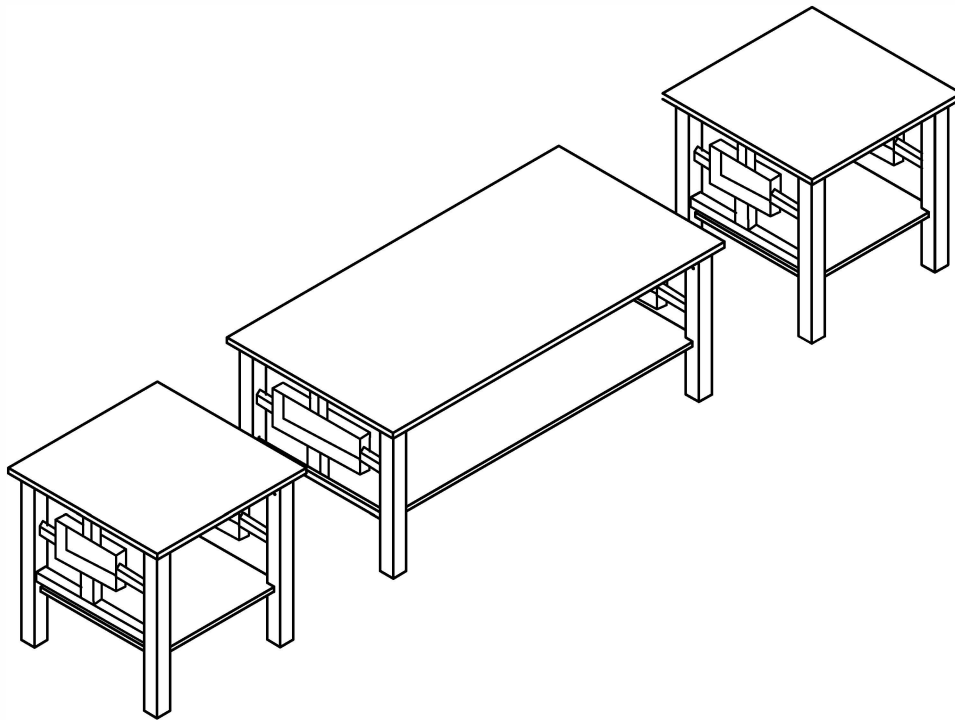







NOTE TO CUSTOMERS:

- For ease and speed of assembly we recommend that before you commence each step of the assembly that you identify all the parts required to complete that step.
- We recommend that where possible you allow sufficient space to assemble the item as close as possible to the place where it will be once assembled.
- For the protection of your furniture we recommend that the product is placed on protected surfaces during assembly to prevent any damage.
- During assembly do not to over tighten, as this may damage the product.
- Please ensure you retain all the product packaging until the item completely assembled.
- Please periodically check all fittings and re-tighten as necessary.
- Please never allow any liquids to remain on your furniture as absorption can cause the wood to warp or finish to de-laminate.
- It is recommended that this item should be assembled by two adults.

PART LIST:

<p>A1 COFFEE TABLE TOP PANEL 1PC</p> 	<p>A4 END TABLE TOP PANEL 2PCS</p> 
<p>A2 SHORT LEG(for coffee table) 2PCS</p> 	<p>A5 LONG LEG (for end table) 4PCS</p> 
<p>A3 BOTTOM SHELF (for coffee table) 1PC</p> 	<p>A6 BOTTOM SHELF(for end table) 2PCS</p> 

HARDWARE PART

<p>B1</p>  <p>12SETS</p>	<p>B4</p>  <p>12SETS</p>
<p>B2</p>  <p>12PCS</p>	<p>B5</p>  <p>1PC</p>
<p>B3</p>  <p>4PCS</p>	<p>ALLEN WRENCH(4mm) 1PC</p> 





Note:

- Read these instructions carefully before assembling.
- Tools required : Phillips screwdriver, flat screwdriver.
- Find a clean, smooth area on which to work , such as a carpet, in order to avoid scratching the wood surfaces.
- Wait to dispose of the packing material until assembly is complete and all parts and hardware are accounted for.
- Two or more people might be required for assembly.


To use Dowels:

1. Add glue (about $\frac{1}{4}$ full) in the hole(s) of each board to be joined.
2. Insert the Dowel(s) and join boards.
3. Wipe excess glue with a damp paper towel.


To use Cam Locks:
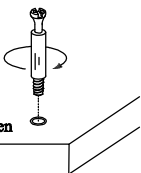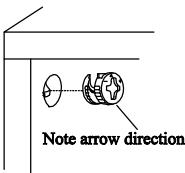
<p>1. Insert Cam Pin until snug</p>  <p>Do not over-tighten</p>	<p>2. Set boards together</p> 	<p>3. Insert Cam Lock</p>  <p>Note arrow direction</p>	<p>4. Turn Cam Lock clockwise (half a turn)</p>  <p>if it won't turn halfway, back out the Cam Pin $\frac{1}{4}$ turn and try Cam Lock again.</p>
---	--	---	--


Step 1

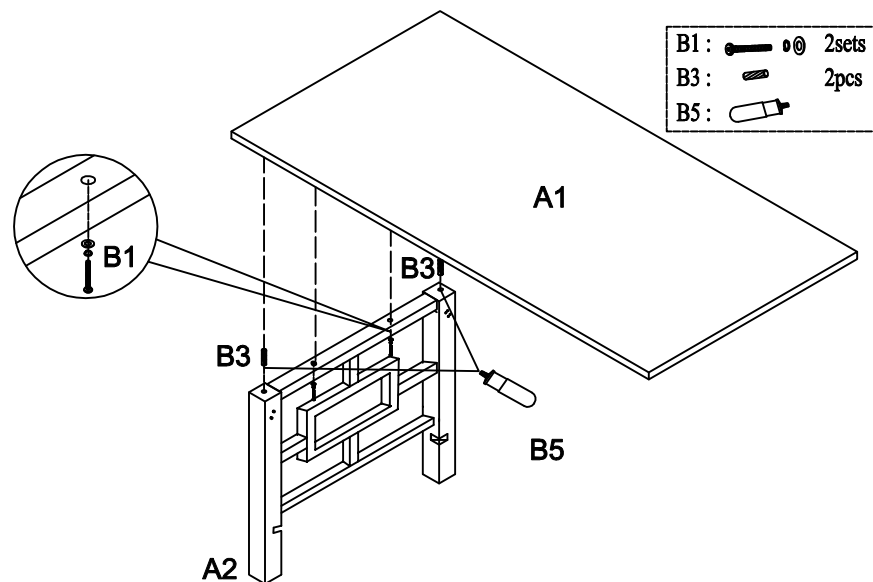


Step 2

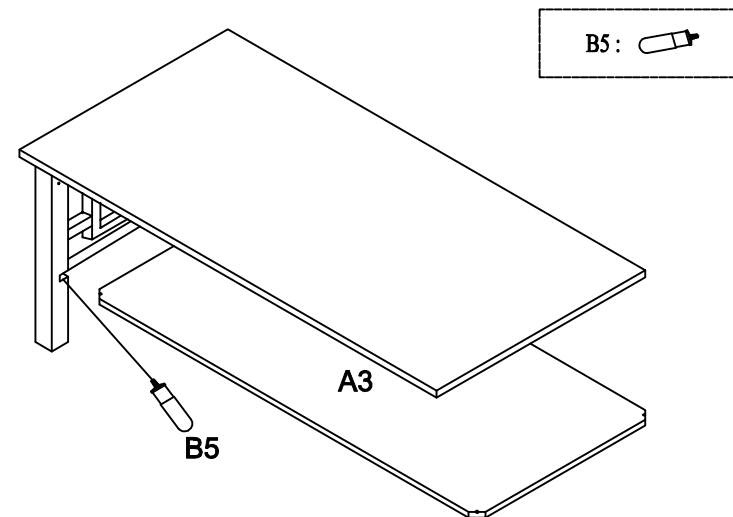


Step 3

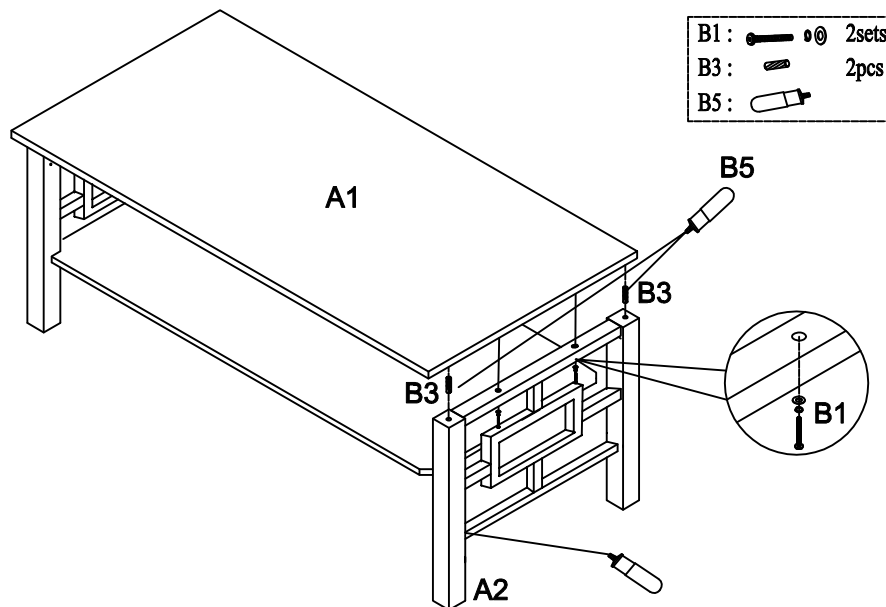


Step 4

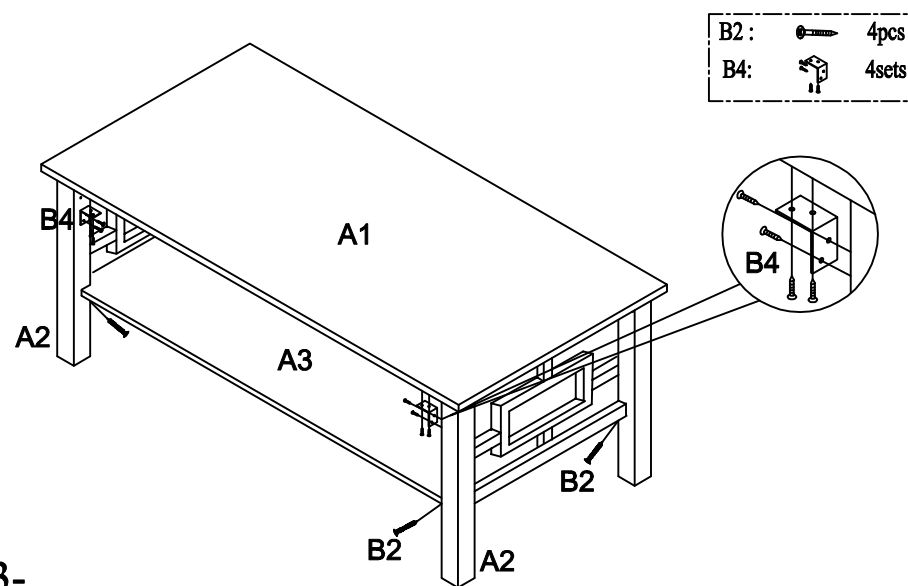


Step 5

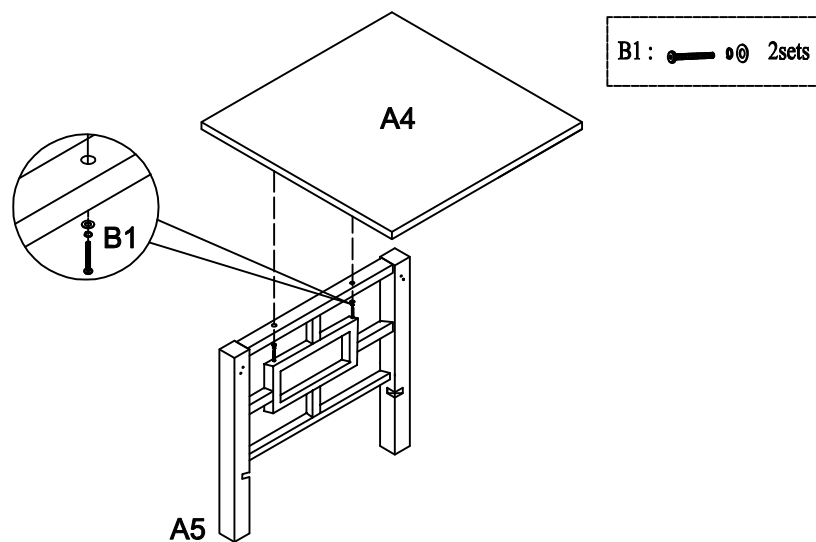

Step 6

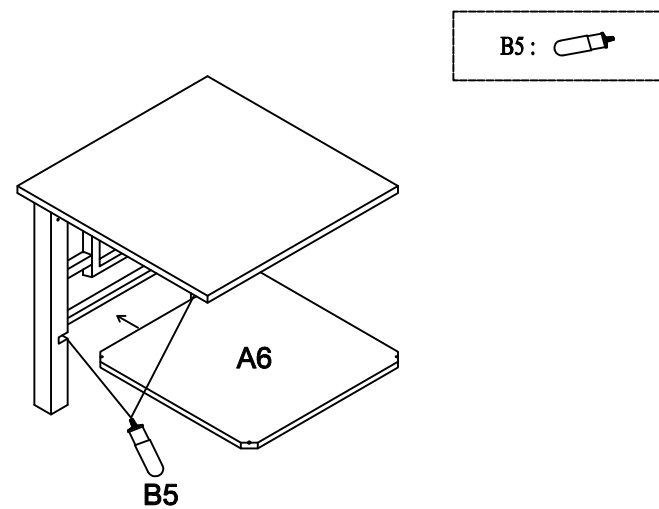

Step 7

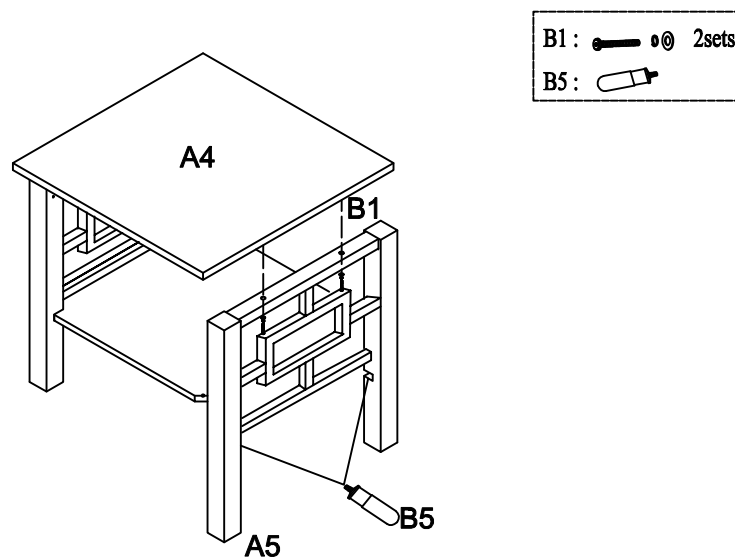

Step 8

