


Front View

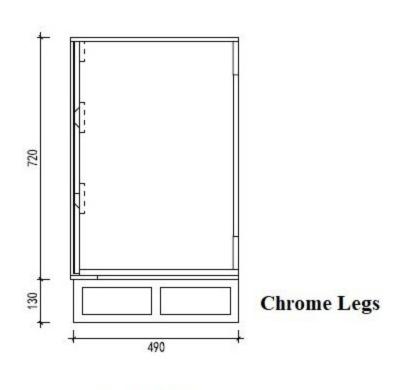


1500

Side View

Top View

Heavy vanity. Have multiple people assist you for carrying and installation, use dolly or other hydraulic carriers if possible

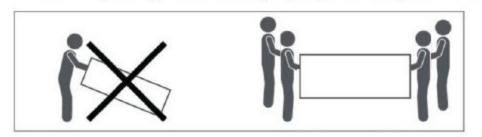

 Prior to installation please check received items against the "Packing List".
Please report any missing items to your retailer immediately.

Protect all surfaces from sharp objects, high heat sources, direct prolonged sunlight and chemical hazards.

Professional Installation is highly recommended, take precaution