

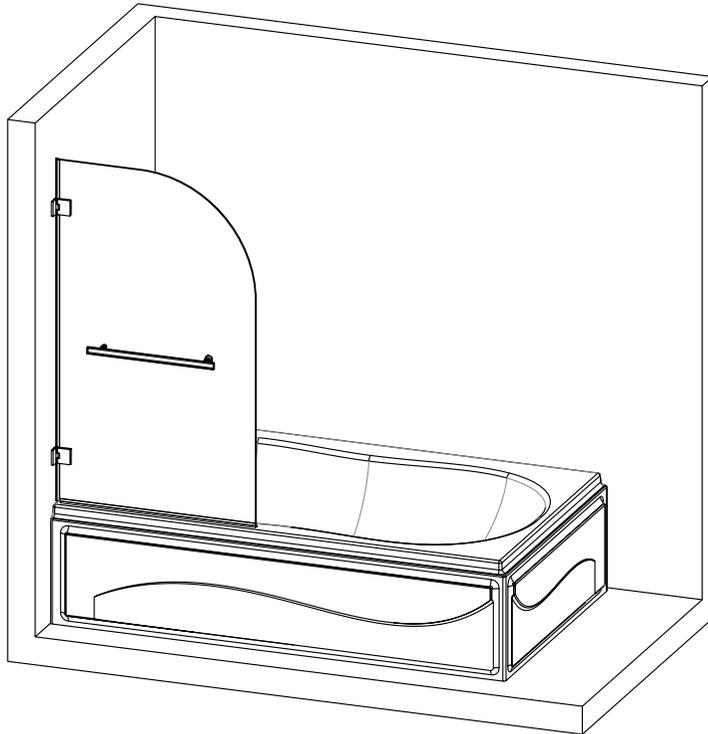


## BATHTUB SHOWER SCREEN INSTALLATION INSTRUCTION

310134-HD-PC  
310134-HD-MB

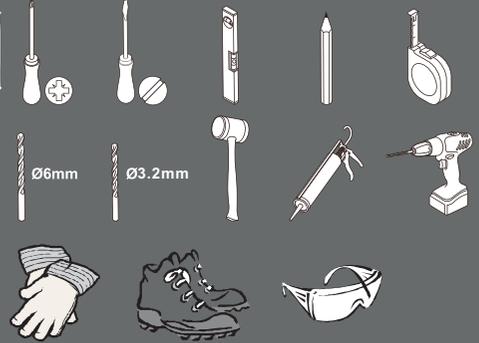

**IMPORTANT-**Please read and follow all warnings and instructions before using this product. Injury can result from improper use. Save this documents.



**WARNING**  
Tempered Glass, please don't hit the corners and the surrounding, otherwise the glass will burst.

### ● General Information

Please inspect the product immediately upon receipt for transit damage, missing packs/parts or manufacturing fault. Damage reported later cannot be accepted. Please handle the product with care avoiding knocks and shock loading to all sides and edges of the glass.

#### **Notes: Safety glass can not be re-worked.**

Please read these instructions carefully before start of installation.

Special care should be taken when drilling walls to avoid hidden pipes or electrical cables.


Note: This product is heavy and may require two people to install.

### Aftercare instructions

After use, your shower should be cleaned with soap and water. This is particularly important in hard water districts where insoluble lime salts may be deposited and allowed to build up. Cleaners of a gritty or abrasive nature should not be used. Care should be taken to avoid contact with strong chemicals such as organic solvents and strippers.

Glass cleaners can be used but with caution, if in doubt contact the manufacturer of the cleaner in question.

Please keep these instructions for aftercare and customer service details.

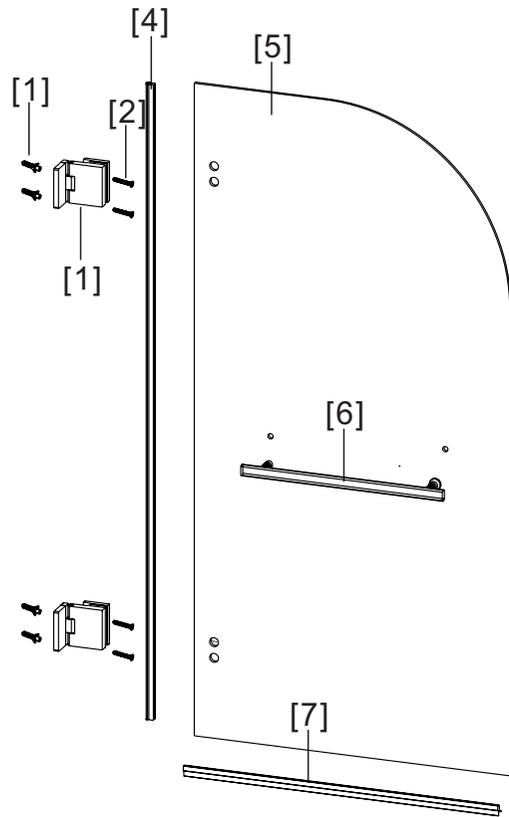

- [1] 4X Wall Anchor
- [2] 4X Screw ST M5X40mm
- [3] 2X Stainless Steel Hinge
- [4] 1X Side anti-water strip
- [5] 1X Glass panel
- [6] 1X Towel bar
- [7] 1X Bottom anti-water strip

## ● Box Contents:


[1] 4X Wall Anchor	➔	
[2] 4X Screw ST M5X40mm	➔	
[3] 2X Stainless Steel Hinge		
[4] 1X Side anti-water strip	➔	
[5] 1X Glass panel	➔	
[6] 1X Towel bar	➔	
[7] 1X Bottom anti-water strip	➔	



● Assembly


01

[4]		x1
[5]		x1



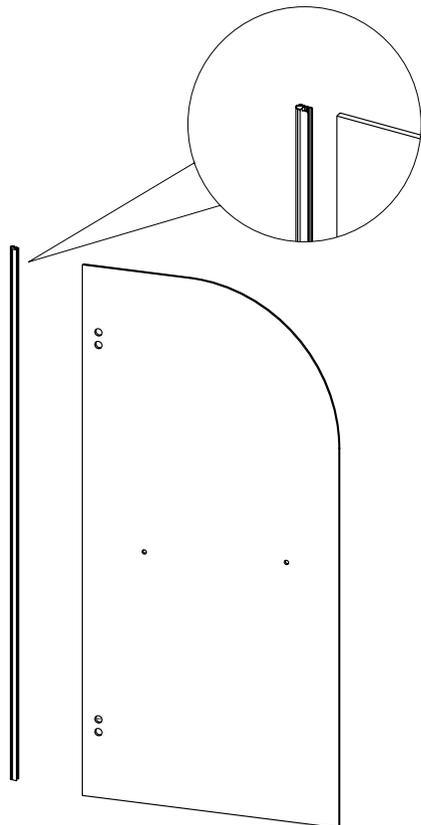


02

[3]		x2
-----	--	----

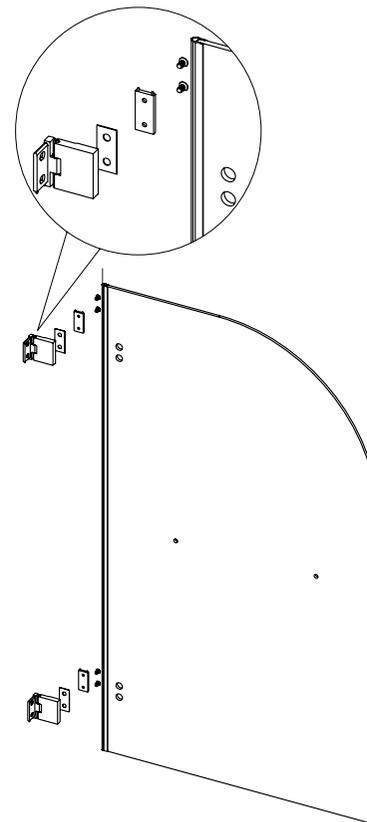






03

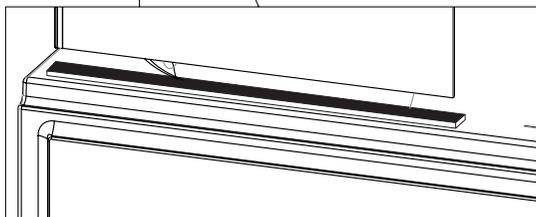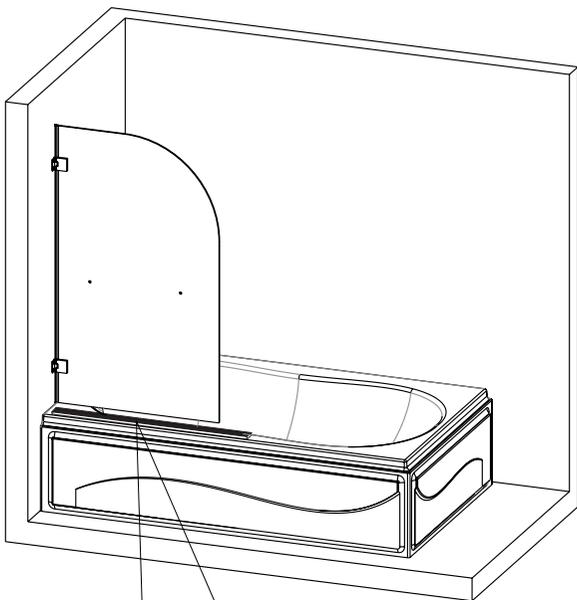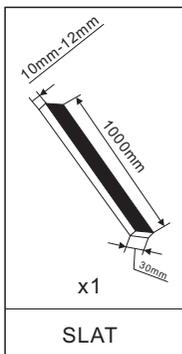






Pleae prepare a long slat 1000x30mm @ 10~12mm thickness to hold on the glass panel during the installation.

04

[1]		x4
[2]		x4 (ST5X40)

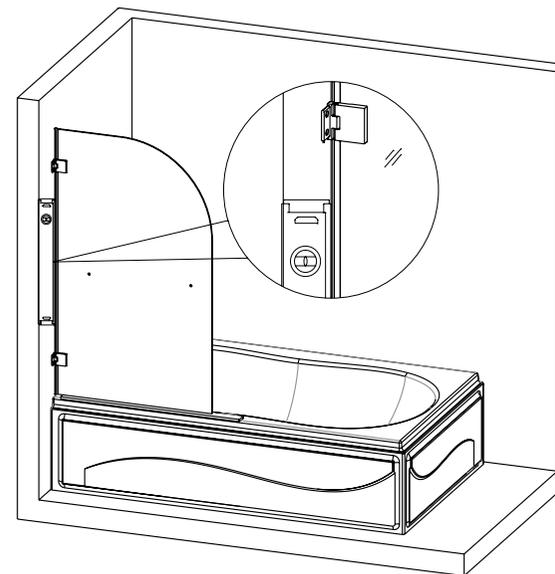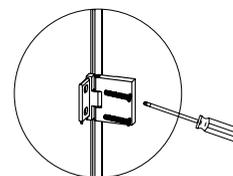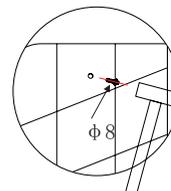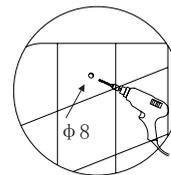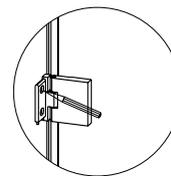

05

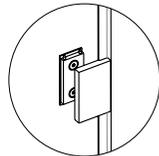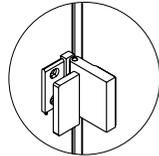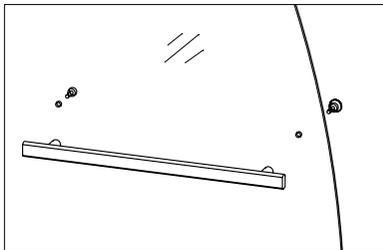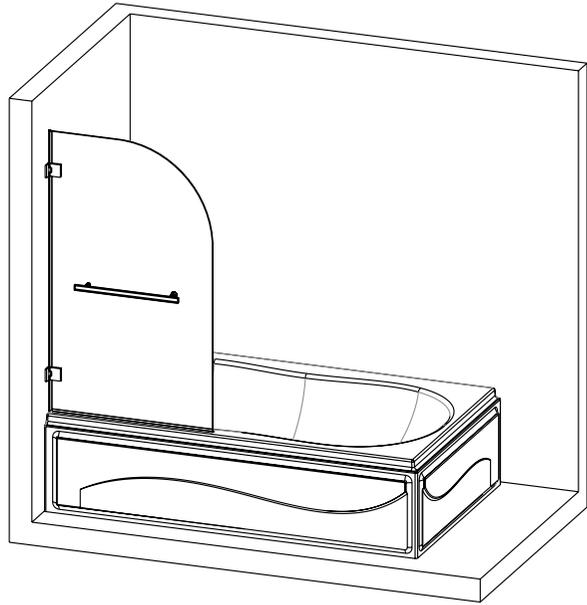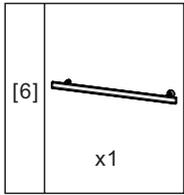

06

