


## TRIM INSTALLATION INSTRUCTIONS FOR SLOPE CEILING HOUSING

### EYEBALL TRIMS

REMOVE SOCKET BRACKET. INSERT SOCKET MOUNTING CLIPS INTO TOP OF TRIM.  
INSERT TRIM MOUNTING SPRINGS INTO TRIM MOUNTING TABS ON HOUSING.  
SLIDE TRIM SLOWLY UP WARD TOWARD CEILING.  
INSTALL PROPER LAMP

### BAFFLE TRIMS

HOOK THE COIL SPRINGS OF TRIM INTO THE SLOTS OF INSIDE OF HOUSING  
SLIDE TRIM SLOWLY UP WARD. INSTALL PROPER LAMP.

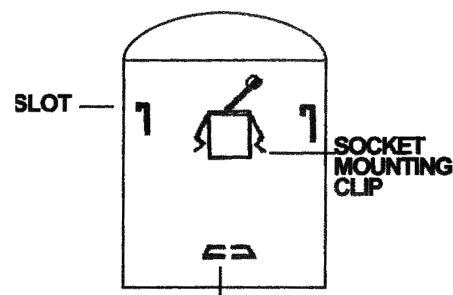

## SLOPED CEILING HOUSING TEMPLATE & INSTALLATION INSTRUCTIONS

### TEMPLATE

THE HOUSING OPENING IS ELLIPTICAL. DO NOT CUT A CIRCLE  
USE THIS DISC AS A TEMPLATE TO SCRIBE THE OPENING'S LOCATION.  
POSITION THE TEMPLATE SO THAT THE CENTER LINE IS PARALLEL TO THE  
CEILING RAFTERS, CUT HOLE ACCURATELY.

-----CENTER LINE FOR HOUSING OPENING-----THIS MUST RUN PARALLEL WITH RAFTERS-----

### HOUSING POSITION

#### FOR NEW CONSTRUCTION :

THE J-BOX OF HOUSING IS ON THE LOW (OR DOWN) SIDE OF THE SLOPE.

#### FOR REMODELING :

THE J-BOX OF HOUSING IS ON THE HIGE (OR UP) SIDE OF THE SLOPE.

