

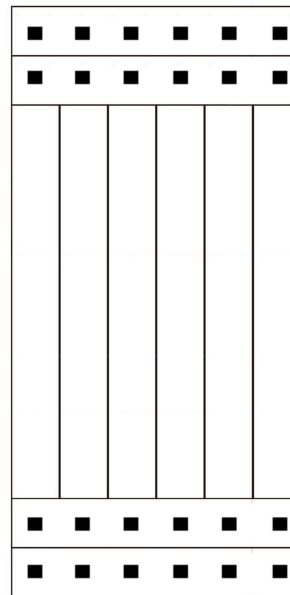


Installation Manual


022-36" Collection

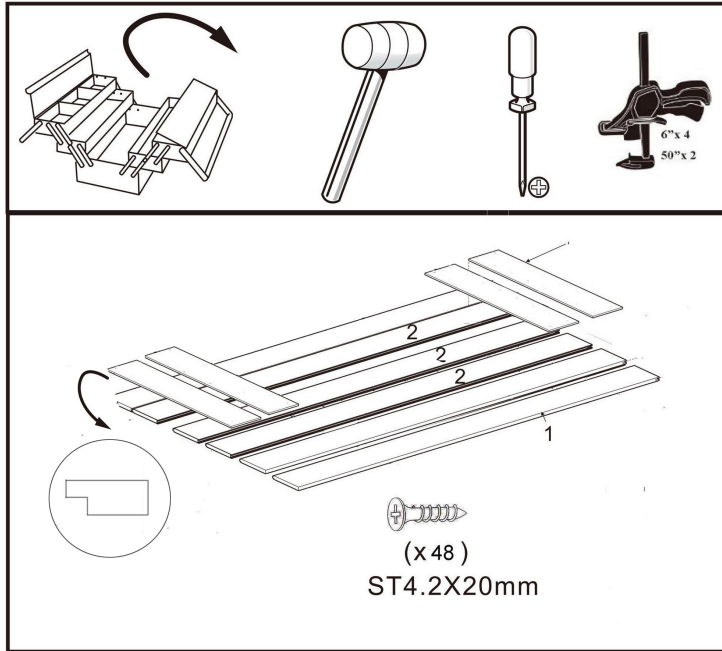


Front

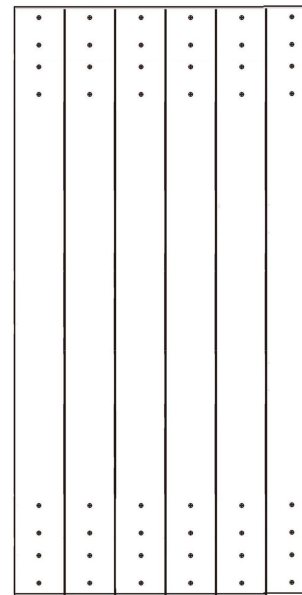


Back

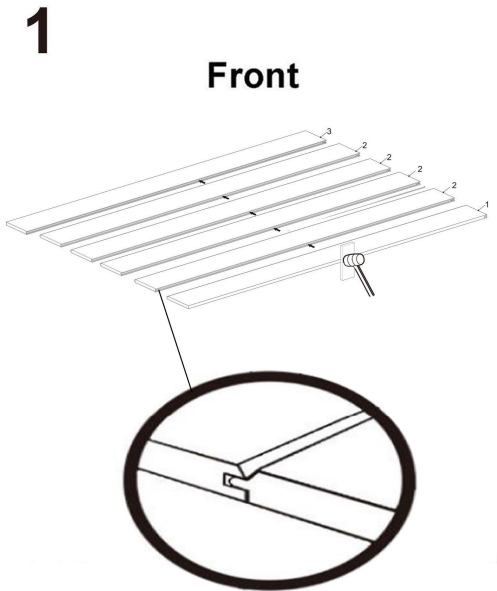


2 Do not screw from the front side

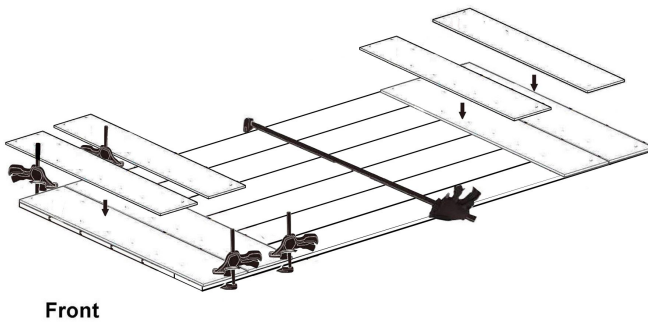

3 ALL HOLES PRE-DRILLDE
Screw from the back side of the door

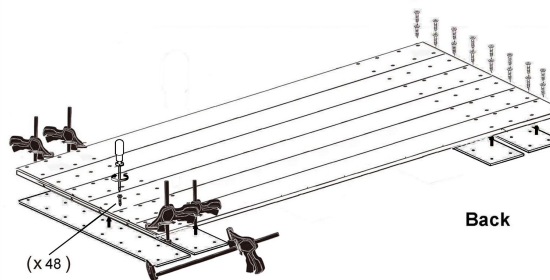

4

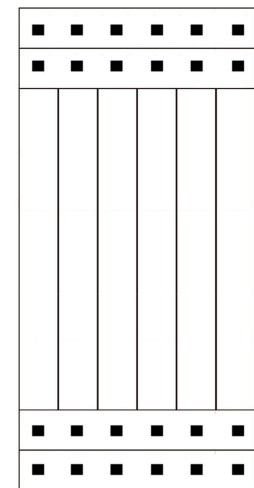

Assembled Door