


CONVENIENCE CONCEPTS

121146

NEWPORT GLASS TOP CONSOLE TABLE

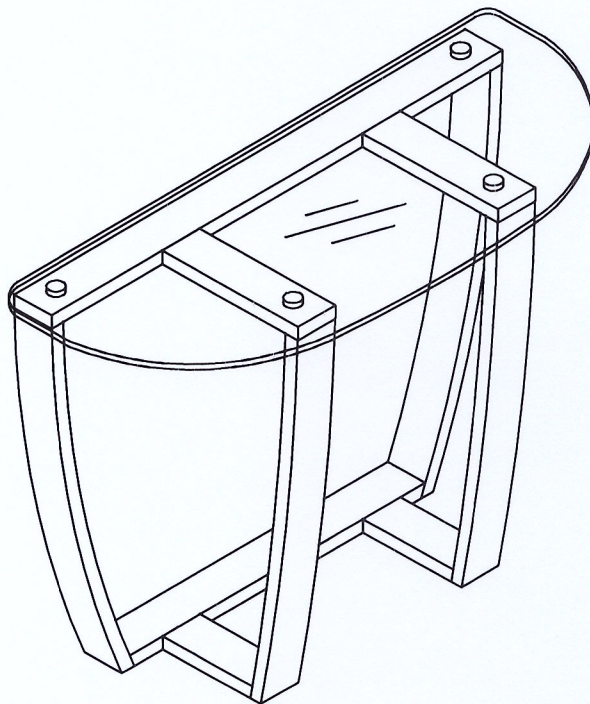

Assembly instructions

We have designed our furniture with you, the customer in mind. Our clear space easy to follow, step by step instructions will guide you through the project from start to finish. Feel confident that this will be a fun and rewarding project. The final product will be a quality piece of furniture that will go together smoothly and give you years of enjoyment.



Please do not return to the store


Broken or missing Hardware?

Need help with Assembly?

If you have any questions just call 1-800-468-6447 or email us at parts@convenience-concepts.com

PARTS IDENTIFICATION

ITEM#:121146

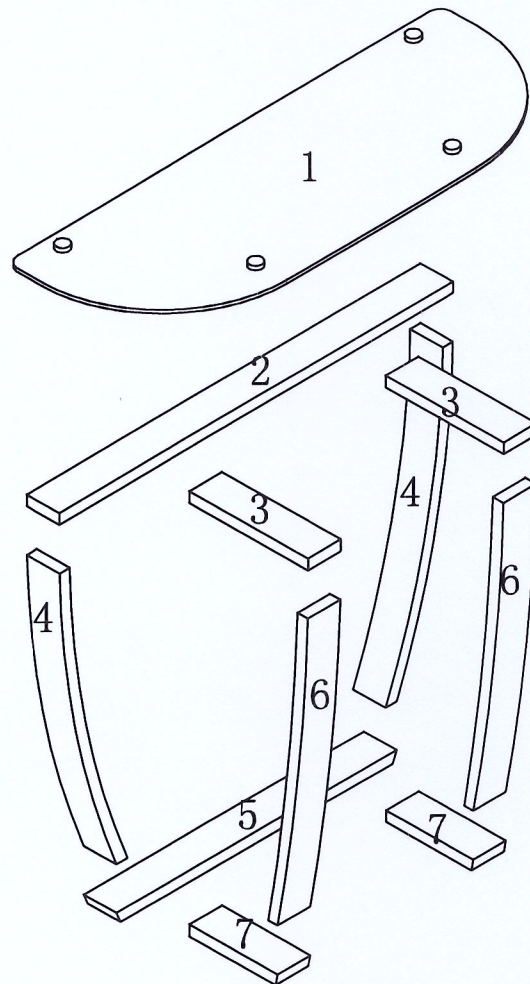







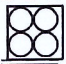
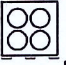



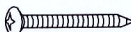

Please count and verify all parts before assembly

| | |
|------------------------|------|
| (1) Glass Top | 1pc |
| (2) Top Long Crossbar | 1pc |
| (3) Top Short Crossbar | 1pc |
| (4) Rear Leg | 2pcs |






| | |
|---------------------------|------|
| (5) Bottom Long Crossbar | 1pc |
| (6) Front Leg | 2pcs |
| (7) Bottom short Crossbar | 2pcs |

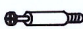HARDWARE IDENTIFICATION

ITEM#:121146

| | | | | |
|----------|---|----------------|--------|-------|
| A |  | Allen Bolt | Ø6x65 | 16pcs |
| B |  | Barrel Nut | Ø10x15 | 16pcs |
| C |  | Cambolt | L29 | 8pcs |
| D |  | Camlock | Ø15 | 8pcs |
| E |  | Flat Head Bolt | M6x25 | 4pcs |
| F |  | Allen Wrench | M4 | 1pc |
| G |  | Large Sticker | Ø20 | 16pcs |
| H |  | Small Sticker | Ø13 | 8pcs |
| I |  | Foot Pion | | 4pcs |
| J |  | Bracket | | 1pc |
| K |  | Screw | Ø4x25 | 1pc |
| L |  | Wall Screw | Ø5x40 | 1pc |
| M |  | Plastic Anchor | Ø8x40 | 1pc |


Assembling the unit with camlocks and wood dowels.
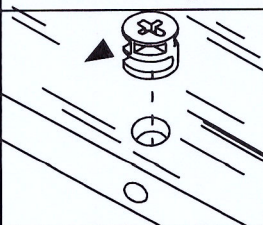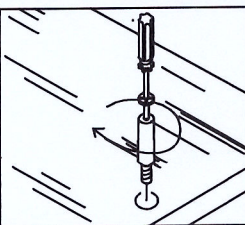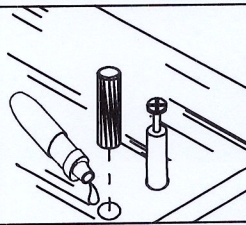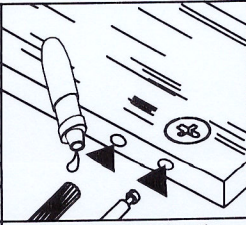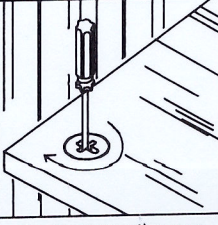
| | | | | |
|---|---|---|--|---|
|  |  |  |  |  |
| Insert camlock, camlock must face bolt hole | Gently screw cam dowel into the threaded anchor | lightly glue one end of wood dowel and tap into hole. | lightly glue dowel and connect to second panel by inserting dowels into holes | Gently screw the cam clockwise into locked position. Do not overtighten. |

Step1


PAGE: 4 of 6

1. Attach barrel nuts (B) into bottom crossbar (5), making sure threads face holes.
2. Connect rear legs (4) to bottom crossbar (5) with allen bolts (G) and wrench (F).
3. Place stickers on holes.

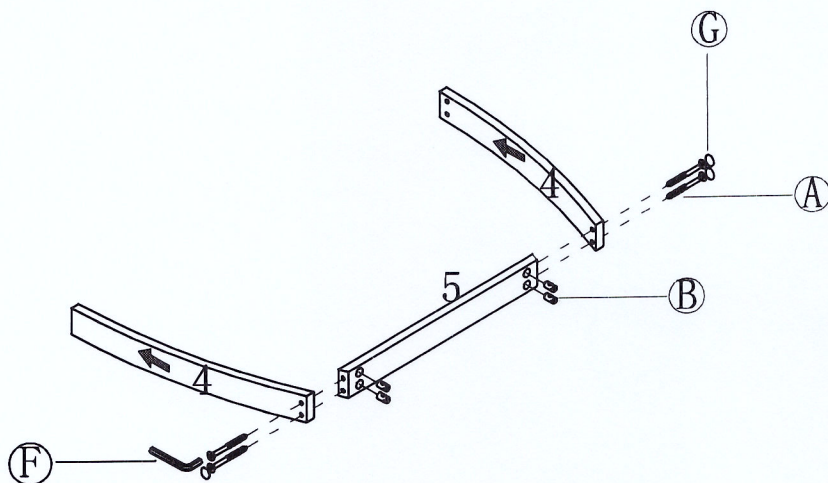

Step2


1. Attach barrel nuts into top crossbar (2), making sure threads face holes.
2. Assemble pieces as shown, using allen bolts (G).
3. Place sticker on holes.

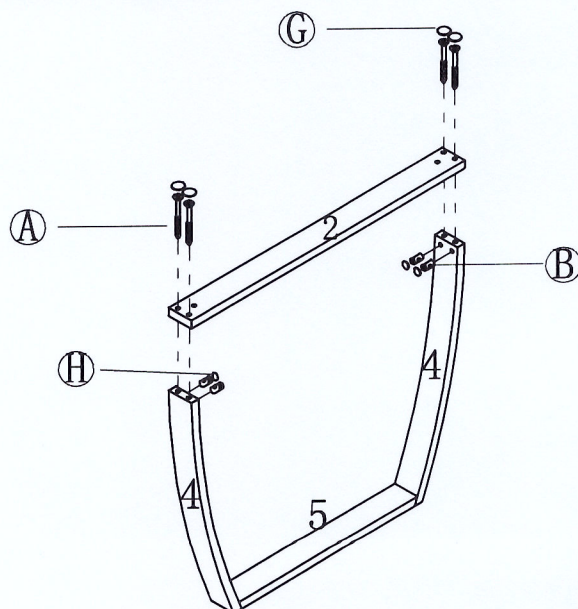

Step3


PAGE: 5 of 6

1. Attach barrel nuts into legs (6) and bottom crossbar (7) making sure threads face holes.
2. Assemble pieces as shown, using allen bolts (G)
3. Place stickers over holes.

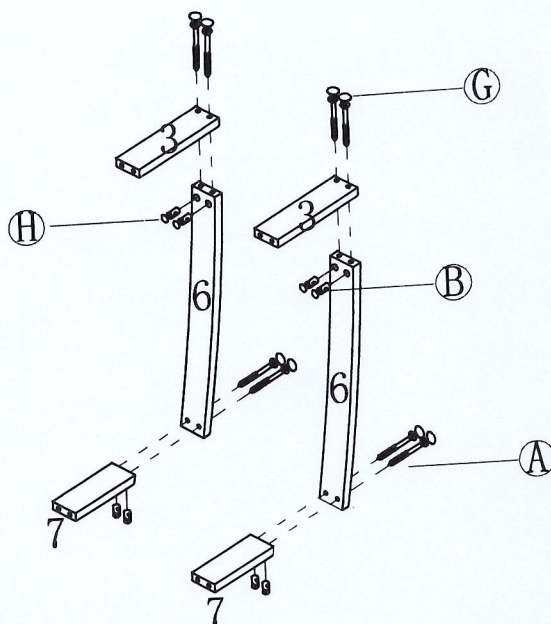

Step4


1. Attach cambolts (C) into top cross(2) and bottom crossbar(5).
2. Assemble pieces as shown. Gently tighten camlocks (D).
3. Carefully tap foot pin (I) into legs.

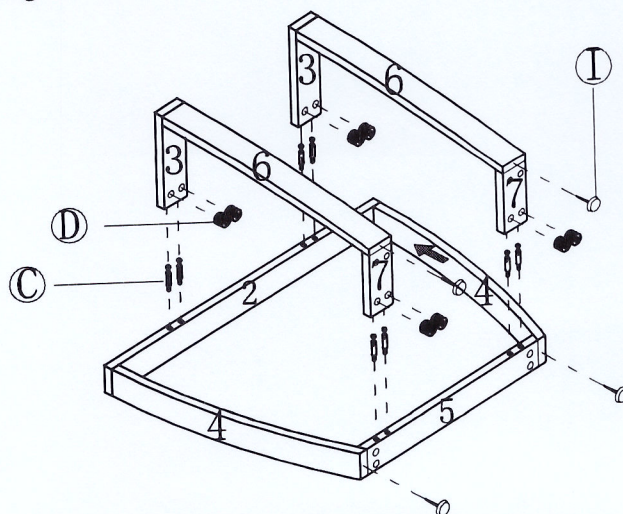

Step5


PAGE: 6 of 6

1. Attach glass top (1) as shown, using flat head bolts (E).
2. Gently tighten flat head screws (E).

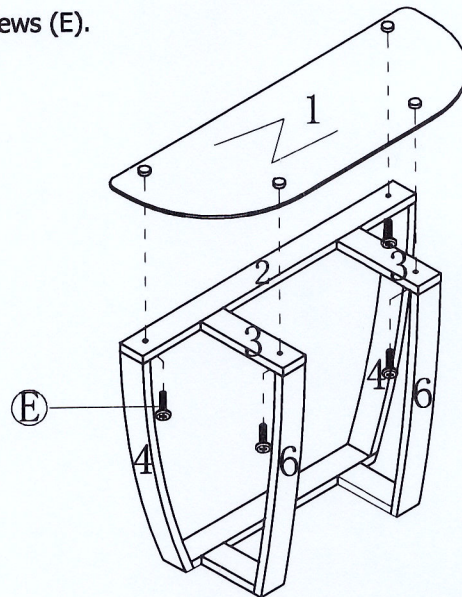

Step6

1. Attach bracket (J) to top crossbar (2) using screw (K).
 2. Drill a hole against the wall parallel with top crossbar (2). Tap plastic anchor (M) into the hole.
 3. Attach wall screw (L) through bracket (J) into plastic anchor (M).
- Enjoy your console table!

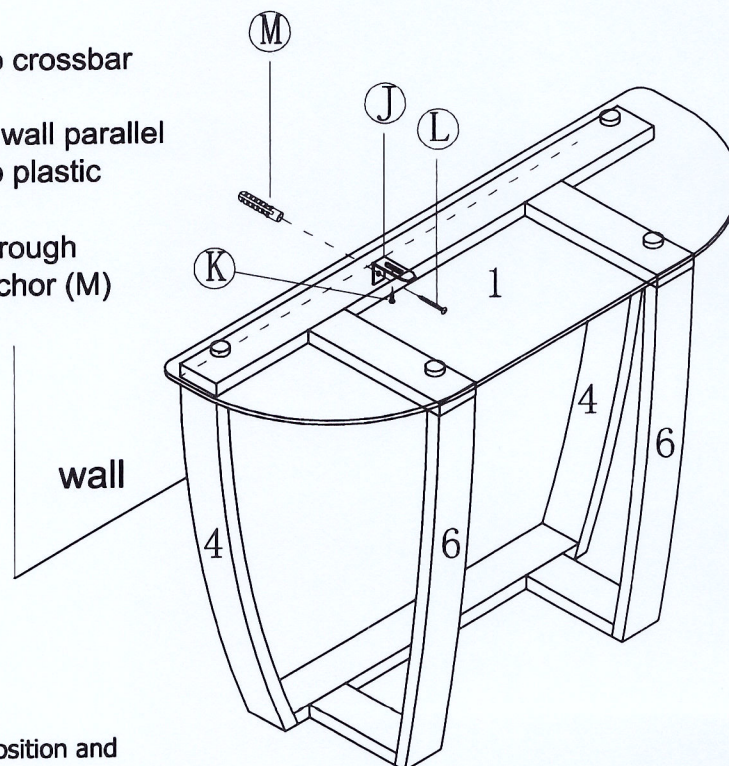

Note:* Align unit against wall position and mark drill hole before drilling.