



Liberty Furniture
INDUSTRIES, INC

LIBERTY FURNITURE

ASSEMBLY INSTRUCTION

ITEM # 607-BR11/BR12/BR89
607-BR17/BR18/BR89

DESCRIPTION Panel Bed

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts which may have come loose inside the carton during shipment. Identify and count all parts and compare with the parts List Below.

Assembly steps:

Step 1. Assemble the Cross bar (F) to the Posts (L/R) (B) using Bolt (e), spring washer (g), flat washer (h) and allen key (i).

Step 2. Assemble the Posts (B) to the Headboard (A) using Wood dowel (j), Bolt (f), spring washer (g), flat washer (h) and allen key (i).

Step 3. Assemble the Side rails (D) to the Posts (B) and Footboard (C) using set-screw (a), washer (b), nut (c) and wrench (d).


Step 4. Screw slats (E) in place using screws (k).

PARTS LIST


NO.	SKETCH	DESCRIPTION	Q'TY
A		Headboard	1pc
B		Post (L/R)	2pcs
C		Footboard	1pc
D		Side Rails	2pcs
E		Slats	3pcs
F		Cross bar	1pc

HARDWARE LIST



NO.	SKETCH	HARDWARE	Q'TY
a		5/16"x18x2-3/4"	8pcs
b			8pcs
c		5/16"	8pcs
d		12 mm	1pc
e		5/16"x18x1-3/4	2pcs
f		5/16"x18x1-1/2	6pcs
g		5/16"x12 mm	8pcs
h		5/16"x19 mm	8pcs
i		4 mm	1pc
j		Ø8x30 mm	4pcs
k		#8x1"	6pcs

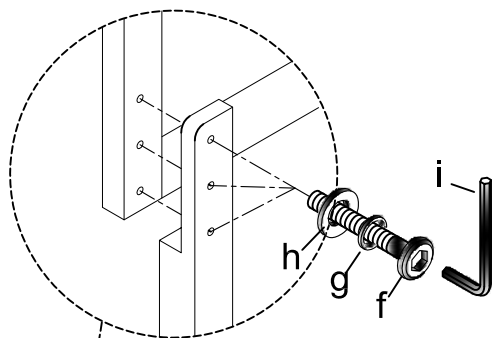


Step 2

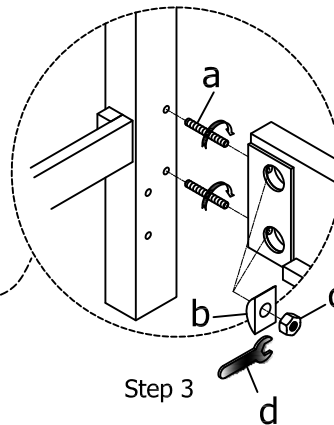


Step 3

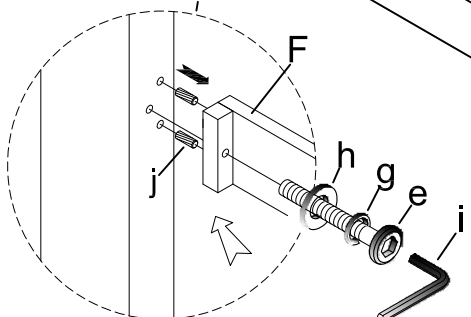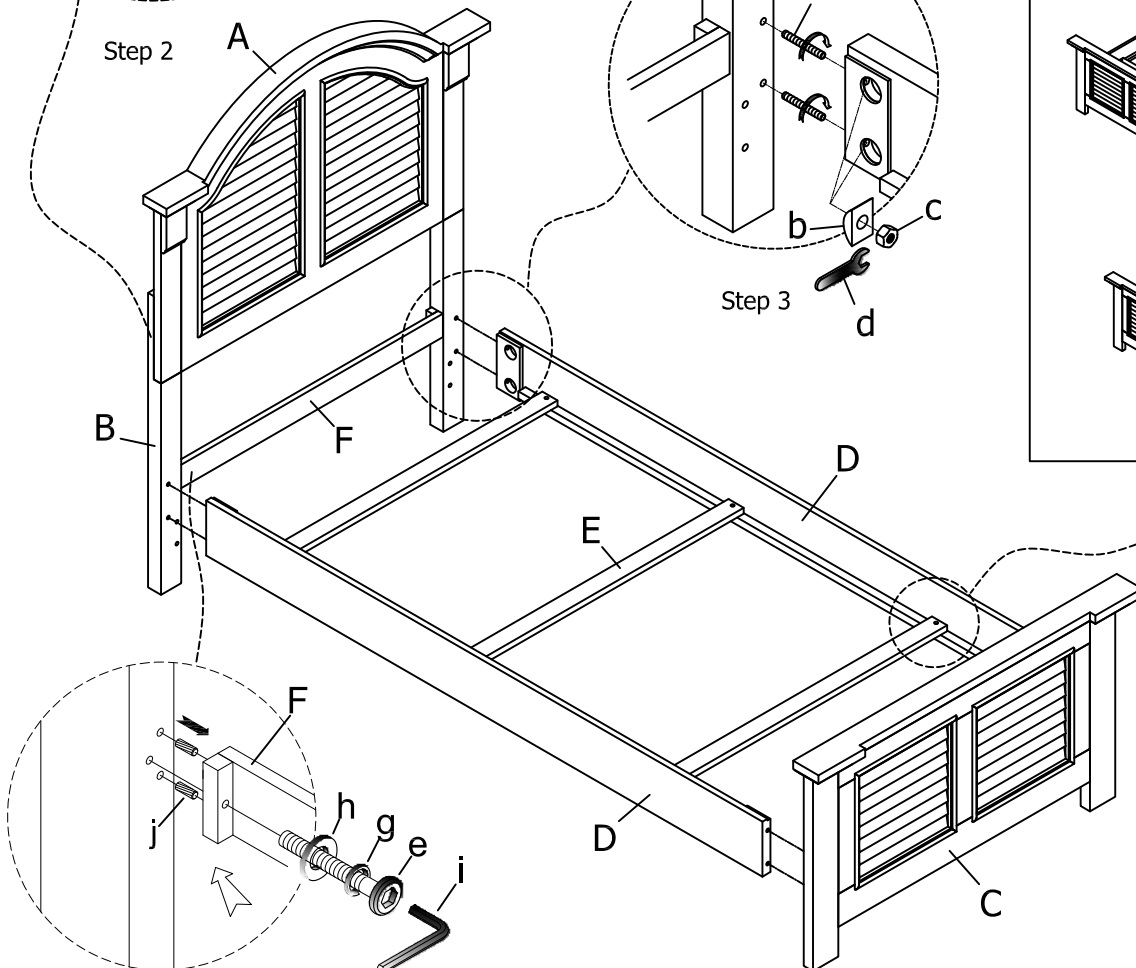

Step 1

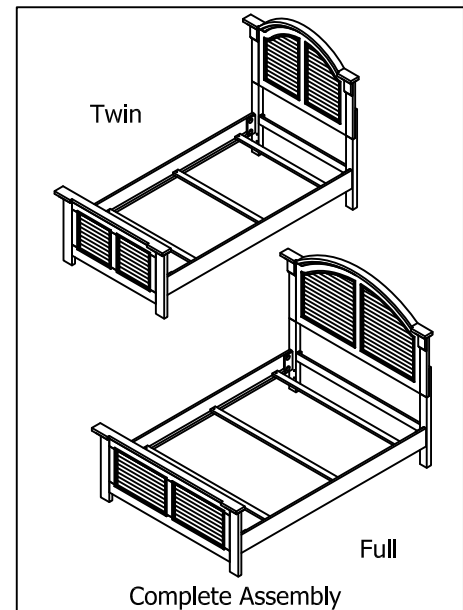

Complete Assembly

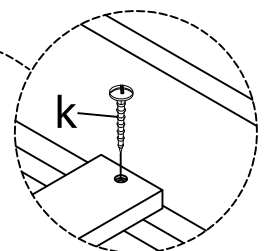

Step 4

MADE IN VIETNAM