# Assembly Instruction Sheet #IS-1026W8-2 For Style 1026W8-2

Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.

Light Source: (2) E12 Candelabra Base Bulbs 60W Maximum(Not include).

Estimated Assembly Time: 15-30 minutes


Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fodure. Contact customer service for replacement parts.

### Warnings and Cautions

Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt. These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation.

Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal.

#### **Package Contents**

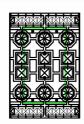


A Fixture Body x1

## **Hardware Contents**

			-
PART	DESCREPTION	GLWMIII	
<b>AA</b>	Cap nut	2008	
BB	Wire nut	Зров	
CC	<b>Outlet Bax Sarew</b>	2pcs	
DD	Mounting Screw	<b>2</b> pos	
Æ	Mounting bracket	1pcs	
M	BB	CC	DD
		Î	Î
		_	•



# STEP 1 - Attach Mounting Screws, Lock Washers and Hex Nuts to Mounting bracket.

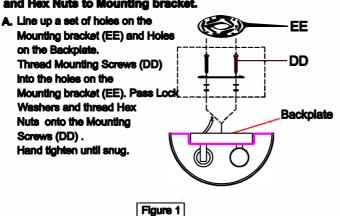


#### STEP 2 - Attach Mounting bracket to Outlet Box

A. Pass the supply wires through the Mounting bracket (EE).

Attach the Mounting bracket (EE) to the Outlet Box with the head of the Green Ground Screw facing you.

Secure it with Outlet Box

Screws.
Tighten until snug.

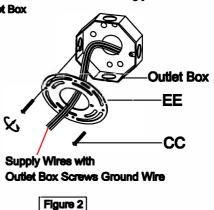


#### STEP 3 - Fit Backplate to Mounting bracket Assembly

A. Fit the backplate to Mounting Screws (DD) and secure with Cap nut (AA). Note: The backplate should be snug against the ceiling and the Cap nut (AA). If not, adjust the length of the Mounting Screws (DD) by unscrewing the Hex Nut and Lock Washer and then screwing Mounting DD Screws (DD) in or out of the **Backplate** Mounting bracket (EE) until the correct length is achieved. Once the backplate is secure, remove the Cap nut (AA) and backplate and proceed to Step 4

Figure 3




A. Use standard wire connectors to make all wire connections. Twist connectors until wires are tightly joined together. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box.

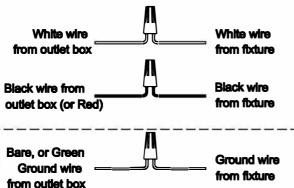

# from outlet box Bare, or Green **Ground wire Ground wire** from fixture from outlet box **Green Ground Screw** on the Crossbar Figure 4

#### STEP 6 - Install bulb

A. Install bulbs into sockets and screw snug into place.

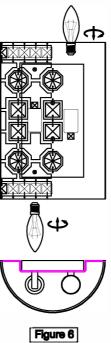

### STEP 5 - Install Backplate to Celling

A.Carefully tuck all wires into the outlet box and position the backplate of the Fixture Body (A) over the outlet box. Align the holes In the backplate with the Mounting Screws (DD). Secure with Cap nut (AA) and hand tighten until snug.

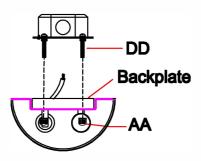


Figure 5