

# RONBOW

## INSTALLATION AND CARE GUIDE

### WOOD FRAME MIRROR

600118-FINISH  
600124-FINISH  
607224-FINISH  
603324-FINISH

603124-FINISH  
603130-FINISH  
603160-FINISH  
600023-FINISH

602322-FINISH  
606124-FINISH  
606127-FINISH  
606160-FINISH

# WOOD FRAME MIRROR


# RONBOW

**Model :** 600118-FINISH  
600124-FINISH  
607224-FINISH  
603324-FINISH

603124-FINISH  
603130-FINISH  
603160-FINISH  
600023-FINISH

602322-FINISH  
606124-FINISH  
606127-FINISH  
606160-FINISH

## Tools Required



## MATERIALS INCLUDED

- 2 Anchors
- 2 wood screws


## MATERIALS NEEDED

- 1 2 x 4 cut to size (For Larger Sizes)

## PRE-INSTALLATION


**Step 1:** Determine the ideal location of your new mirror.

**Figure 1.**

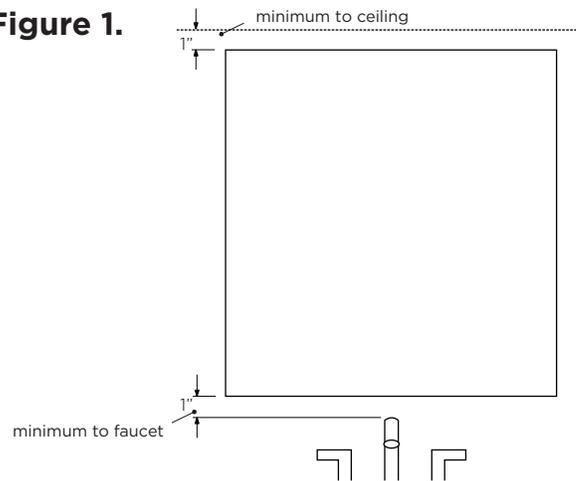

**See Figure 1.**

**Figure 2.**

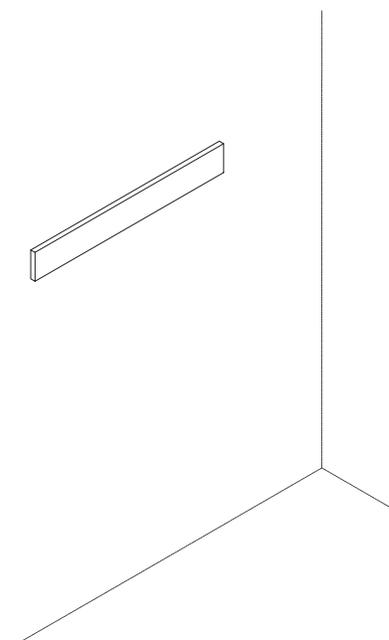

**Step 2:** (For Larger Sizes)  
Place a 2 x 4 supporting beam behind the wall of the desired location for larger size mirrors.

**See Figure 2.**

**Model :** 600118-FINISH  
600124-FINISH  
607224-FINISH  
603324-FINISH

603124-FINISH  
603130-FINISH  
603160-FINISH  
600023-FINISH


602322-FINISH  
606124-FINISH  
606127-FINISH  
606160-FINISH

## INSTALLING THE MIRROR

**Step 3:** Mark the distance of the two holes at desired location on the wall.

**See Figure 3.**

**Figure 3.**

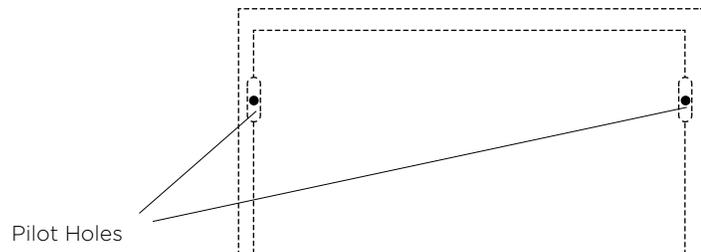


**Step 4:** Screw in the screws at the marked location. Make sure Allow about 1/8" clearance from screw head to wall.

**Note:** fasten the screws provided into the anchor. Secure the anchors in the wall

**See Figure 4.**

**Figure 4.**

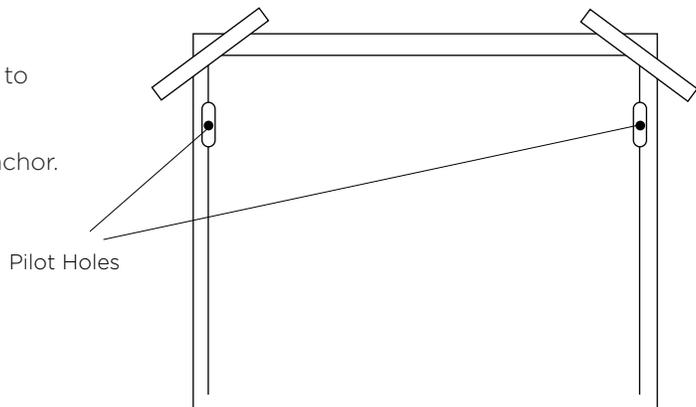

**Step 5:** Line up the keyhole hardware on the back of the mirror to the screws on the wall, and allow the mirror to sit in place.

**See Figure 5.**

**Figure 5.**

