



ZIPPITY

Easy Does It!

ASHLEY VINYL CORNER PICKET FENCE KIT (40"W X 30"H)


ASSEMBLY INSTRUCTIONS ZP19007

60 MIN

Approximate assembly time

Want to see a video on how to
assemble this product?

Scan the QR code

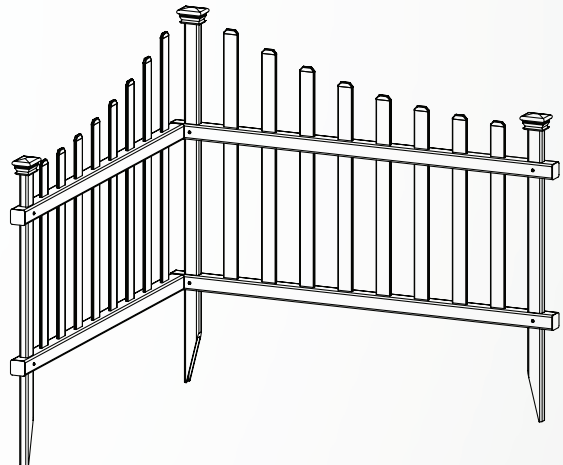

GENERAL INFORMATION



IMPORTANT

- + Check the inside of the larger pieces in your box for other materials packed inside.
- + When assembling components, place on a non-abrasive surface (i.e. shipping box) to avoid scratching.
- + We recommend an area approximately 5'x 8' for unobstructed assembling.
- + You should not need to use excessive force when assembling components.

MISSING OR DAMAGED PARTS?

VISIT OUR WEBSITE FIRST, SO WE CAN HELP YOU RIGHT AWAY!

Although great care has been taken to ensure proper packaging and handling of this product, occasionally problems occur. If you discover any missing, damaged or defective parts, please visit our website to order replacement parts. If you experience any further trouble with your product, please contact our customer service department.

 parts.nychbrands.com

 support@zippity-outdoor.com

 **704-892-5222 / 877-234-6196**

Customer service agents are available to take calls weekdays from 9am-5pm EST. If you call outside of business hours, please leave a voicemail.

To help you quickly and accurately, please have reference item number **ZP19007** and the specific part name which can be found on page 4. It is helpful if you can provide the batch lot which is a stamped number inside the box.


NEED ASSEMBLY HELP?

If you are having problems with the assembly or installation of this product, we are happy to assist you with the process, **so please give us a call at 704-892-5222 / 877-234-6196.**


NEED TO RETURN?

If for some reason you need to return this product, please allow us to help resolve your issues first. If you still decide to return the product, **you will need to initiate the return from the company you originally purchased from.**

Detailed Product Dimensions & Specifications

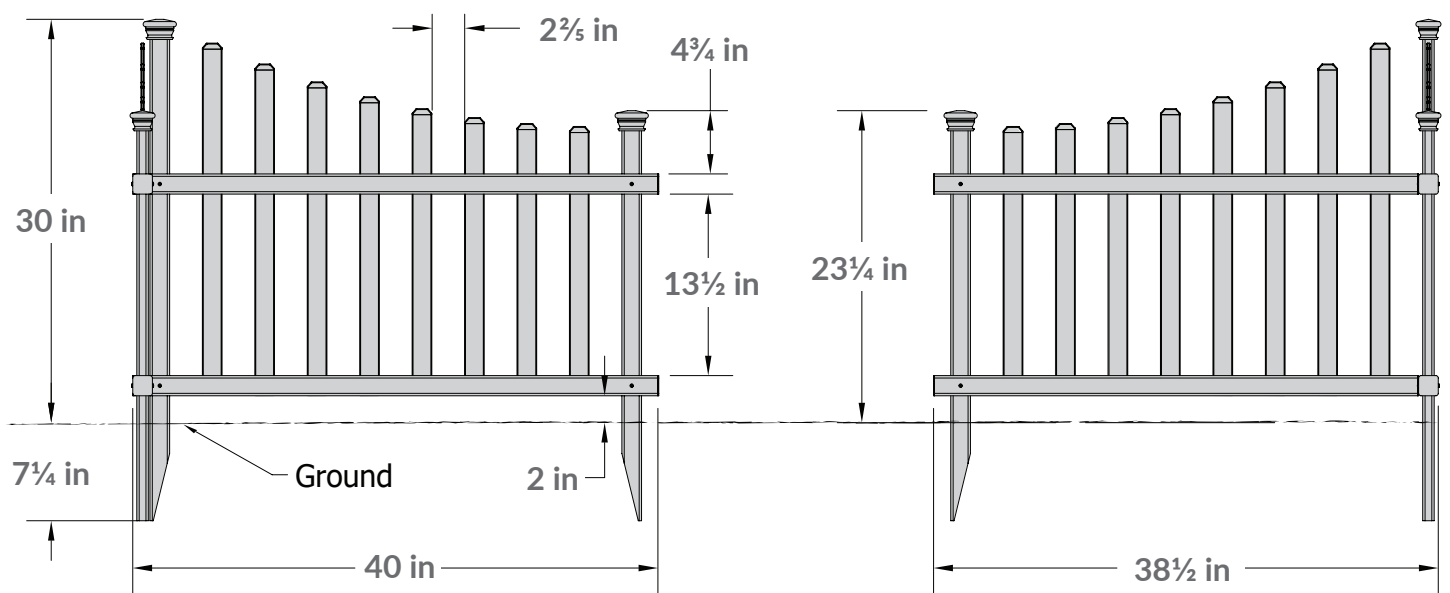



STEP 1: LAY OUT MATERIALS

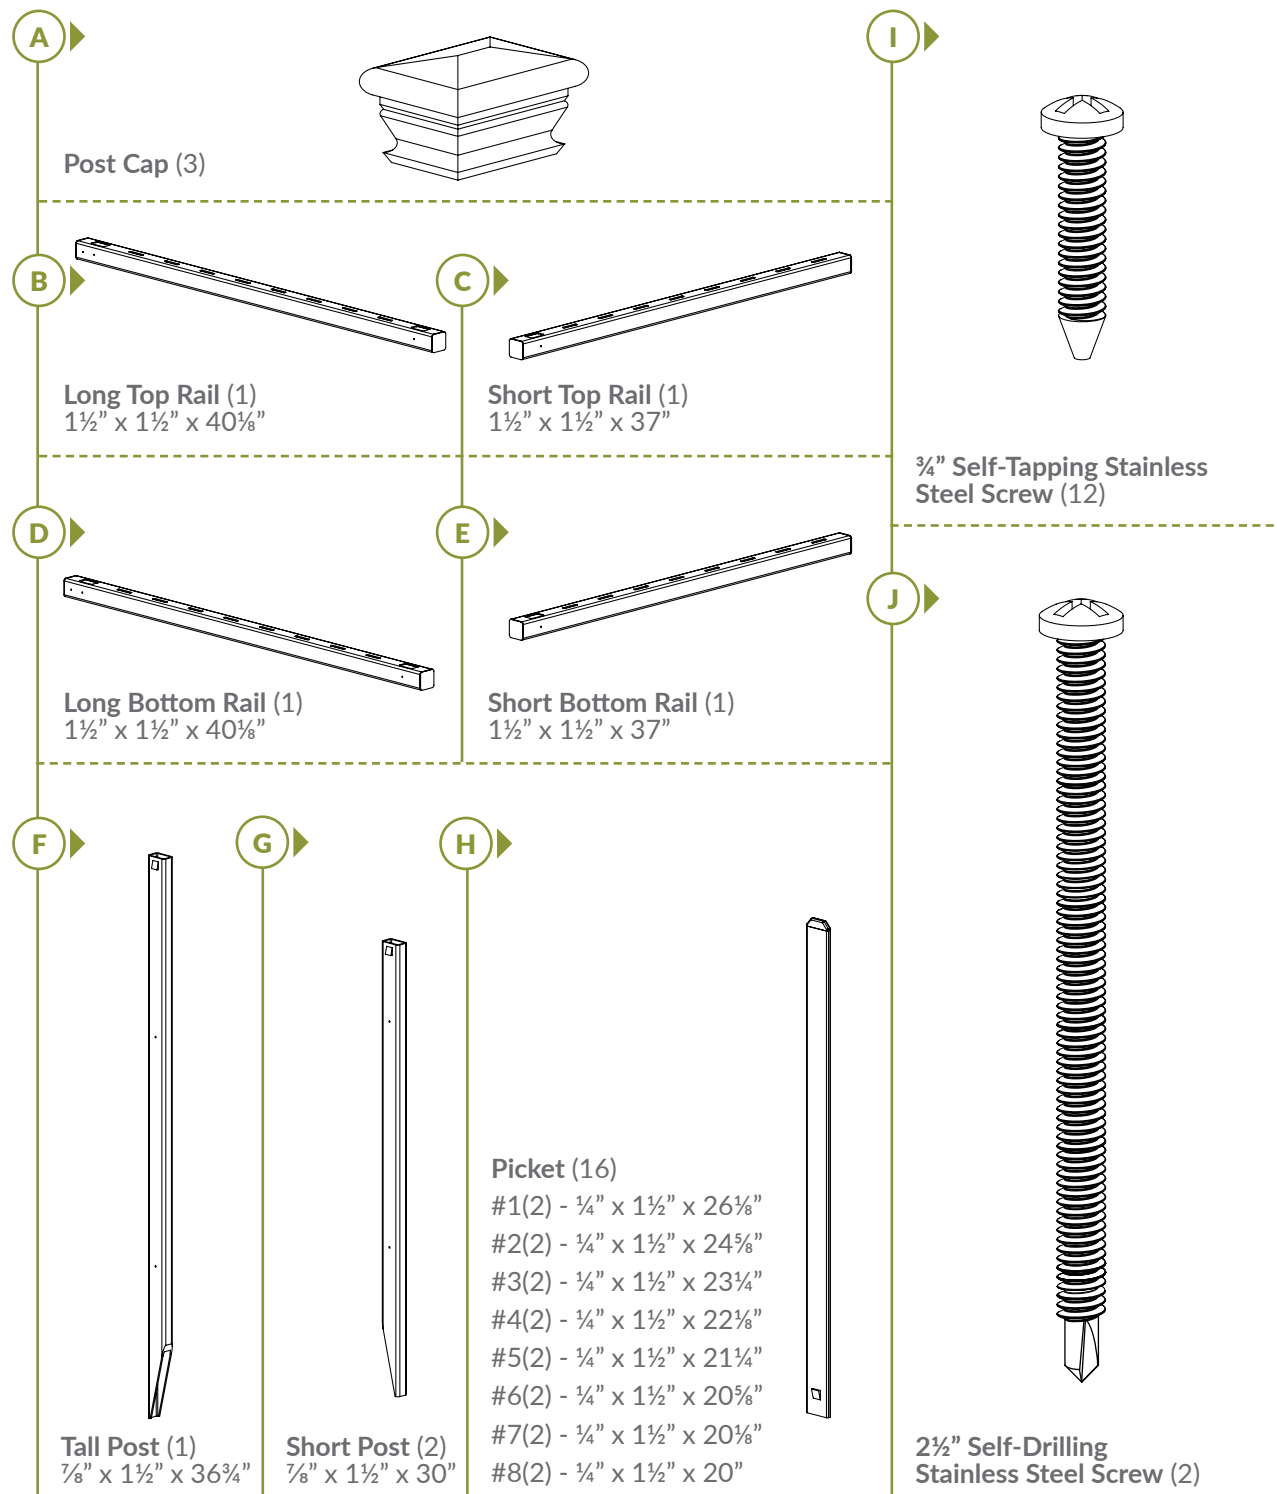

STEP 2: ASSEMBLE FIRST PANEL


STEP 2.1 ▶

- Position the Long Top Rail (B) and Long Bottom Rail (D) as illustrated. Slide a Short Post (G) and the Tall Post (F) down through the large routed holes in the long top rail and long bottom rail until the pre-drilled holes in the posts and the pre-drilled holes in the rails are aligned.

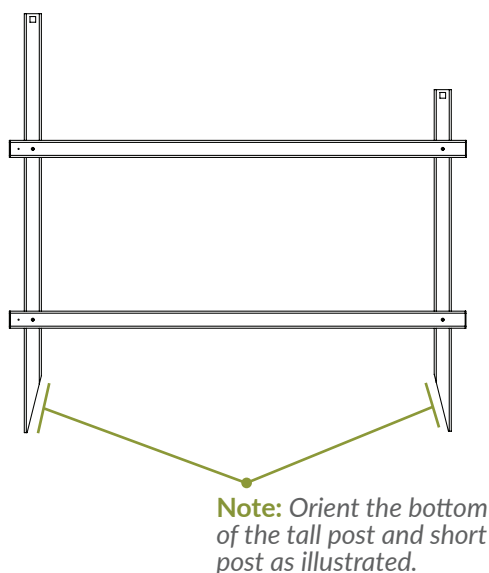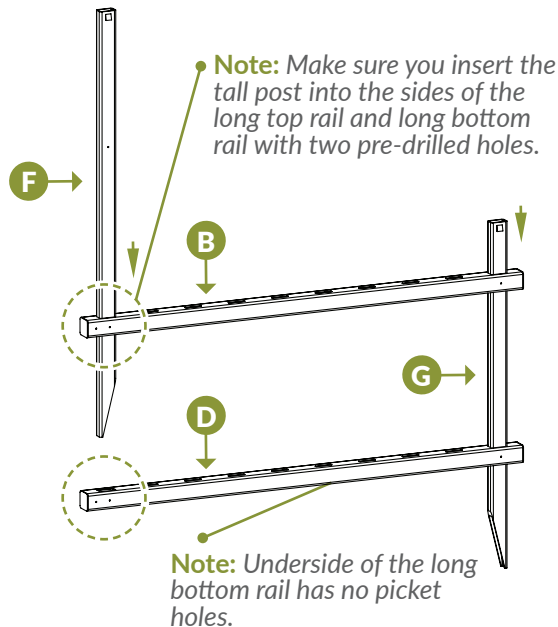

STEP 2.2 ▶

- Once all the pre-drilled holes are aligned, screw the long top rail and long bottom rail into both sides of the tall post and the short post with (8) $\frac{3}{4}$ " Self-Drilling Stainless Steel Screws (I).

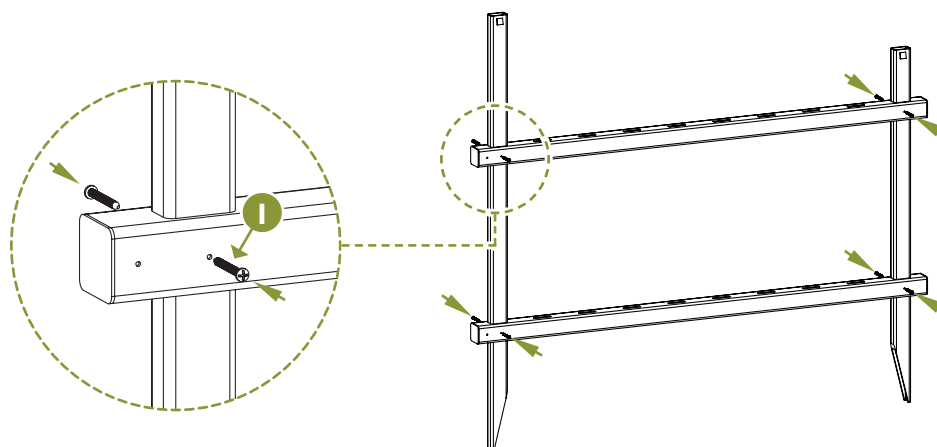


STEP 3: INSERT PICKETS

STEP 3.1 ▶

► Pickets (H) are stamped 1, 2, 3, 4, 5, 6, 7, and 8 to create a scallop pattern. Insert the pickets in the pattern illustrated.


Note: Once inserted, the pickets will lock into place. To remove the picket(s), gently insert a butter knife along the bottom of the picket as shown, and slowly pull up the picket(s).

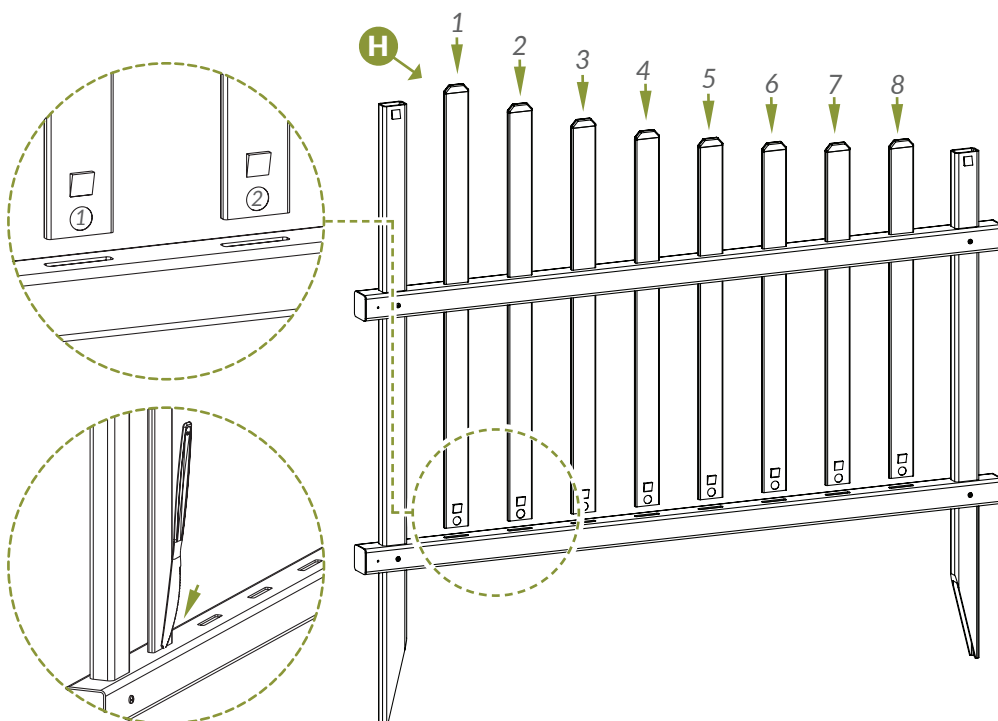

STEP 4: ASSEMBLE THE SECOND PANEL


STEP 4.1 ▶

► Position the Short Top Rail (C) and Short Bottom Rail (E) as illustrated. Slide a short post down through the large routed hole in the short top rail and short bottom rail until the pre-drilled holes in the posts and the pre-dilled holes in the rails are aligned.

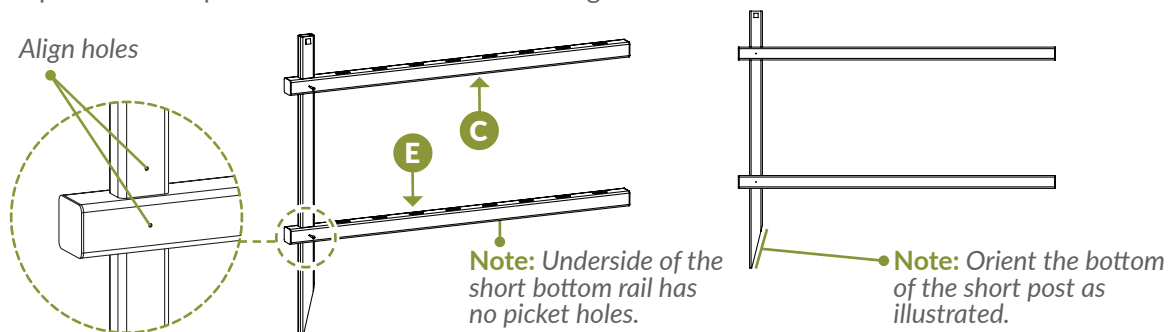


STEP 4.2

► Once all the pre-drilled holes are aligned, screw the short top rail and short bottom rail into both sides of the short post with (4) $\frac{3}{4}$ " self-drilling stainless steel screws.

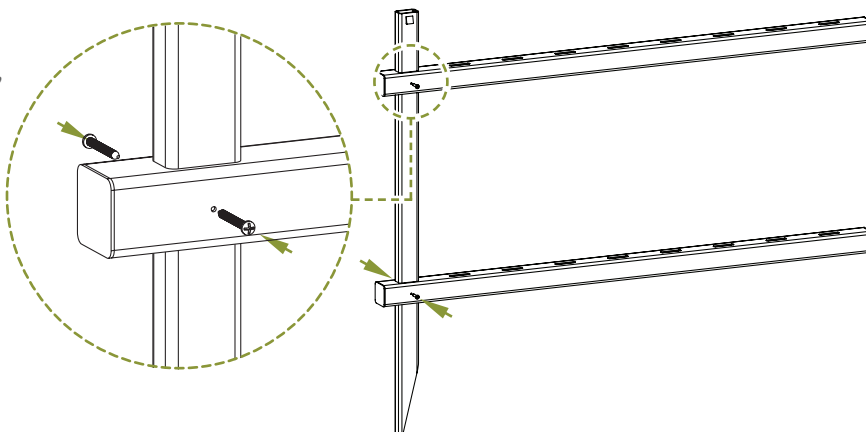**STEP 5: INSERT PICKETS INTO SECOND PANEL****STEP 5.1**


► Pickets are stamped 1, 2, 3, 4, 5, 6, 7, and 8 to create a scallop pattern. Insert the pickets in the pattern illustrated.

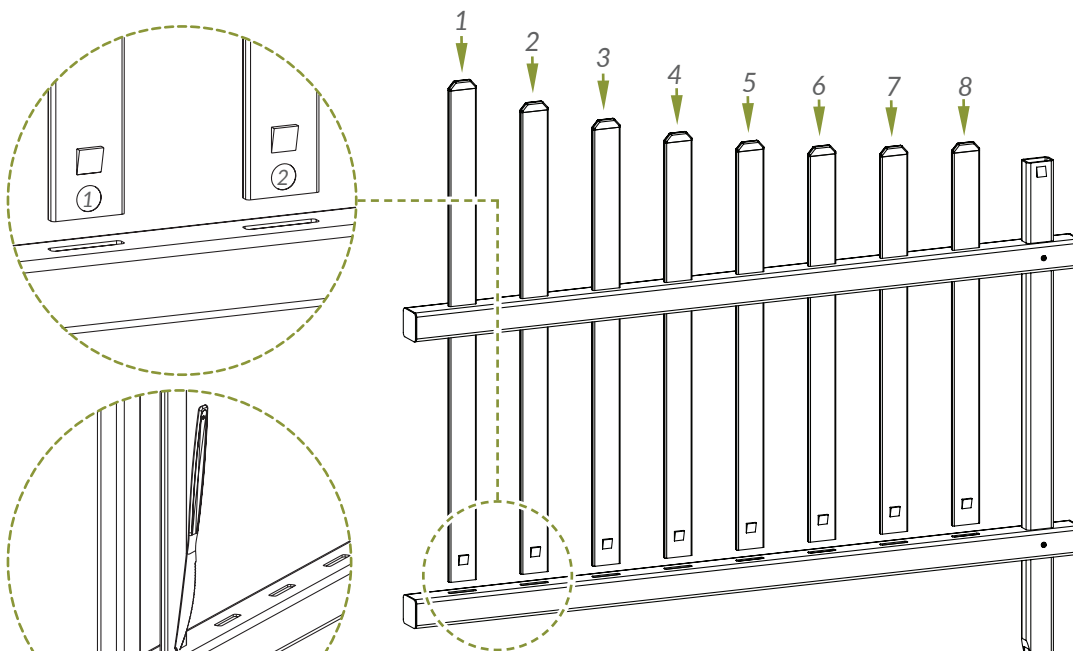

Note: Once inserted, the pickets will lock into place. To remove the picket(s), gently insert a butter knife along the bottom of the picket as shown and slowly pull up the picket(s).


STEP 6: FASTEN PANELS TOGETHER

STEP 6.1 ▶

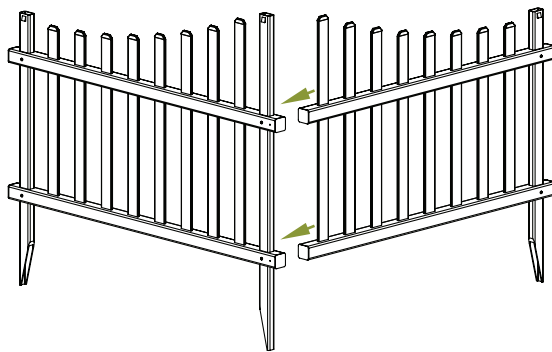


▶ Bring the two panels together as shown (you might need a helper).

STEP 6.2 ▶

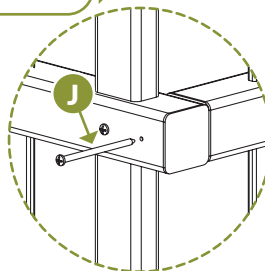


▶ Fasten the two panels together using the second pre-drilled holes in the long rails using (2) 2½" Self-Drilling Stainless Steel Screws (J).

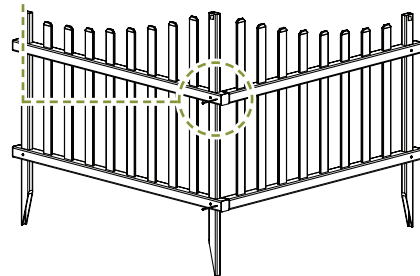

STEP 7: INSTALL FENCE INTO THE GROUND

STEP 7.1 ▶


▶ Move the fence to its final location, and identify the location of the posts.

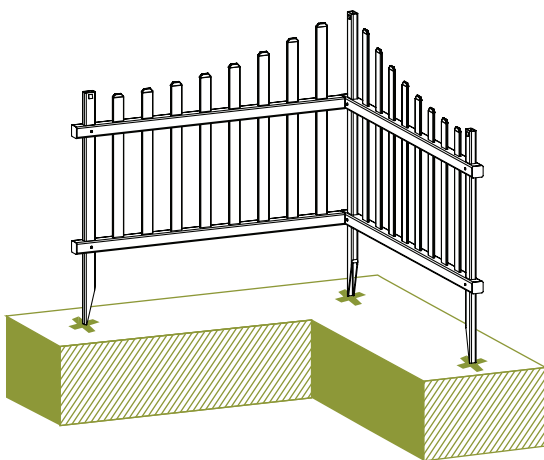

STEP 7.2 ▶

▶ Attempt to push the fence into the ground as illustrated.




Push down on the top of the posts with both hands.

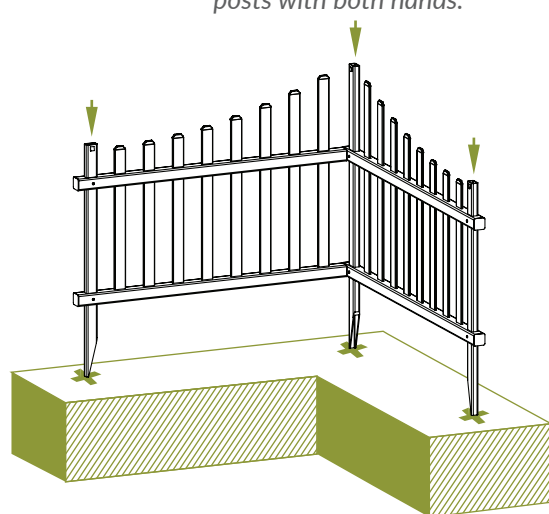

STEP 7.3 ▶


► **Optional in hard ground:** If your ground is too hard, or you have more than 3 or 4 panels to install, please consider these options:

1. Use a 1¼" diameter auger bit (commonly used for planting tulips) as illustrated (\$15-\$20 on Amazon.com).
2. Drill a hole about 12" to 16" deep at the desired location, and fill the holes with water as illustrated.
3. Push the fence posts into the holes.

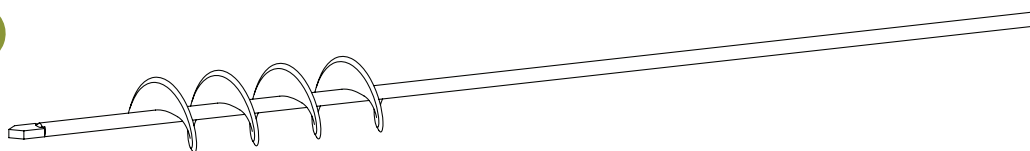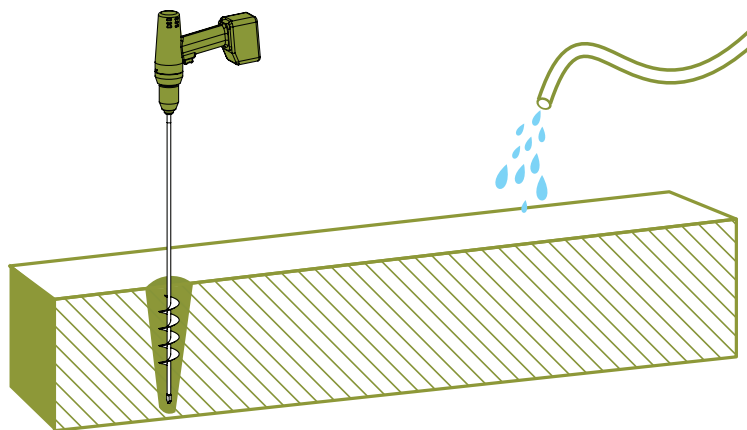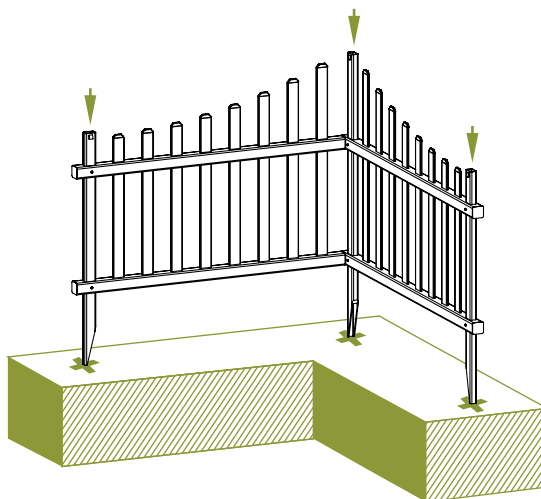
1**2****3**

STEP 7.4

1. Loosen the top 4" of the ground with a claw hammer as illustrated.
2. Add water to loosen soil.
3. Use a block of wood to protect the top of the posts, and gently hammer each post into the ground equally.

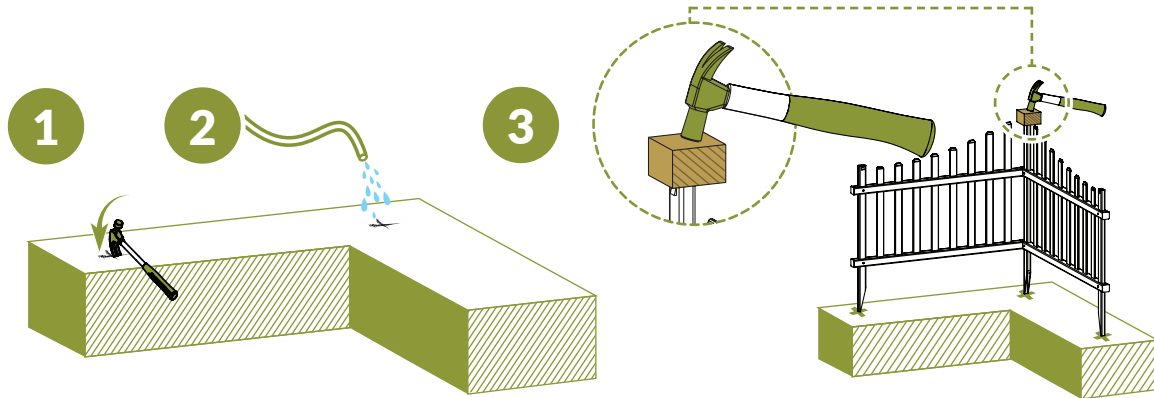**STEP 7.5**


- Level the assembled fence, and backfill and compact dirt around the base of the posts to strengthen the fence if needed.

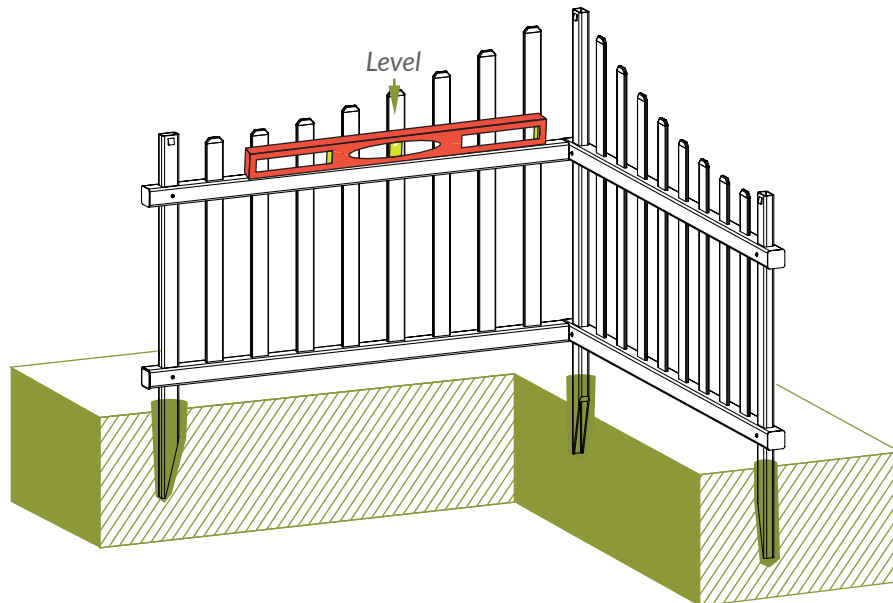


STEP 8: INSTALL POST CAPS

STEP 8.1 ▶

- ▶ Finish the assembly by pushing the Post Caps (A) down over the top of the posts as illustrated. The post caps will lock into place.

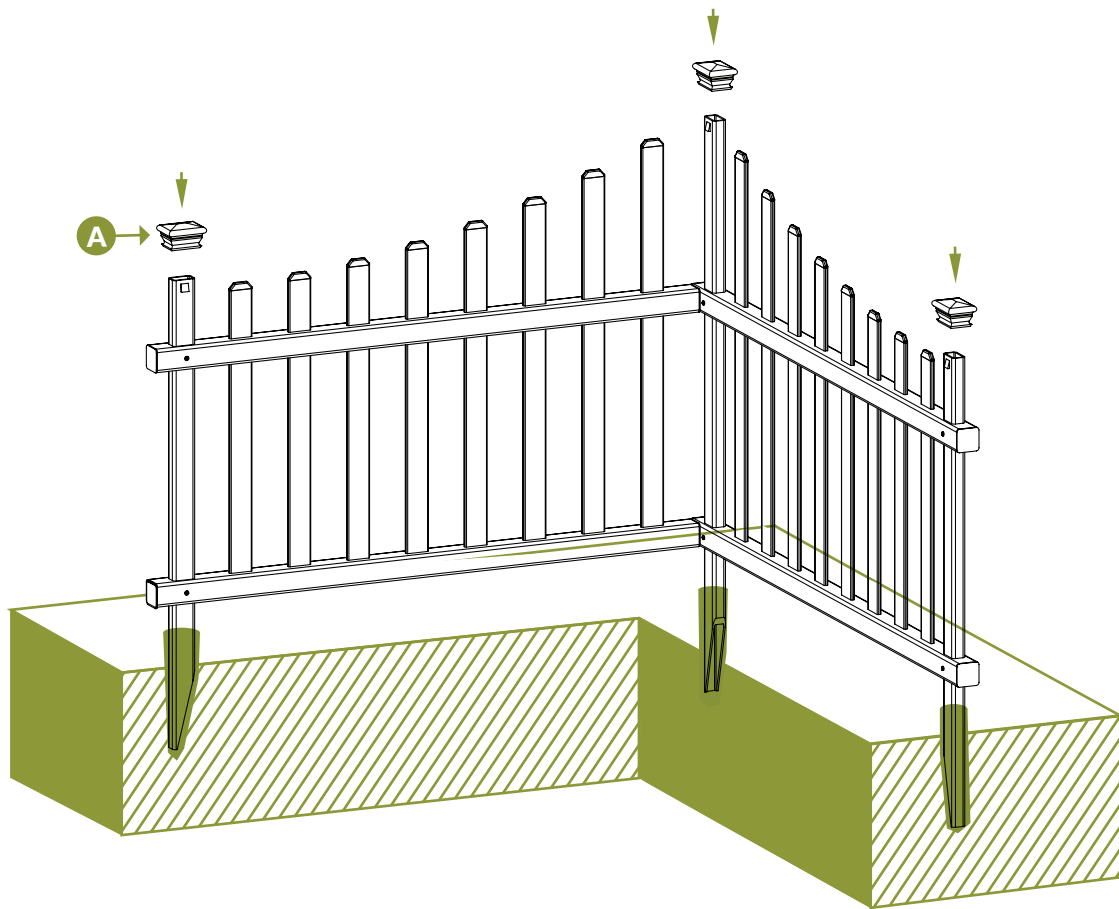

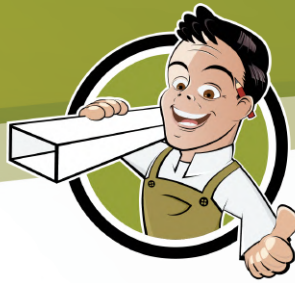

ZIPPITY

Easy Does It!



6935 Reames Rd. Ste. K.
Charlotte, NC 28216



support@zippity-outdoor.com

704-892-5222
877-234-6196



WWW.ZIPPITY-OUTDOOR.COM