

JONATHAN ADLER

FURNITURE


TALITHA ARMOIRE

Assembly Instructions

STEP 1:


OPEN TALITHA ARMOIRE AND HANDLES
PACKED CARTON SAFELY.

ARMOIRE AND HANDLES ARE MARKED WITH **A & B** STICKERS.

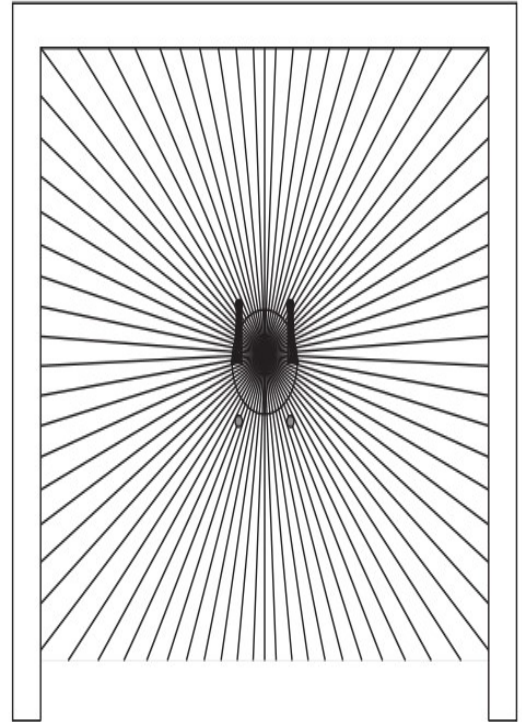



STEP 2:

REMOVE D NUT FROM SCREW BEFORE FIXING.

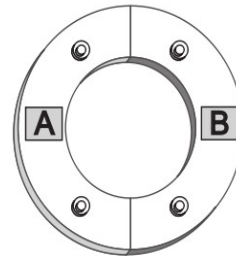

STEP 3:

ADJUST HANDLES INTO PRE-DRILLED HOLE
OF SHUTTERS WITH THEIR CORRESPONDING MARKING
AND FIX/TIGHTEN THEM WITH **D NUT** FROM INSIDE.

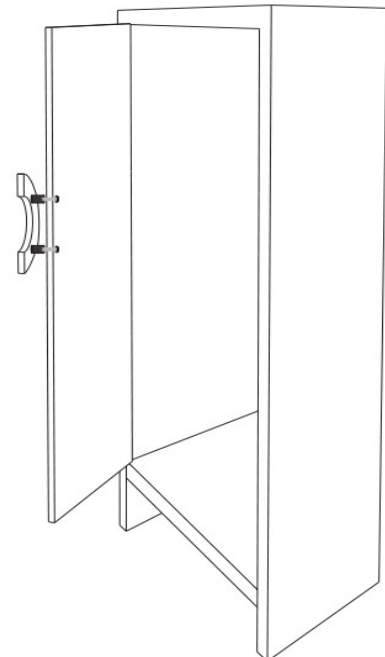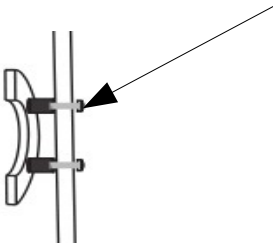

NOW YOUR TALITHA ARMOIRE IS READY TO USE..