


Model: 362225 362249 362243 365537 365562
 362231 362261 365524 365548 365565
 362237 362273 365532 365559

Countertop

Step 1 : Apply adhesive caulking around the topside of rim near the edge, Carefully raise sink in place, align, and press firmly

See Figure 1.


Figure 1.

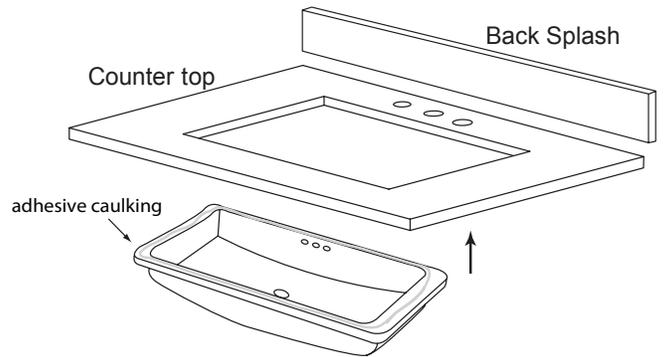

Step 2 : Attach 4 undermount-clips to hold lavatory in place

See Figure 2.

Figure 2.

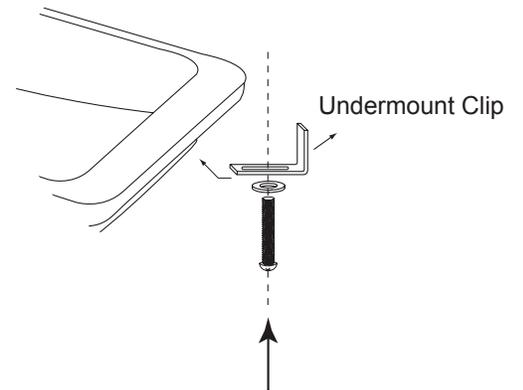

Step 3 : Secure top & back splash to cabinet by using adhesive caulk

See Figure 3.

Figure 3.

