




Assembly Intruction

INTRUCTION DE MONTAGE
MONTAGEANLEITUNG
SAMLEVEJLEDNING


NEED ASSEMBLY ASSISTANCE? CALL US AT 866-814-8325

1

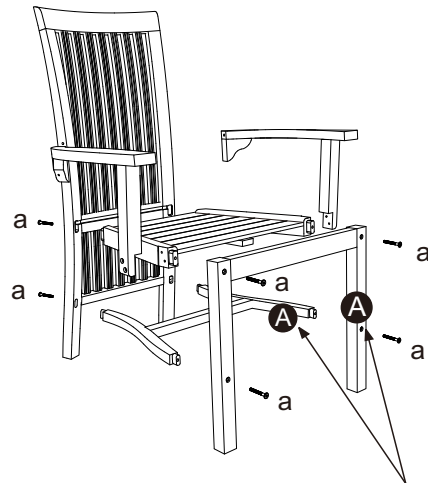


**MAKE SURE THE LETTERS
MATCH BEFORE ASSEMBLING**


3

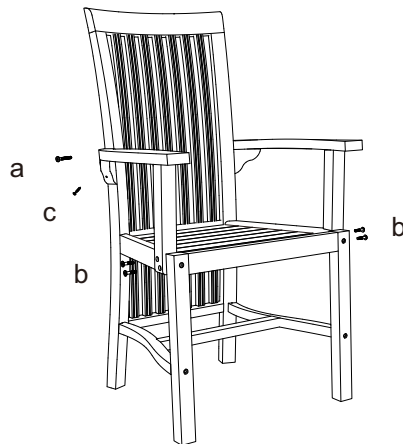

2

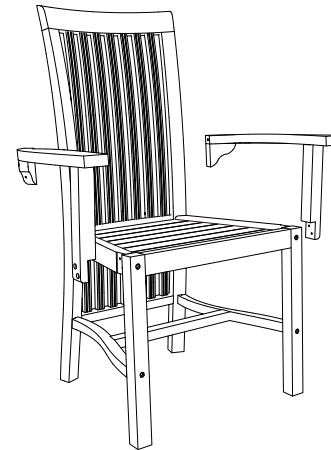

4

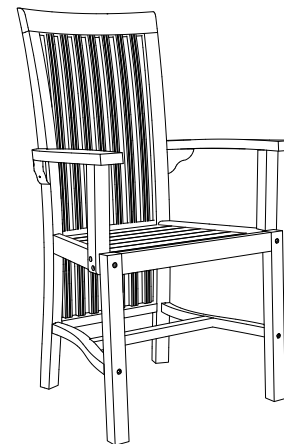


Code

KBA1AC

Hardware

a




BOLT 2' (10 pcs)

b



BOLT 1,2' (4 pcs)

c



SCREW 1,2' (2 pcs)

Tool



Socket Wrench 4mm

Total Section

6 Section

Make sure to use Gorilla Glue (Included)
on all wood joints before assembly