












# ASSEMBLY INSTRUCTION FOR ACME FURNITURE

## MODEL# LV02119

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may come loose inside the carton during shipment. Identify and count all parts and metal hardware. Compare with the part list to be sure all parts are present, If any part(s) are missing or damage, please contact your local furniture dealer. For efficient and speedy service, please indicate the model number and code letter of part(s) needed.

**\*Do not fully tighten screws until fully assembled**

COMPONENT PART			
NO	PART	DECS	QTY
A		SEAT CUSHION	1pc
B		BASE	1pc
C		BACK	1pc
D		ARMREST	1pc
E		ARMREST	1pc
F		PILLOW	4pcs
G		REAR LEGS	2pcs
H		MIDDLELEG	1pc



HARDWARE REQUIRED			
NO	HARDWARE	DECS	QTY
1		BOLT ø8*70mm	8pcs
2		FLAT WASHER ø20mm	8pcs
3		ALLEN WRENCH 65*25mm	1pc

Attention:  
Some number parts listed on the instruction sheet may not be in parts bag as they may be assembled. Carefully check parts and packing materials prior to ordering replacements. \*\*\*

## HOW TO ASSEMBLE



### STEP 1

Attach the legs per the diagram.

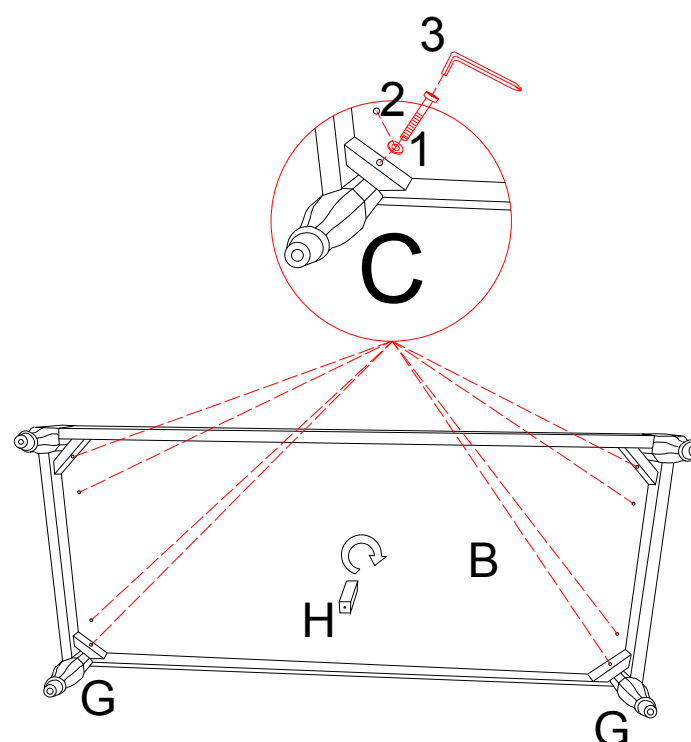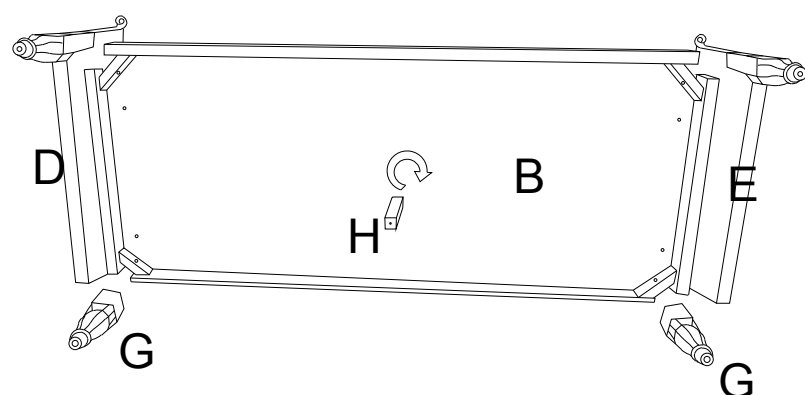


### STEP 2

Please hang up the bracket on the backrest .  
Into the bracket on the arm. Then Set up the seat cushion .

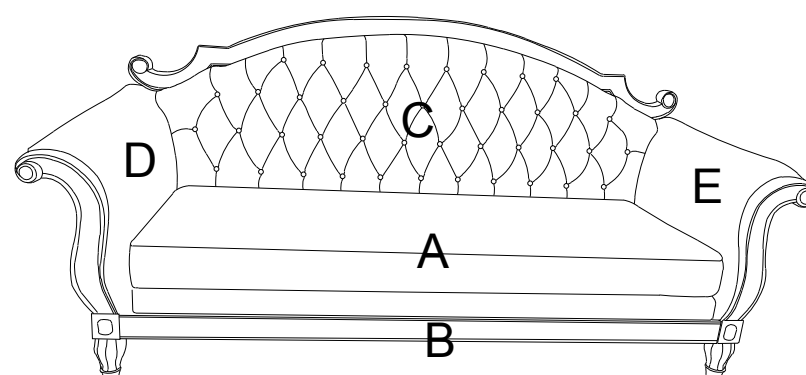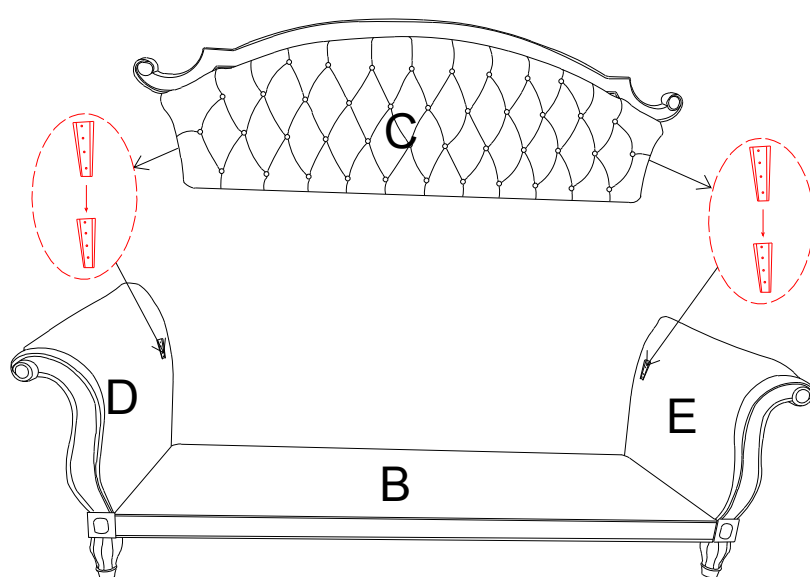

### STEP 3

Set up the pillows.

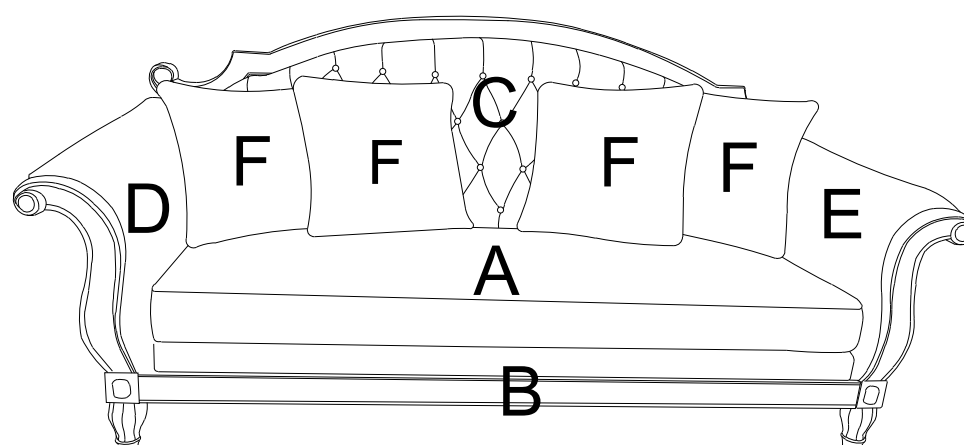

Caution: Over tightening screw or bolts may cause damage.

It is suggested that two people work together for this assembly process.