

ASSEMBLY INSTRUCTIONS



CAUTION:

THIS ITEM IS MADE OF LAMINATED PARTICLE BOARD AND MEDIUM DENSITY FIBRE BOARD TO BE ASSEMBLED ON A DRY,SOFT,SMOOTH AND CLEAN SURFACE. DO NOT USE DETERGENT OR CHEMICAL. AVOID DAMP AND DIRECT SUNLIGHT.


STEP 1 CHECK YOUR HARDWARE

	SCREW M3 X 20	4 PCS
	CORNER BLOCK	4 PCS
	SCREW #9 X 1 1/2"	12 PCS
	WOOD DOWEL M6 X 25	12 PCS
	RETRACTABLE DOOR STUD WITH SPRING	4 PCS
	MAGNET WITH LEG	2 PCS
	MAGNET PLATE	2 PCS
	SCREW M3.5 X 12	4 PCS
	PAN HEAD SCREW #6 X 20	2 PCS
	KNOB	2 PCS
	STICKER	12 PCS


TOOLS REQUIRED:

	HAMMER		SCREW DRIVER
--	--------	---	--------------


STEP 2

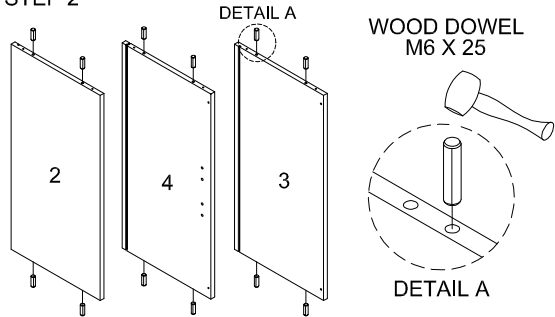


STEP 3

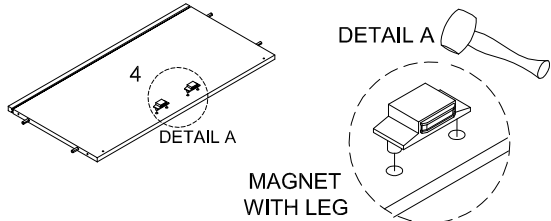


STEP 4

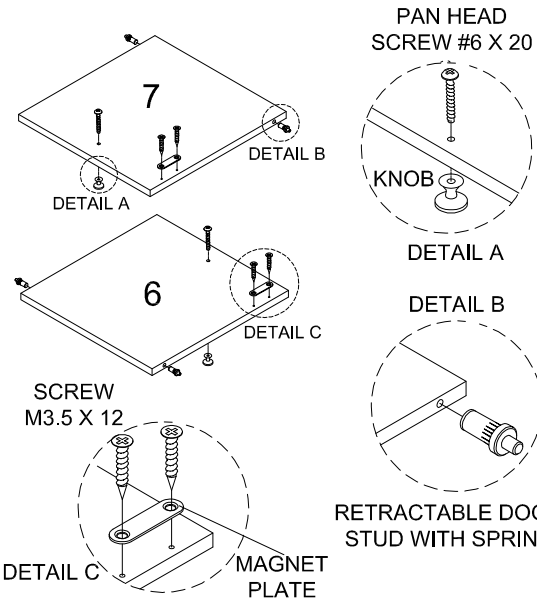


STEP 5

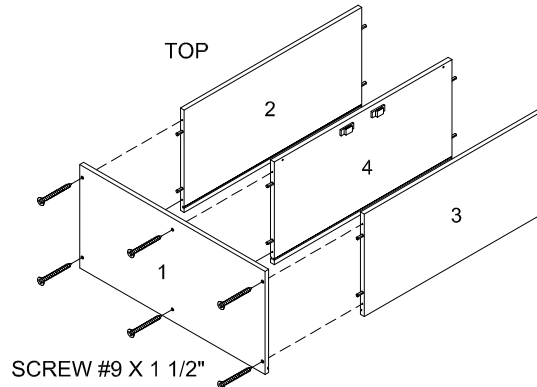


STEP 6

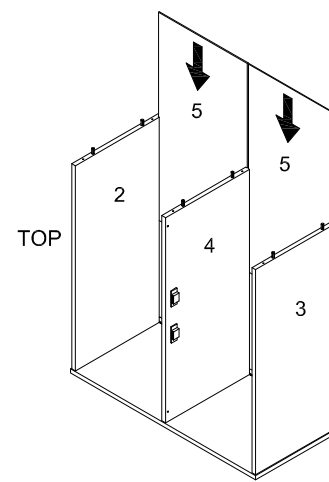


STEP 7

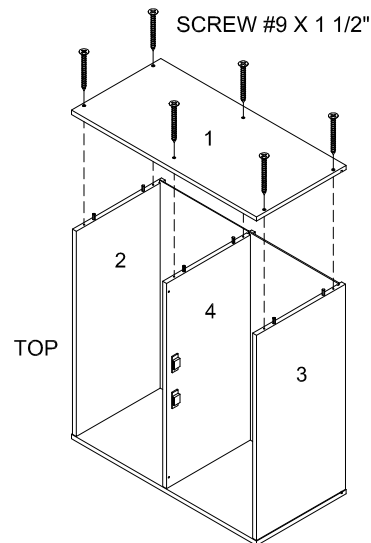

STEP 8

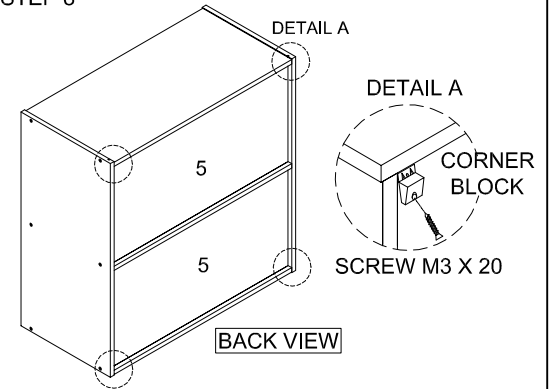

STEP 9

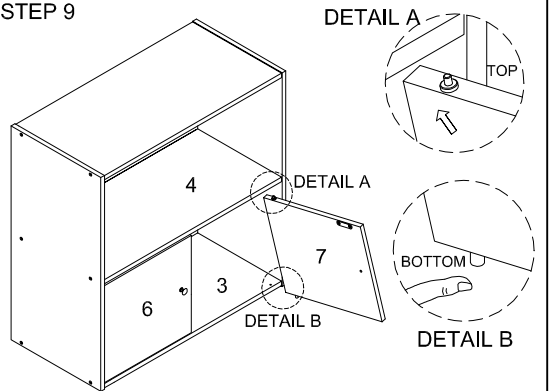

STEP 10

