



INSTALLATION GUIDE

Affordable Curved Arm RLM R-CA19






ASSEMBLY INSTRUCTIONS

For R-CA19 Curved Arm



CAUTION: To avoid possible electric shock, make sure the power is shut off from the main electrical panel.

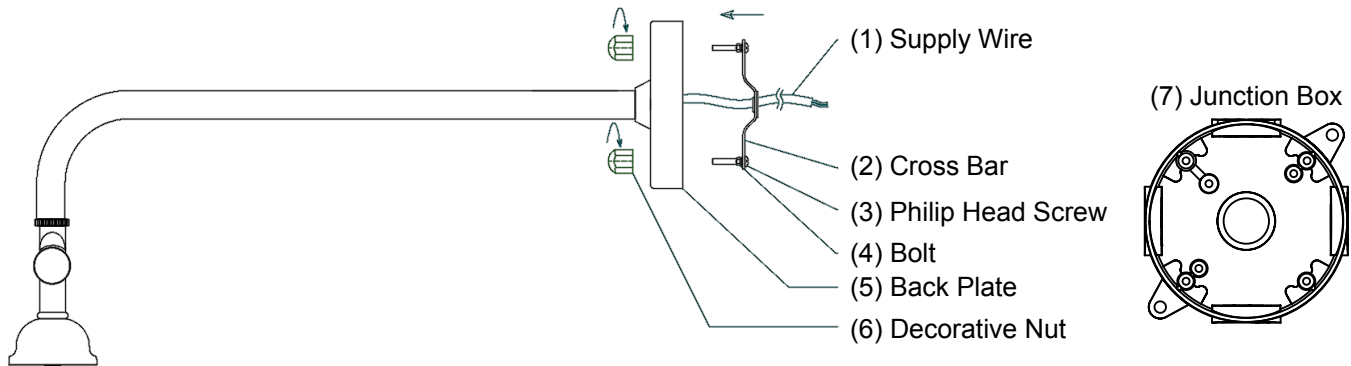

PART 1 - Mounting The Gooseneck Arm W/ Mounting Plate To Junction Box

PART 1: Mounting The Curved Arm, And Back Plate Onto The Junction Box

1) Pull the wires and the house ground wire out from the (7) Junction Box through the larger center hole in the (2) Cross Bar. Attach (2) Cross Bar to the (7) Junction Box using the mounting screws provided in separate bag.

2) Place the (5) Back Plate over the (7) Junction Box and onto the (3) Philip Head Screws and adjust the screws until they protrude out an appropriate height from the (5) Back Plate to allow the (6) Decorative Nuts to hold the (5) Back Plate tightly against the wall. Remove the (5) Back Plate and secure the position of the (3) Philip Head Screws with the (4) Bolt against the (2) Cross Bar.

3) Make the wiring connections: Using the ground screw, fasten the house ground wire from the center hole of (7) Junction Box and the fixture ground wire from the (2) Cross Bar, as shown.

4) Connect the white (1) Supply Wire to the white fixture wire using a wire connector.

5) Connect the black supply wire to the black fixture wire using another connector. Carefully tuck all wiring back into the (7) Junction Box making sure that there are no unexposed/insulate wires.


4) Place the (5) Back Plate over the (7) Junction Box and onto the (3) Philip Head Screw, which now should protrude through the (5) Back Plate and secure in place using the (6) Decorative Nuts. The installation of the Back Plate onto the Junction Box is now finished!

ASSEMBLY INSTRUCTIONS

For R-CA19 Curved Arm



CAUTION: To avoid possible electric shock, make sure the power is shut off from the main electrical panel.

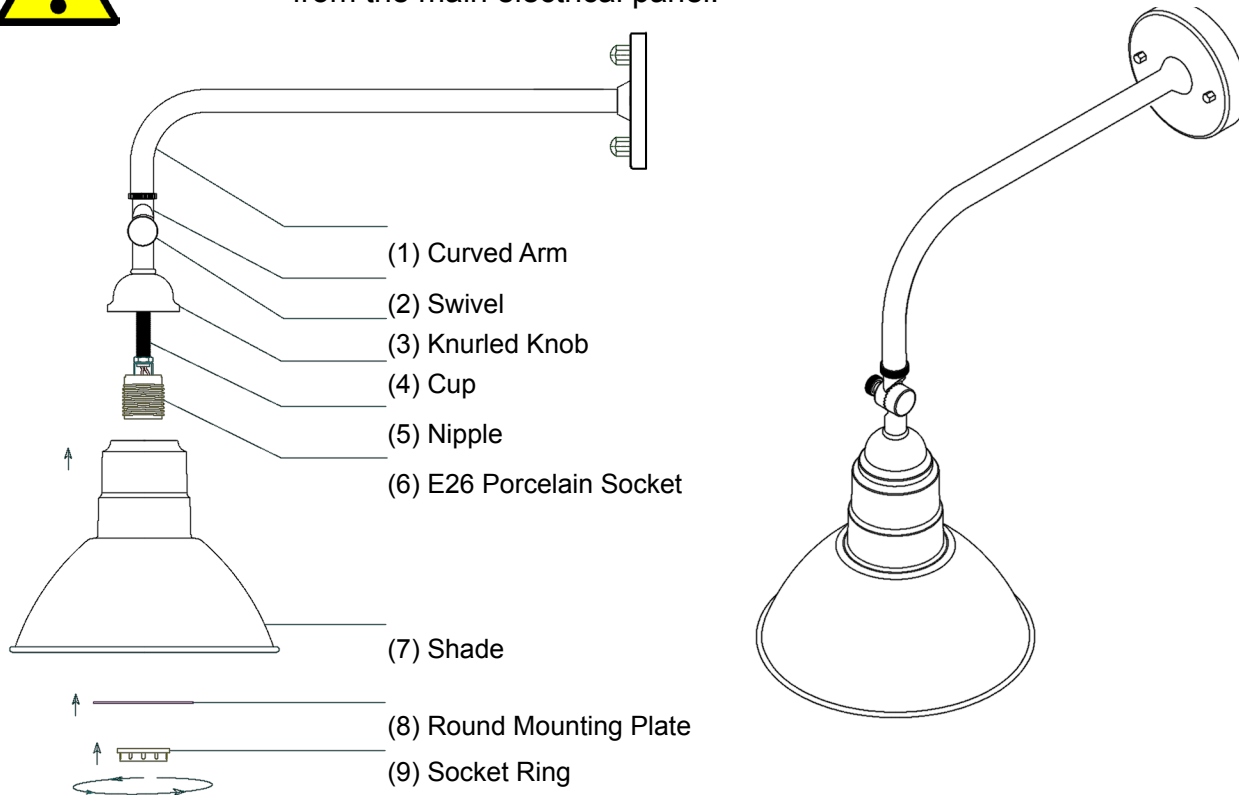

PART 2 - Mounting The Shade Onto The Gooseneck Arm

- 1) Unscrew the (9) Socket Ring and pass the (7) Shade through the (6) E26 Porcelain Socket
- 2) Add the (8) Round Mounting Plate right after the (7) Shade and finally fasten the (9) Socket Ring
- 3) You may now insert the bulb and tight it onto the (6) E26 Porcelain Socket
- 4) Adjust the (7) Shade by using the (2) Swivel

The installation of your RLM fixture is now finished!

Customer Support

If you may have any questions, or concerns, please call or email our lighting specialists at:



+1 (813) 649-8899



sales@htm-lighting.com