
















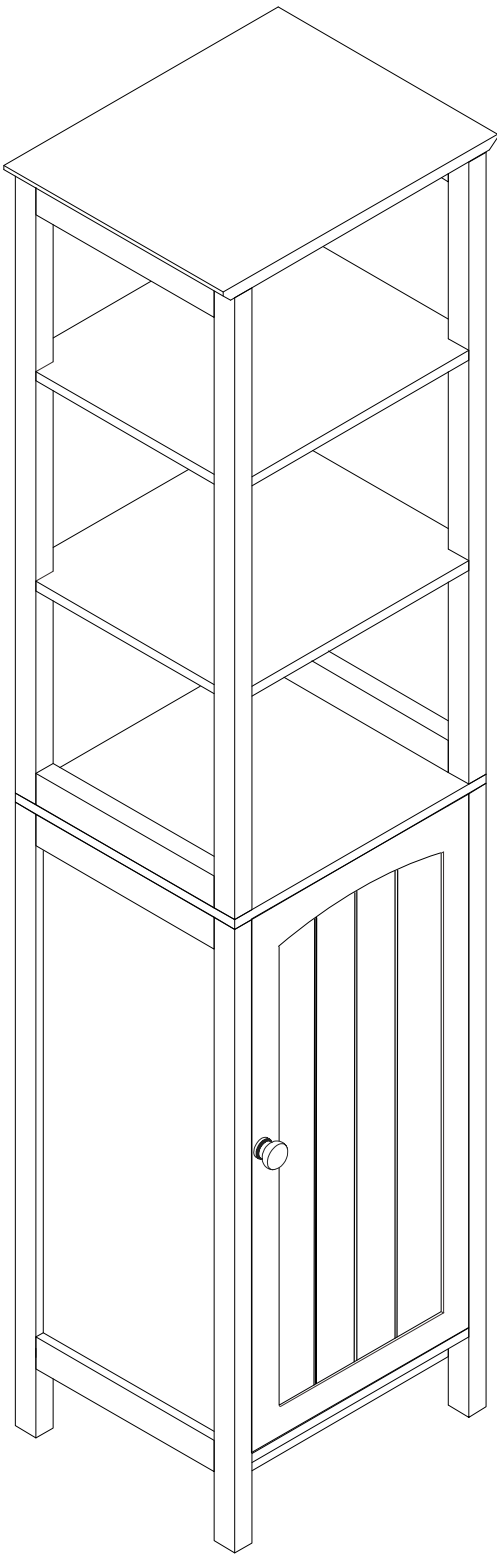


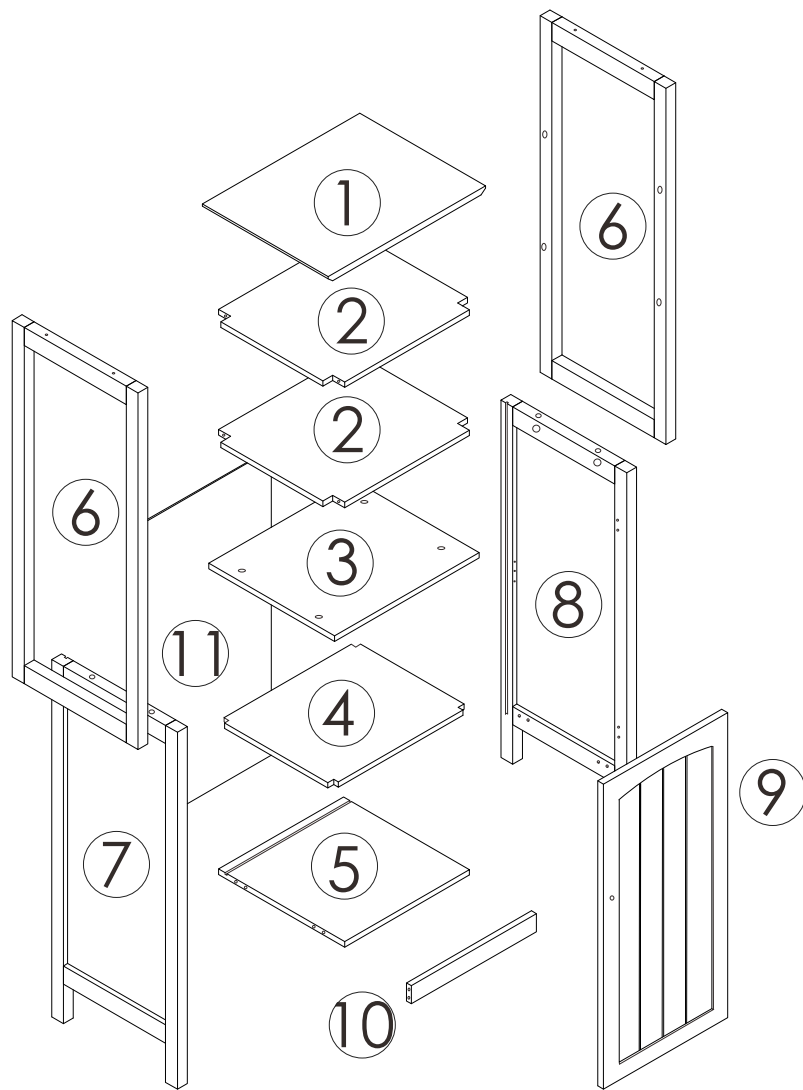


WI 11336




Parts List



A  18PCS	B  18PCS	C  6PCS	D  1PC	E  9PCS
F  1PC	G  1PC	H  2PCS	I  1PC	J  4PCS
K  5PCS	L  1PC	M  1PC	N  1PC	O  2PCS
P  2PCS	Q  4PCS	R  4PCS	S  4PCS	

Assembly Steps


STEP 1

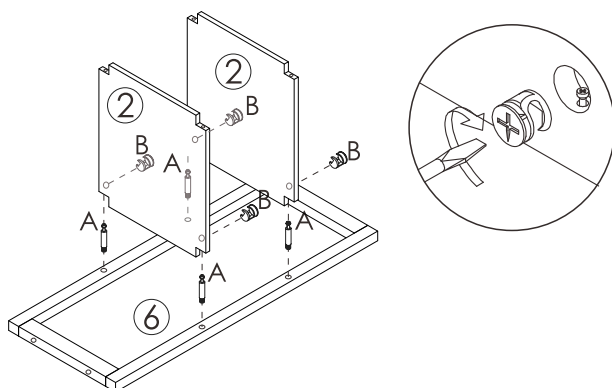

	A x4PCS
	B x4PCS

Fix hardware A to Part 6,
and then fix Part 2 to Part
6 with hardware B.


STEP 2

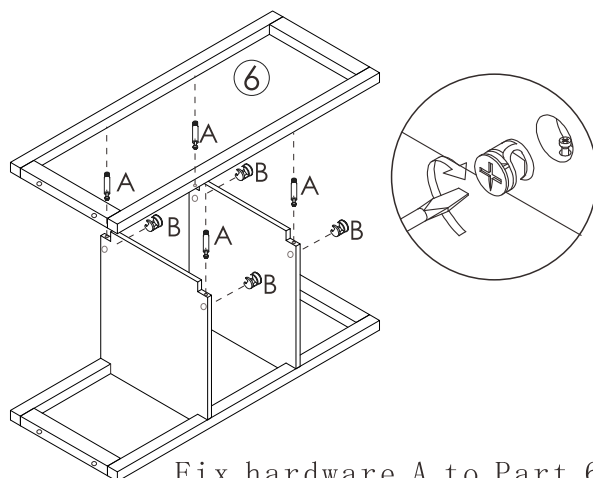

	A x4PCS
	B x4PCS

Fix hardware A to Part 6,
and then fix Part 2 to Part
6 with hardware B.


STEP 3

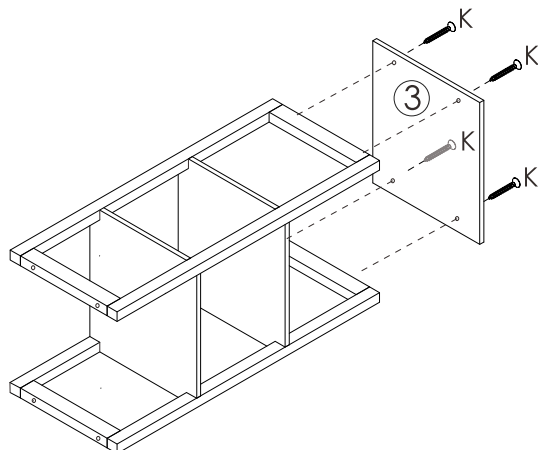

	K x4PCS
--	---------

Fix Part 3 to the bottom
of Part 6 with screw K.


STEP 4

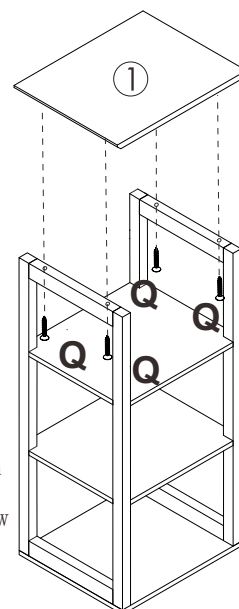

	Q x4PCS
--	---------

Fix Part 1 to the frame with
hardware Q. Please pay
attention to align the screw
hole on Part 1 and Part 6.


STEP 5

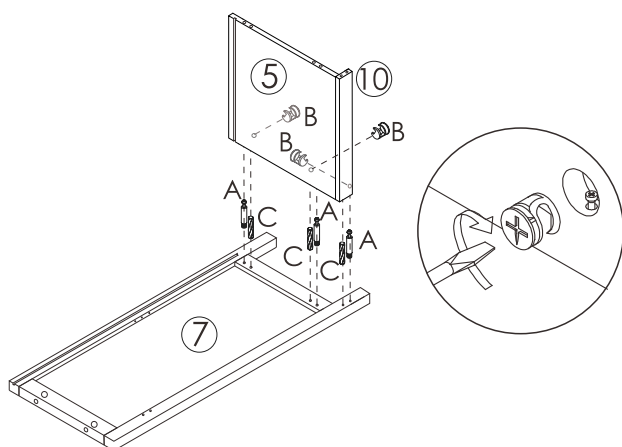

	A x3PCS
	B x3PCS
	C x3PCS

Fix hardware A and C to Part 7,
and then connect Part 5 and 10
to part 7 with hardware B.

STEP 6

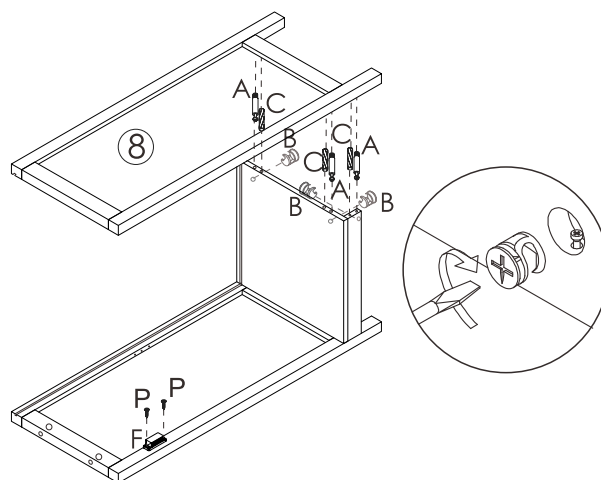


	A x3PCS
	B x3PCS
	C x3PCS

Fix hardware A and C to Part 8,
and then connect Part 5 and 10
to part 8 with hardware B.
Fix hardware F to Part 7
with screw P.

Assembly Steps


STEP 7

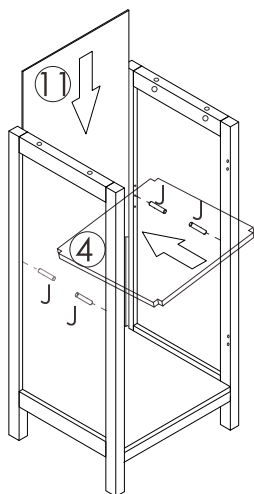


Put Part 11 to the groove of Part 7 and 8, then fix hardware J to the screw hole and put Part 4 on the frame.

Connect upper part to lower part with hardware A and B.

	A x4PCS
	B x4PCS
	J x4PCS

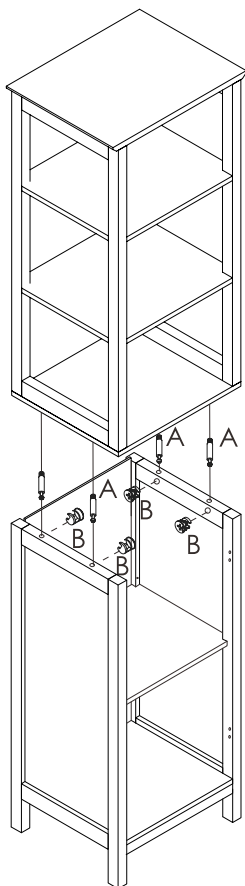


STEP 8

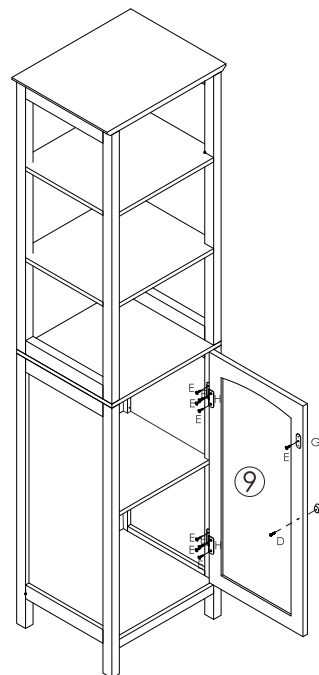

Fix Part 9 to Part 8 with screw E, and fix hardware G to Part 9 with screw D.

	D x1PC		I x1PC
	E x9PCS		H x2PCS
	G x1PC		


STEP 9

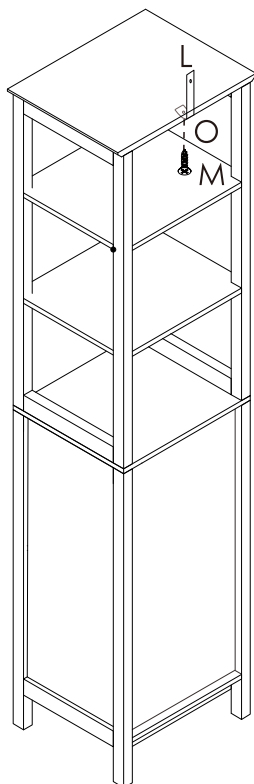

	O x1PC
	L x1PC
	M x1PC

Fix hardware L to Part 1 with screw O and M.


STEP 10

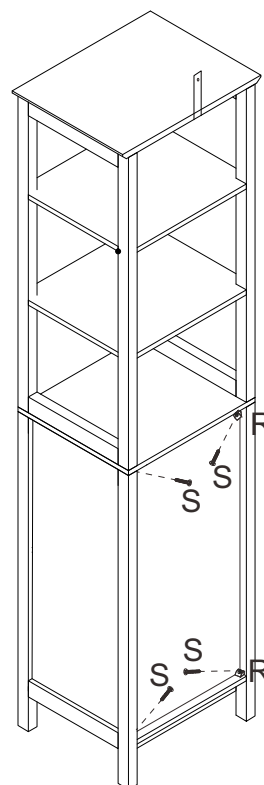




	R x4PC
	S x4PC

Fix hardware R to back panel with screw S to stabilize whole cabinet

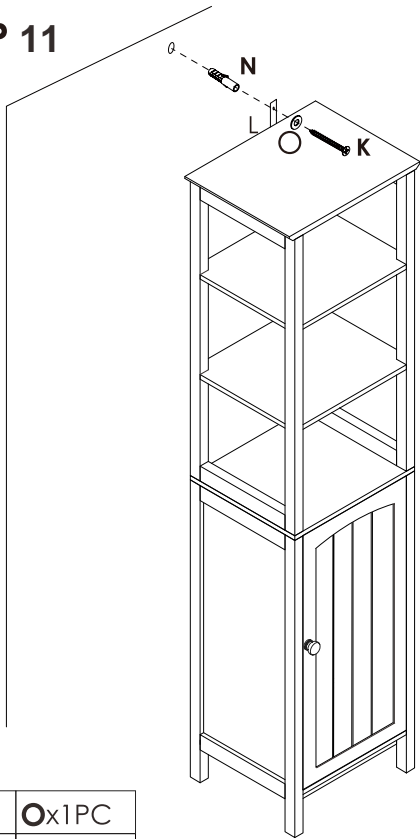STEP 11



	O x1PC
	K x1PC
	N x1PC

Fix hardware N to the wall,
and fix hardware L to N with
screw O and K.