


MIRRORS BY DW

SIZE GUIDE & DESIGN TIPS

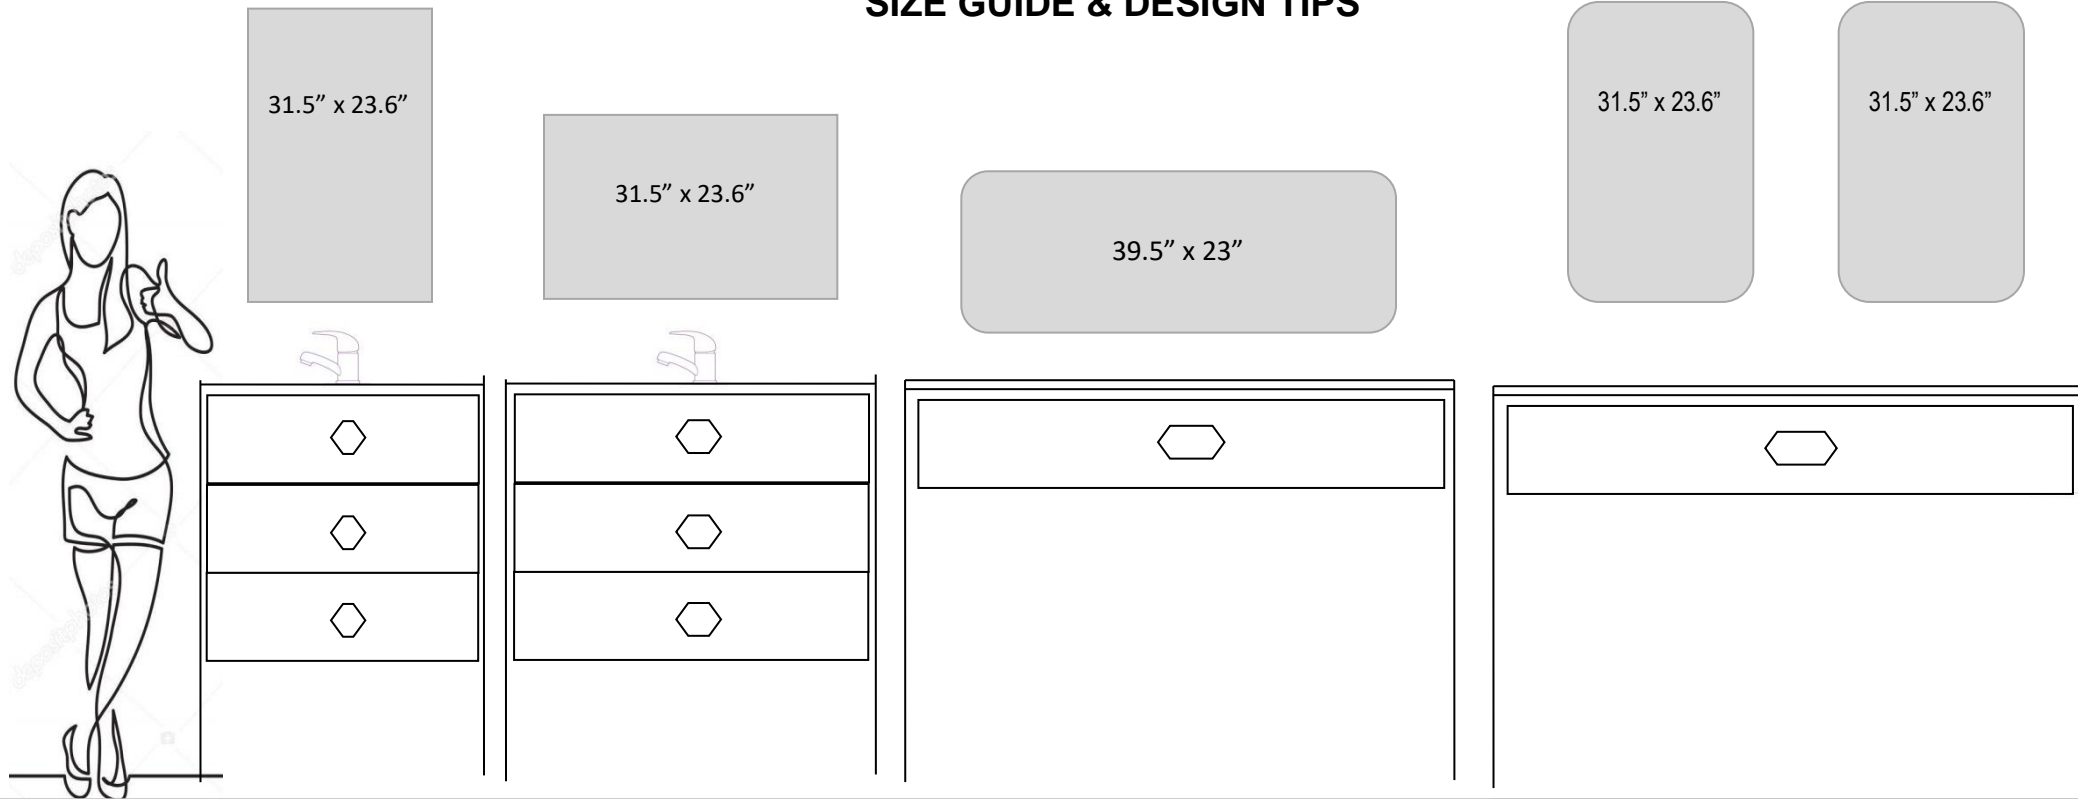

INTERIOR DESIGNER TIPS

- ⚡ When placing a mirror above a vanity, console table, arm chair or fire place - hang your mirror 6" – 8" above the visual line. In bathrooms this will protect your mirror from water splashes
 - ⚡ Choose a mirror that is 1"-2" shorter than the width of the countertop of your bathroom vanity
 - ⚡ Make sure the mirror is **tall enough** so your head doesn't get cut off when you look into it
 - ⚡ When hanging above a nightstand, center the mirror above the night stand
 - ⚡ When hanging on a blank wall, place it so the vertical center is at eye level- usually 60" from the floor
 - ⚡ Hang mirrors with a friend so you can 'eyeball' your placement
 - ⚡ ADA COMPLIANT MIRRORS – Just make the bottom edge of the reflective surface is no higher than 40" off the ground
- ⚡ *All rectangular mirrors featured can be hung horizontally and vertically unless otherwise noted*

FEATURED RECTANGLES MIRRORS:

- ⚡ Measures 31.5" X 23.6":
 - SSM1058 Scallop Edge
 - SSM1102 Double Bevel
 - SSM1125 V-Groove
 - SSM114 Shelf
 - SSM1140 U Groove
 - SSM216 1" Bevel
 - SSM222 0.5" Bevel
 - SSM3001 Scallop Edge
- ⚡ Measures 39.5" X 23"
 - SSM2436 1" Bevel
- ⚡ Measures 39.5" x 13.75":
 - SSM1067 Polished Edge